


Service Manual

DPS15 Bag Gripper | Installation Instructions

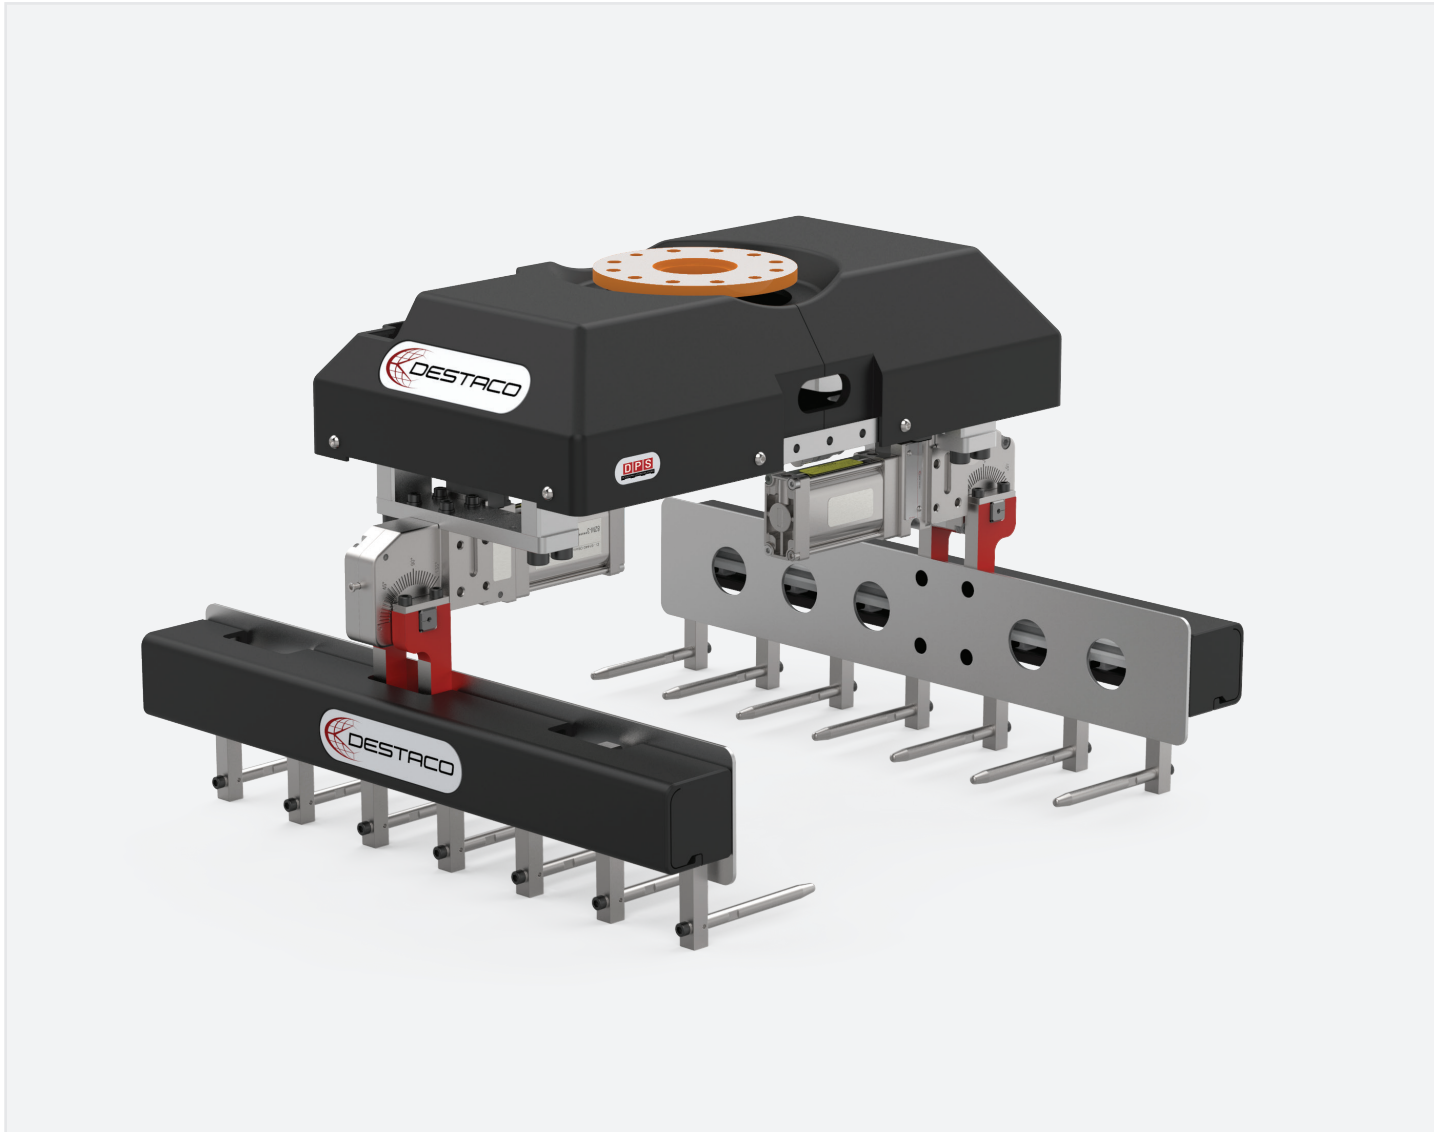

WARNING: This is a controlled document. It is your responsibility to deliver this information to the end user of the DESTACO product. Failure to deliver this could result in your liability for injury to the user or damage to the machine. For copies of this manual, call your Customer Service Representative at 1.248.836.6700

Contents

Contents	1
Personal Protective Equipment (PPE)	2
Required tools.....	3
1. DESTACO PALLETIZING SYSTEM (DPS): BUILD SKU & ORDERABLE KITS	4
2. DPS15-1P-XX: 15kg payload	5
3. ROBOT STAND OFF	15
4. CONTROL UNITS	17
5. PNEUMATIC STABILIZER OPTION	21
6. SLIP SHEET OPTION	23
7. LED LIGHT UNIT	26
8. CONTROL UNIT C1 SCHEMATIC (BASE MODEL).....	27
9. CONTROL UNIT C2 SCHEMATIC (BASE MODEL).....	28
Troubleshooting Problem:	29

DPS15 BAG GRIPPER

Bag Grippers | Assembly Instruction

HAZARD SYMBOLS	
SYMBOL	DEFINITION
 CAUTION	Indicates a situation which, if not avoided, could result in damage to the <u>unit</u> , equipment, or environment.
 WARNING	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

Personal Protective Equipment (PPE)

The personal protective equipment (PPE) described below must be provided by the unit owner and be worn by the responsible operating personnel when working with the unit.

Wear protective gloves



Wear safety shoes



Wear ear protectors



Wear a safety helmet



Wear safety goggle



Electric Shock Hazard



DPS15 BAG GRIPPER

Bag Grippers | Assembly Instruction

Required tools

Straight Edge



Metric Allen key set



Torque wrench



Socket wrench set (sockets & Metric Allen key)



Ratchet



Snap ring pliers



Mallet hammer




Thread Tape



DPS15 BAG GRIPPER

Bag Grippers | Assembly Instruction


1. DESTACO PALLETIZING SYSTEM (DPS): BUILD SKU & ORDERABLE KITS

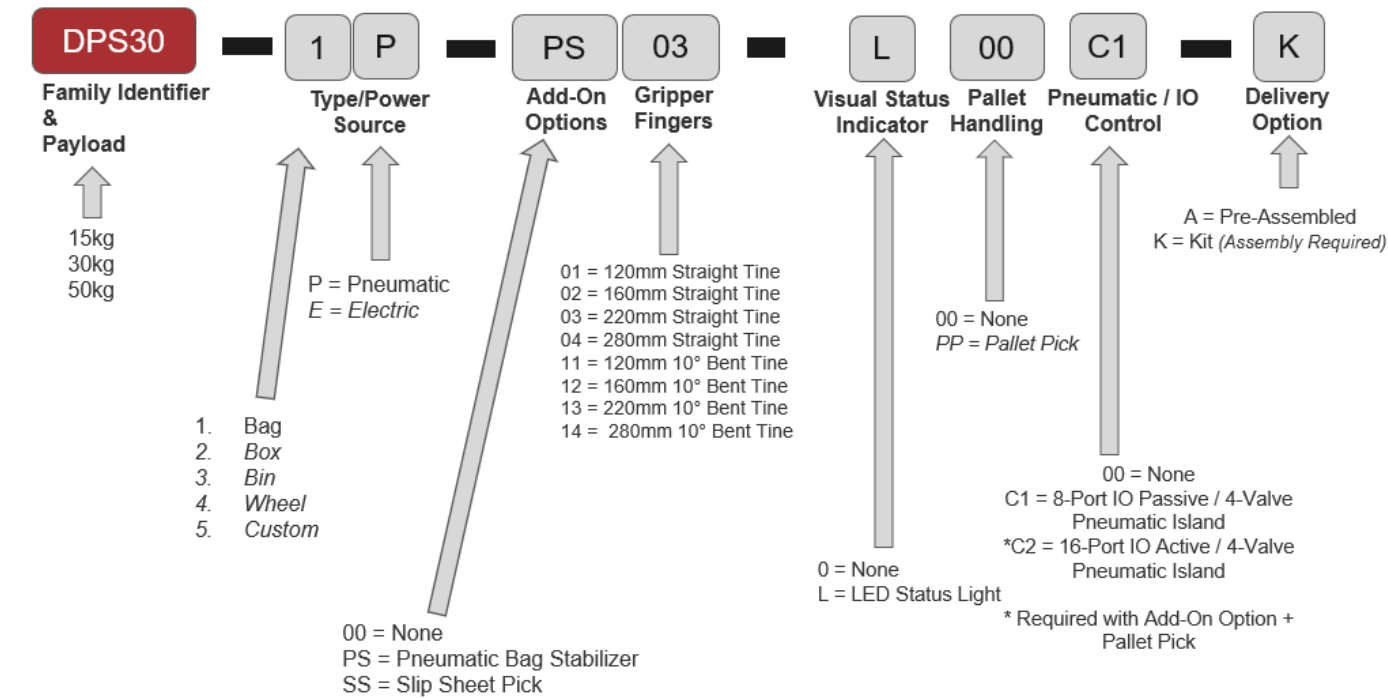

PNEUMATIC STABILIZER
(DPS-1P-PS-00-KIT)



SLIP-SHEET
(DPS-1P-SS-00-KIT)

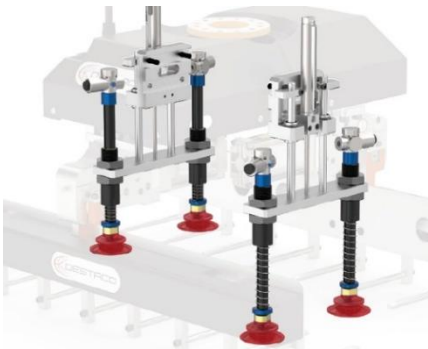


INDICATOR LIGHTING
(DPS-1P-00-L-00-KIT)



TINE-KITS
(DPS-T-XX-KIT)
(DPS-T-XX-KIT-E)



ROBOT STAND-OFF
(DPS-RS-LD-XX-KIT)
(DPS-RS-HD-XX-KIT)

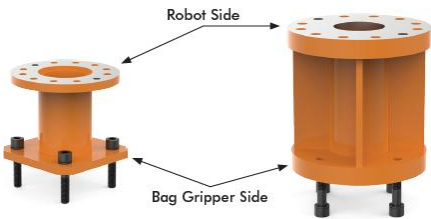


CONTROLS PACKAGES
(DPS-1P-00-C1-KIT)
(DPS-1P-00-C2-KIT)



DPS15 BAG GRIPPER

Bag Grippers | Assembly Instruction



2. DPS15-1P-XX: 15kg payload

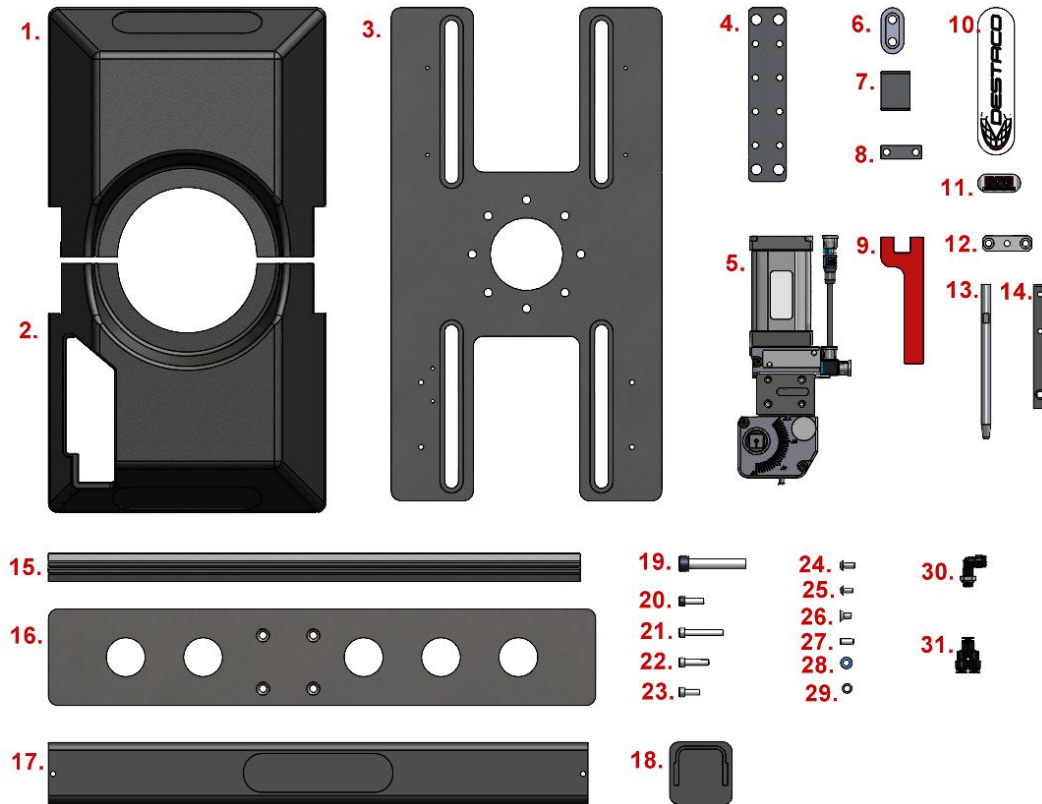

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	DPS30-1P-01-005	TOP COVER LS	1
2	DPS30-1P-01-006	TOP COVER RS	1
3	DPS30-1P-01-001	TOP PLATE	1
4	DPS15-1P-01-002	P C MOUNT PLATE	2
5	82M-3E230040K8	POWER CLAMP 82M-3E (40)	2
6	DPS15-1P-01-004	SLIDE STUD	4
7	DPS15-1P-01-003	RISER	4
8	DPS30-1P-02-006	PC ARM PLATE	4
9	DPS15-1P-02-001	POWER CLAMP ARM	4
10	DSC6X15OVLISIL-LBL	DESTACO BRAND LABEL	4
11	DSC-DPS075X175-OVLISIL-LBL	DESTACO DPS LABEL	2
12	CLM-30-30-C	MICRO CLAMP BLOCK CAP	18
13	DPS-1P-T-02-004-XX	FINGER (160mm)	14
14	DPS30-1P-02-003	FINGER ARM	14
15	B-30-550-0	30MM EXTRUSION	2
16	DPS15-1P-02-002	GUIDE PLATE	2
17	DPS15-1P-02-005	SIDE COVER	2
18	DPS15-1P-02-006	SIDE COVER END CAP	4
19	SHAM10C60	SHCS,M10*60MM,ALLOY	8
20	SHAM06C20	SHCS,M6*20MM,ALLOY	8
21	SHSM06C40	SHCS,M6*40MM,STAINLESS	36
22	SHSM06C25	SHCS,M6*25MM,SS	14
23	SHSM06C16	SHCS,M6*16MM,SS	8
24	BHAM06C12	BUTTON HEAD SCREW	8
25	BHAM05C10	BUTTON HEAD SCREW	8
26	FHSM06C12	FHCS,M6*12MM,SS	8
27	DPSM06S14	DOWEL PIN	4
28	329-M6F	FLAT WASHER, M6 NOM.	8
29	329-M6S	M6 SPLIT LOCK WASHER	14
30	347-PL06-U01	PNEUFORCE 1/8 UNIVERSAL X 6MM TUBE ELBOW	4
31	347-PY06	PNEUFORCE 06mm UNION Y	2

DPS15 BAG GRIPPER

Bag Grippers | Assembly Instruction

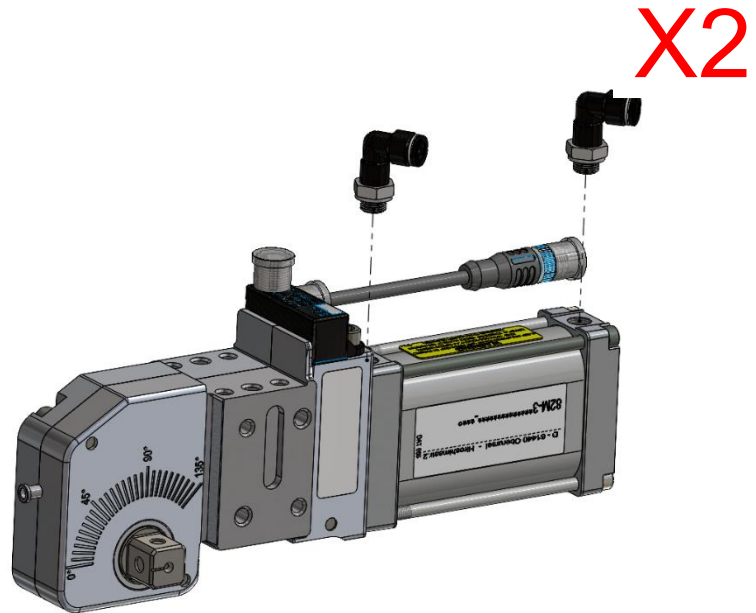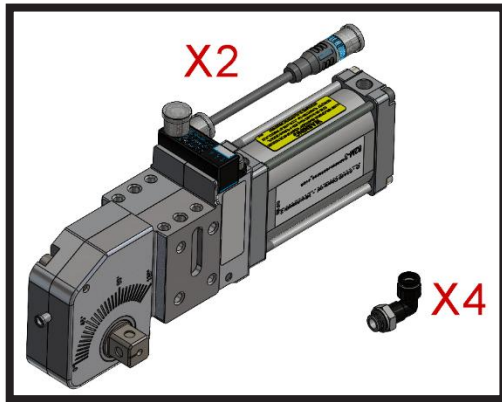

Montageanleitung / Assembly instructions / Instrucciones de montaje

Einstell- und Montagehinweise / Adjustment and assembly instructions / Instrucciones de ajuste y de montaje

BAEM-0047


Rev. B

Blatt / Sheet / Hoja 1/1

Einstellung Öffnungswinkel / Setting of the opening angle / Graduación del ángulo de apertura



Hinweise auf Blatt
BAEM-0006 beachten! /
Follow the instructions on sheet
BAEM-0006! /
¡Respetar recomendaciones
en hoja BAEM-0006!

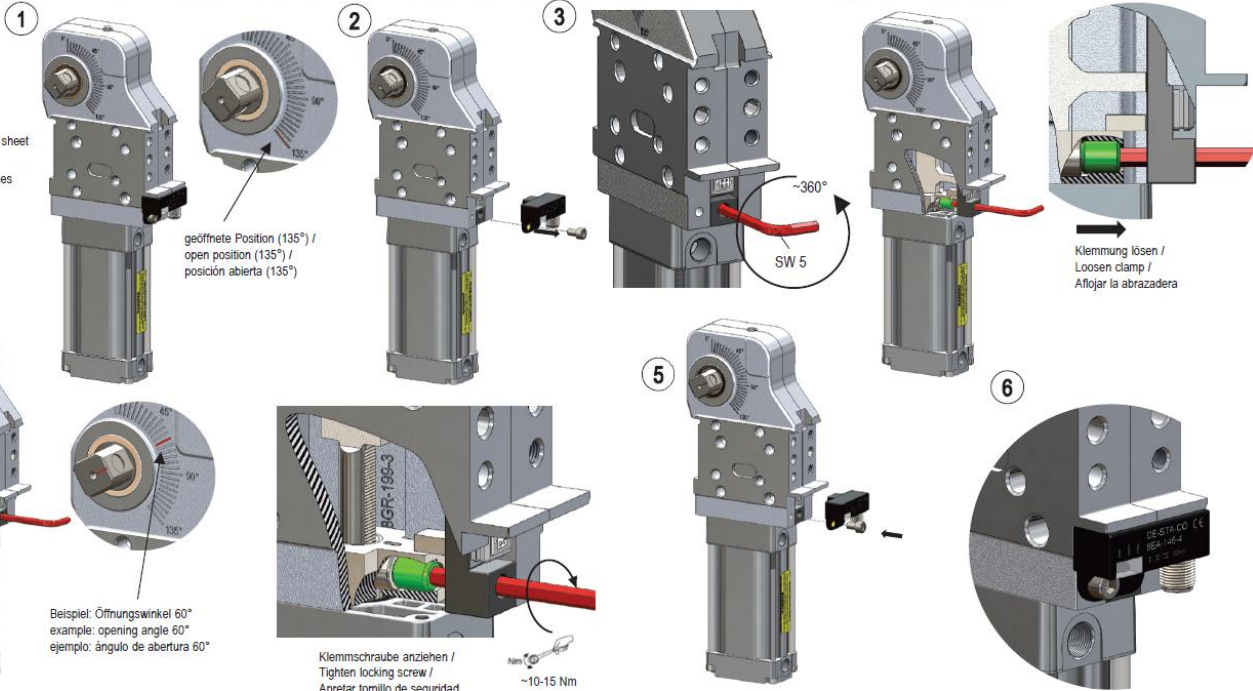

Schmierfett / Lubricant / Lubricante:
DIN 51502 KP2K-20

Loctite

Montageanleitung
Assembly instructions
Instrucciones de montaje

siehe Ersatzteilliste
see spare parts list
véase lista de piezas de recambio

Anziehdrehmoment
tightening torque
par de apriete

Öffnen bei Druckluftausfall
open in case of pressure failure
abrir en caso de falta de presión




Ersetzt / Replaces / Sustituye: Rev. A
Copyright by DESTACO
Technische Änderungen vorbehalten / Subject to technical modifications without notice /
Reservado el derecho a modificaciones técnicas sin previo aviso

www.destaco.com





DPS15 BAG GRIPPER

Bag Grippers | Assembly Instruction

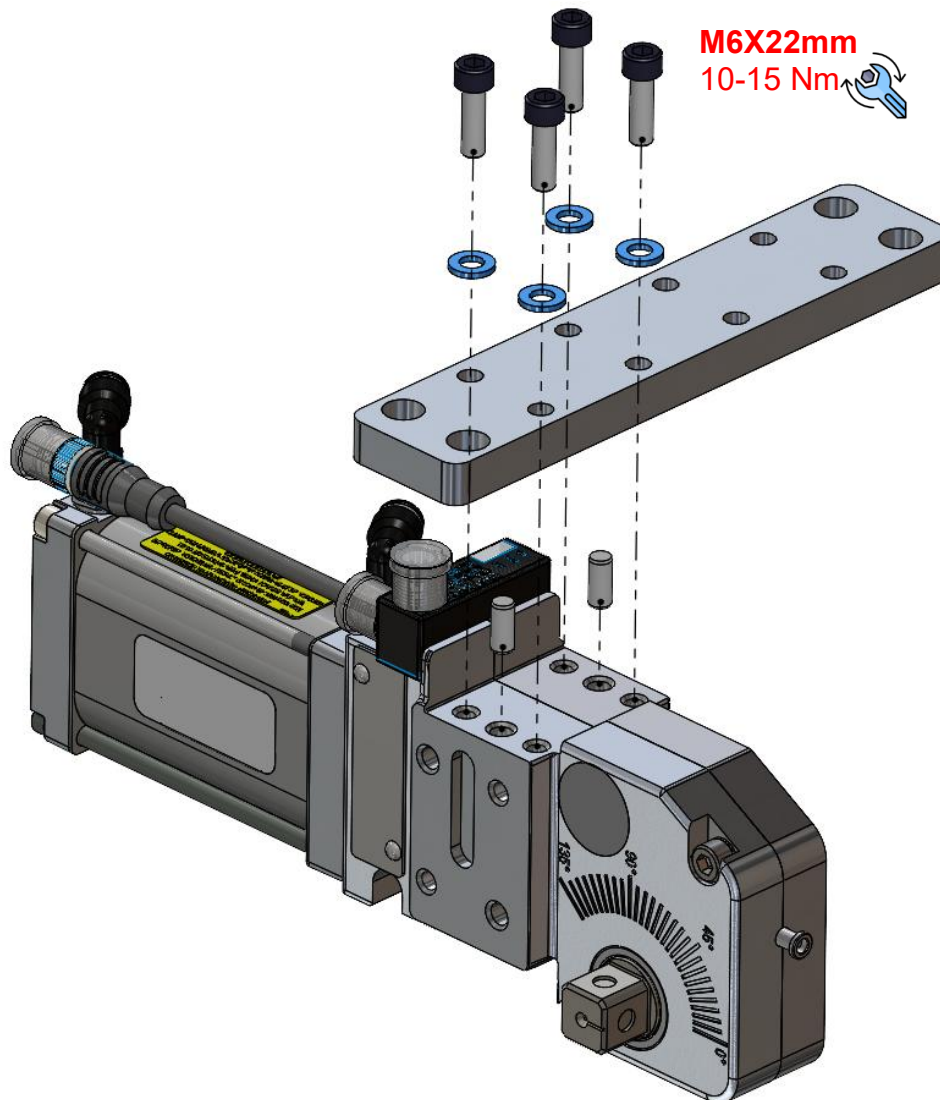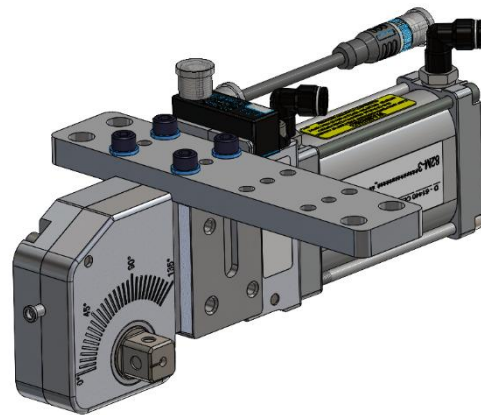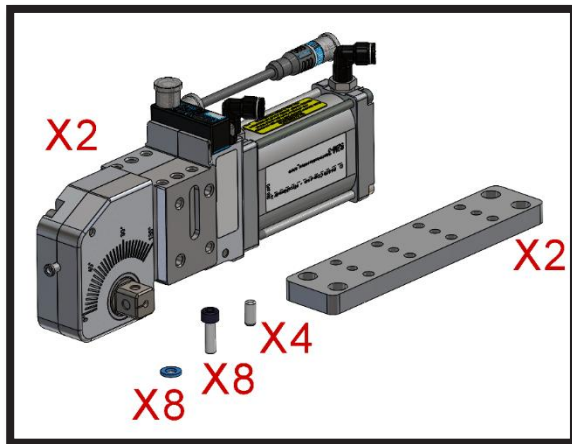

DPS15 BAG GRIPPER


Bag Grippers | Assembly Instruction

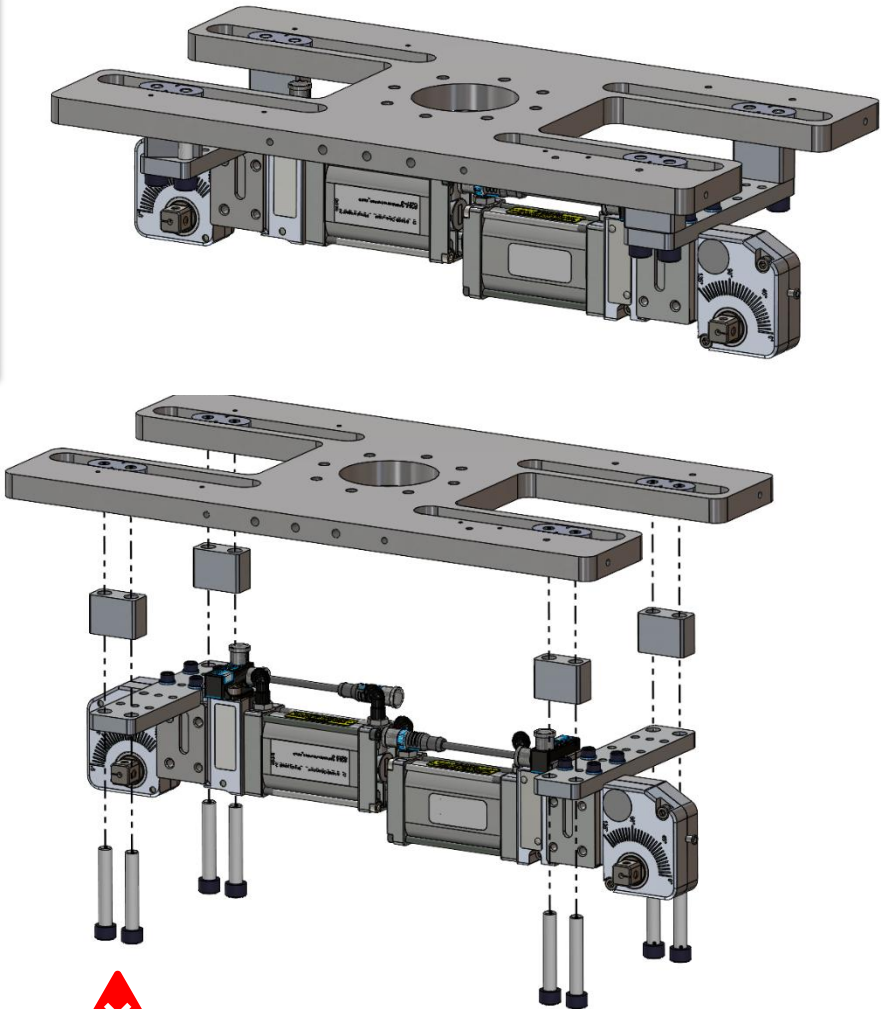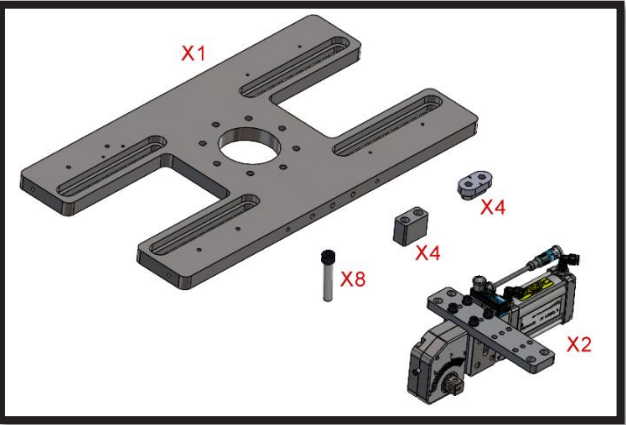

**POWER CLAMP ASSEMBLY
MUST BE INSTALLED ON LEFT
SIDE.**





**M10X60mm
35 Nm**

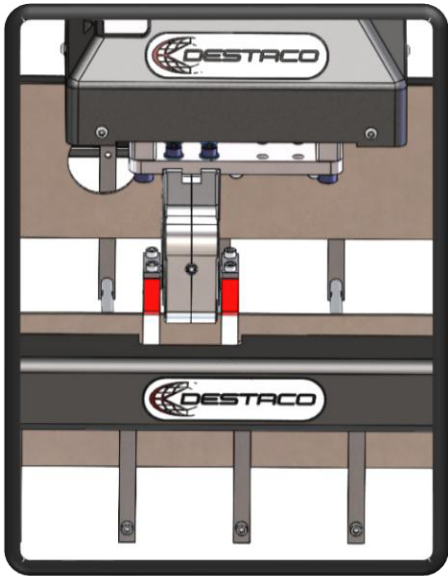


DPS15 BAG GRIPPER

Bag Grippers | Assembly Instruction

X2

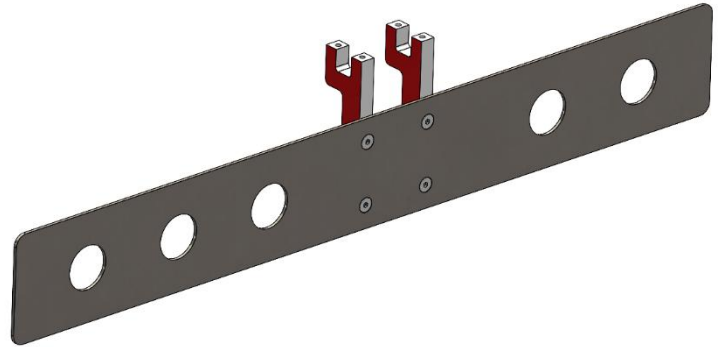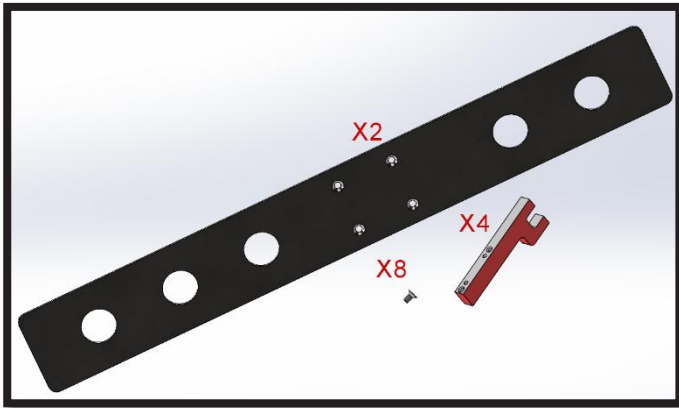

**TWO HOLES TO THE RIGHT WITH
COUNTER SINKS FACING YOU**

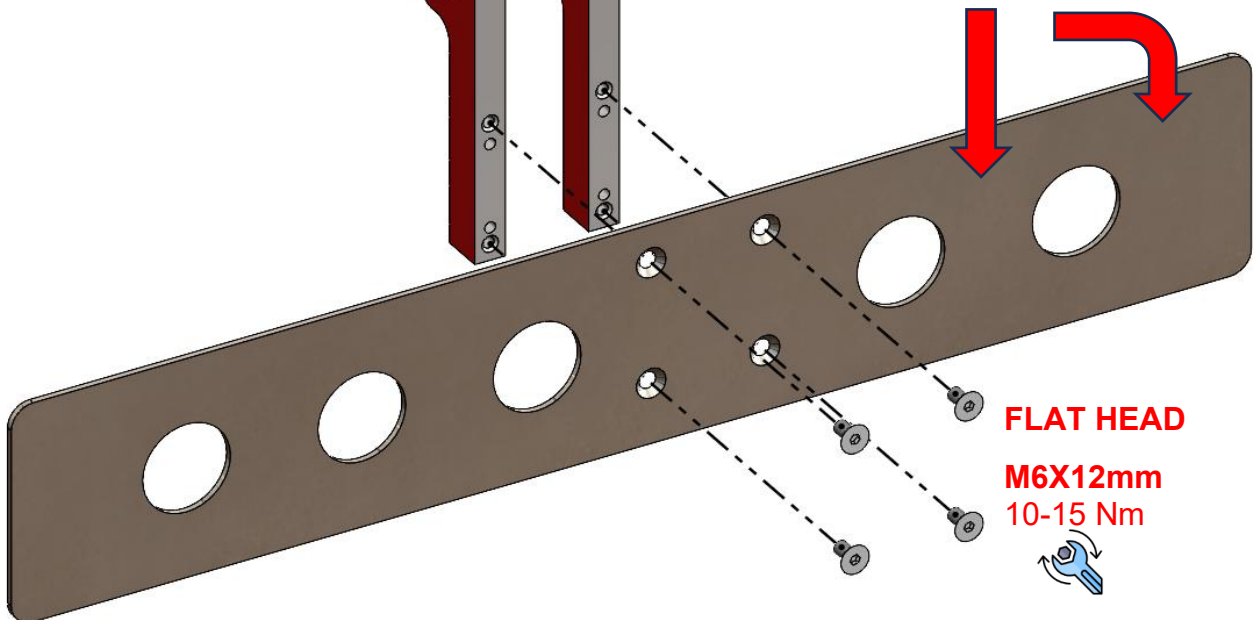



FLAT HEAD

M6X12mm


10-15 Nm

DPS15 BAG GRIPPER

Bag Grippers | Assembly Instruction

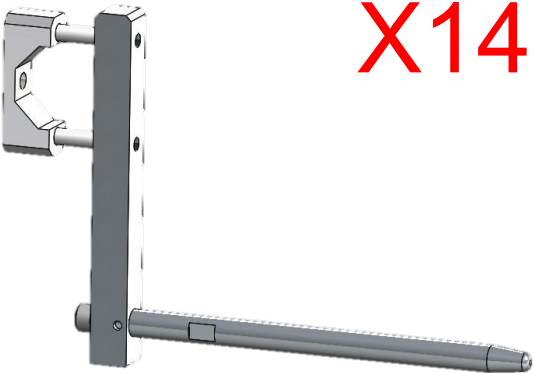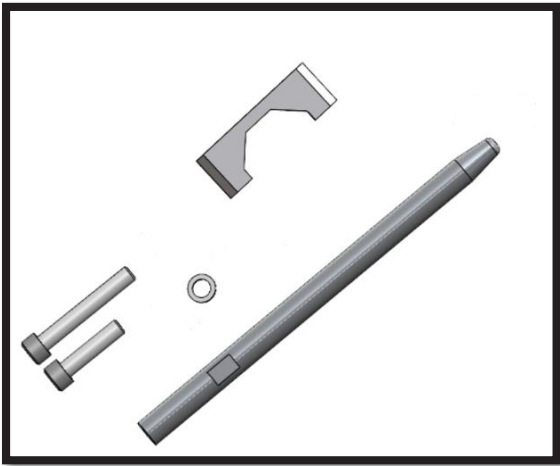




M6X40mm

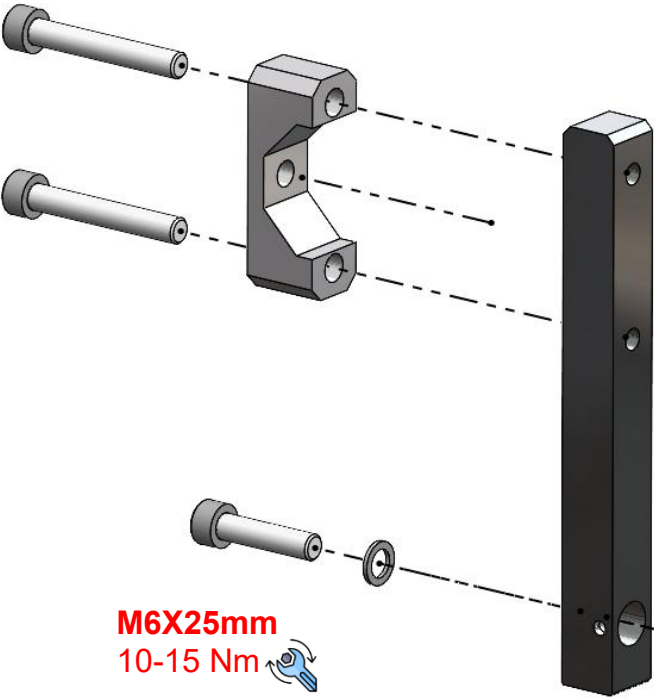

M6X25mm
10-15 Nm 

DPS15 BAG GRIPPER




Bag Grippers | Assembly Instruction

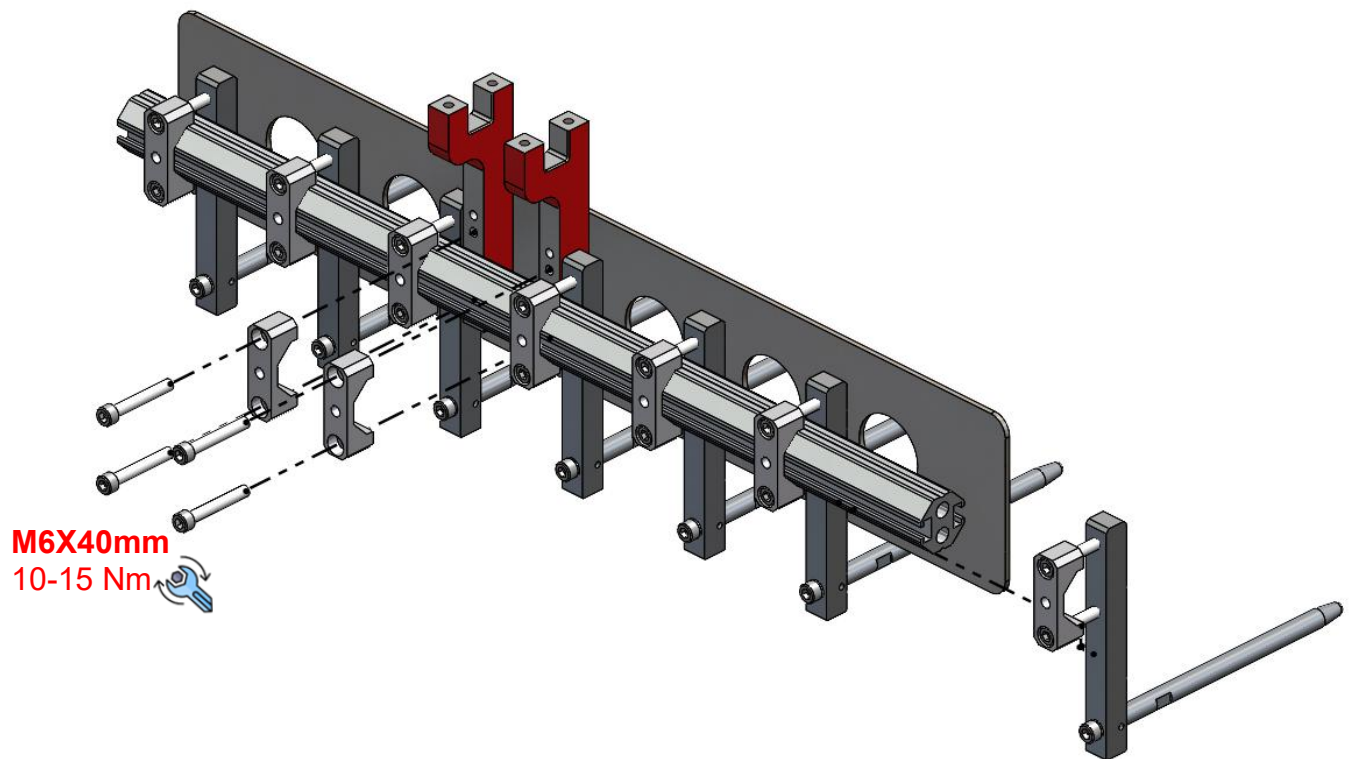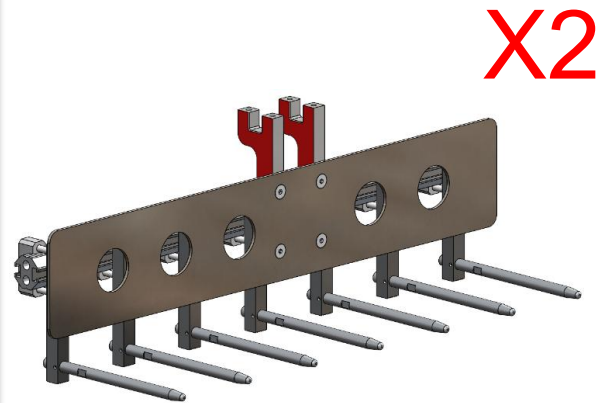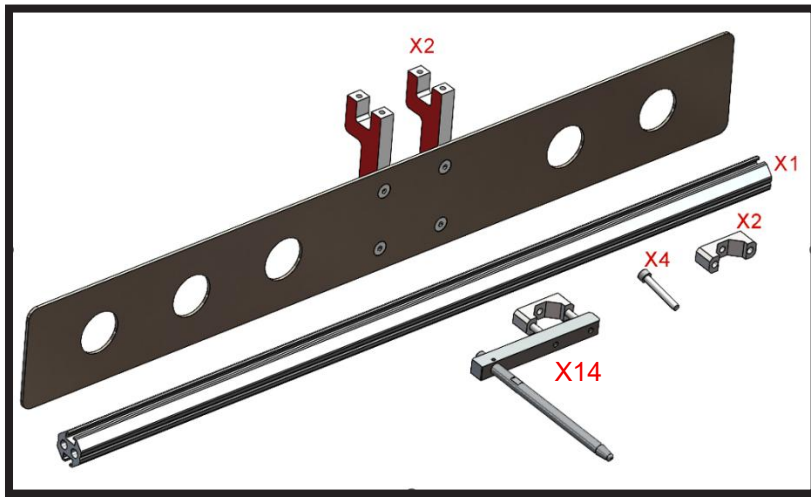

Leave Bolts Loose for adjustment to
Conveyor
Recommend 2" spacing on 3" rollers





DPS15 BAG GRIPPER

Bag Grippers | Assembly Instruction

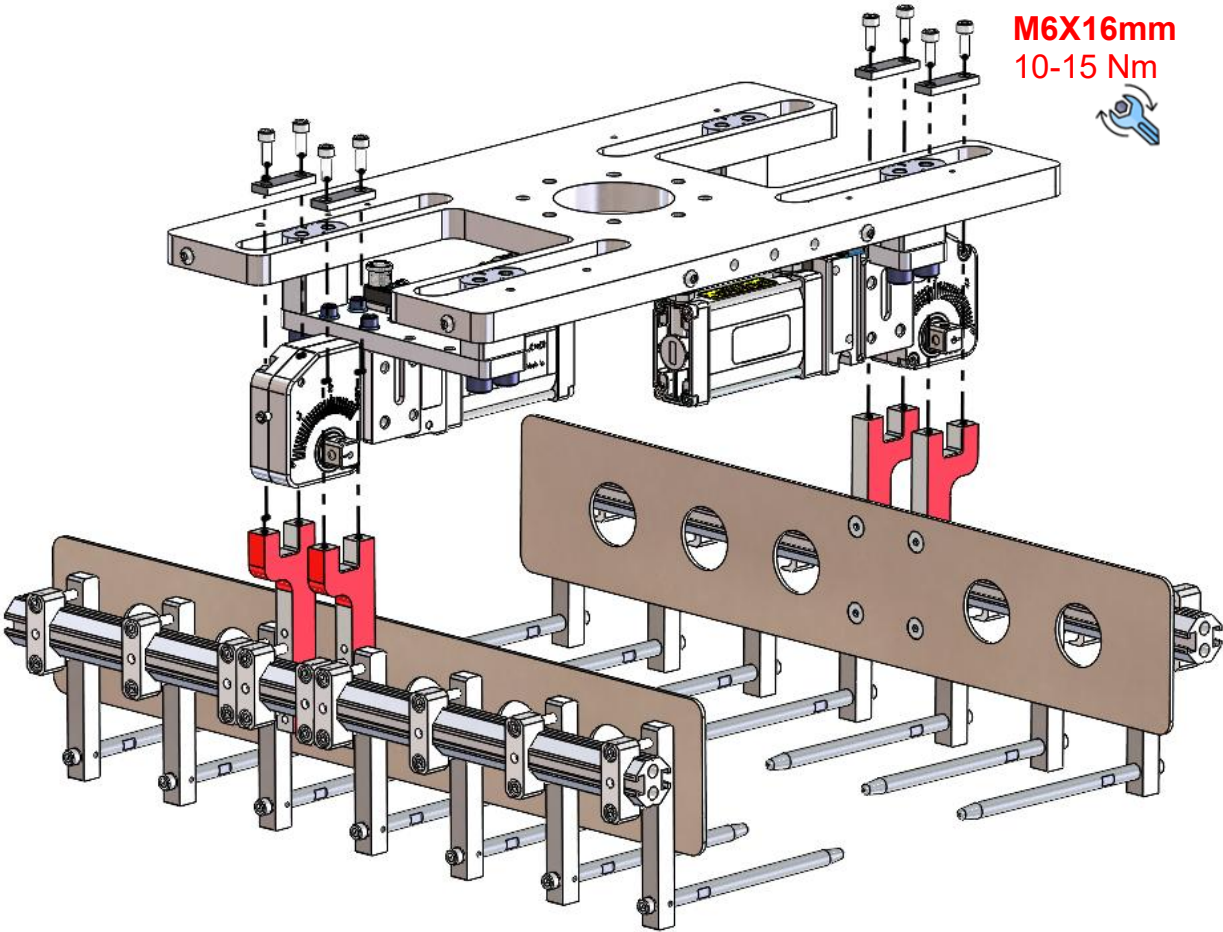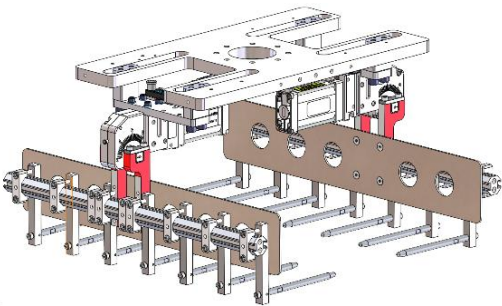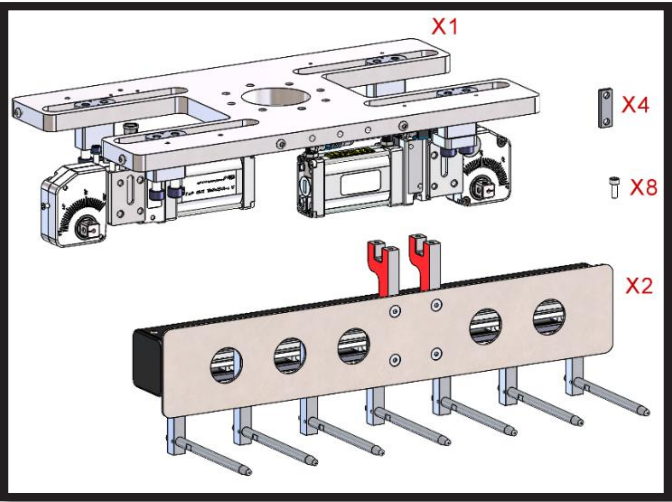



DPS15 BAG GRIPPER

Bag Grippers | Assembly Instruction

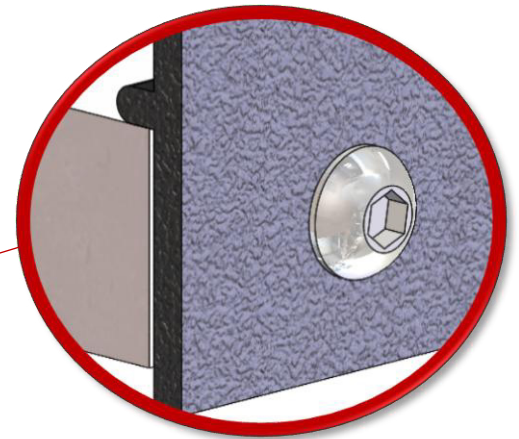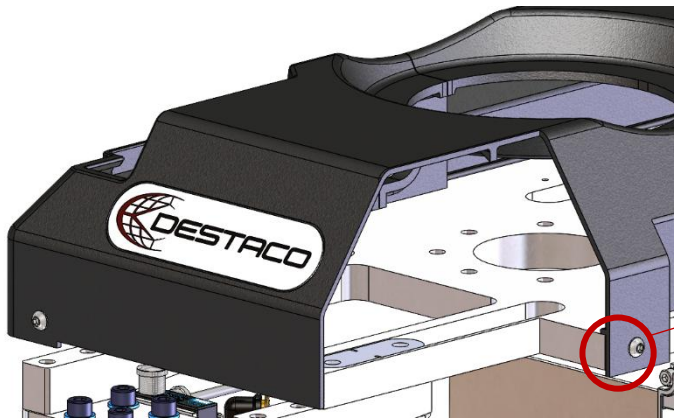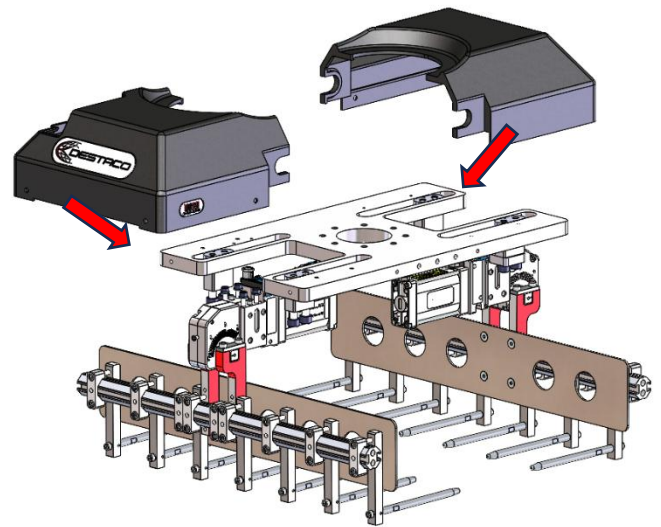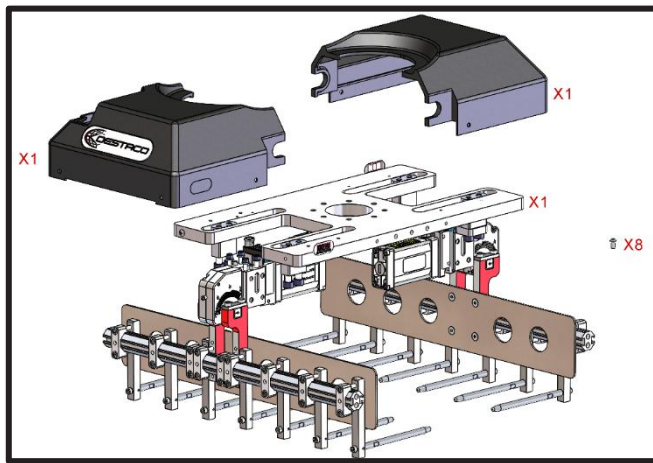




Button Head

M6X12mm
Hand tight 

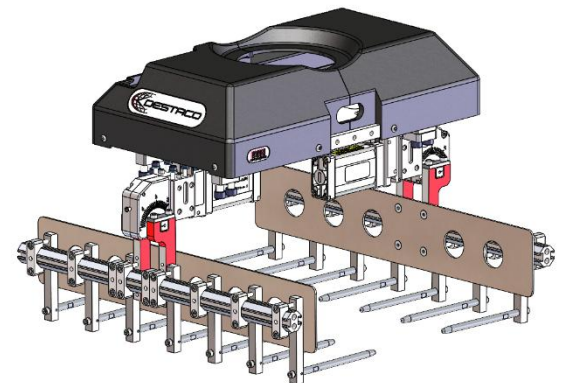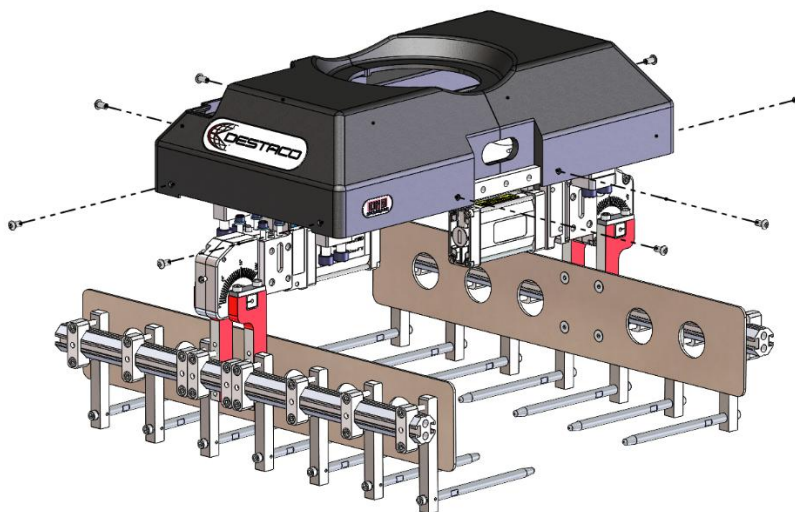

DPS15 BAG GRIPPER


Bag Grippers | Assembly Instruction

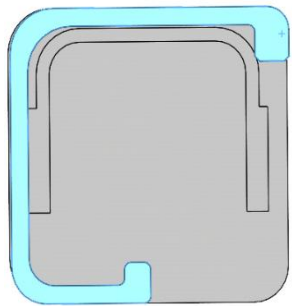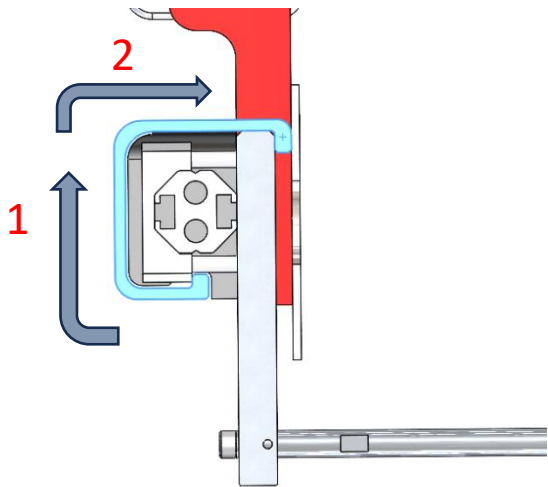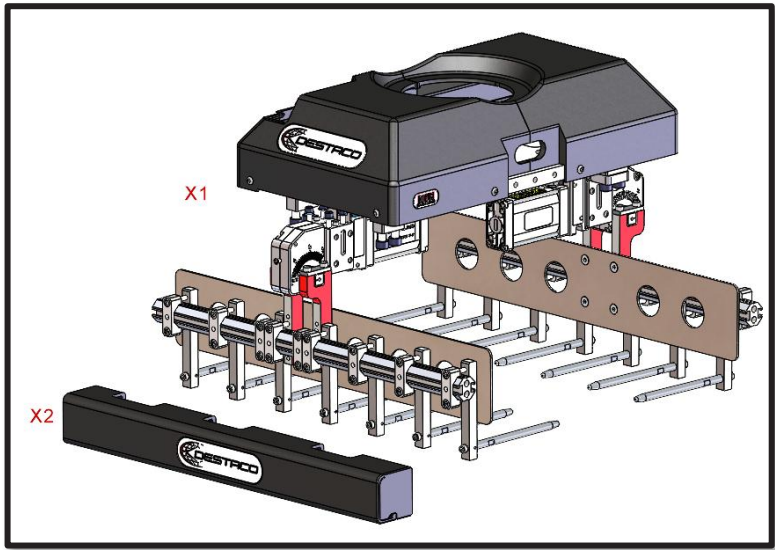

Button Head

M5X10mm





Hand tight

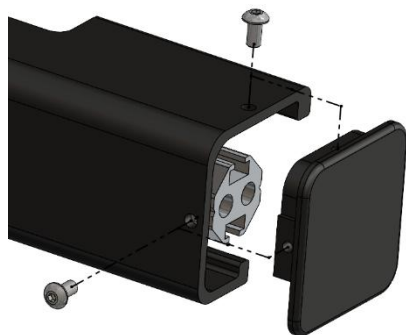

DPS15 BAG GRIPPER


Bag Grippers | Assembly Instruction

3. ROBOT STAND OFF

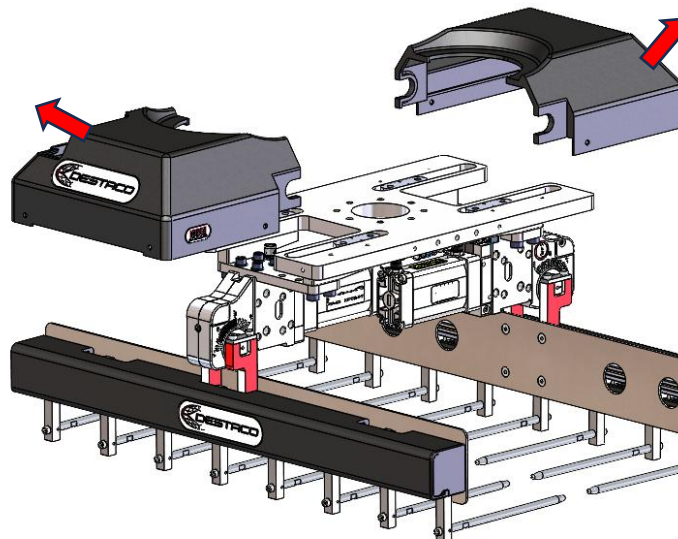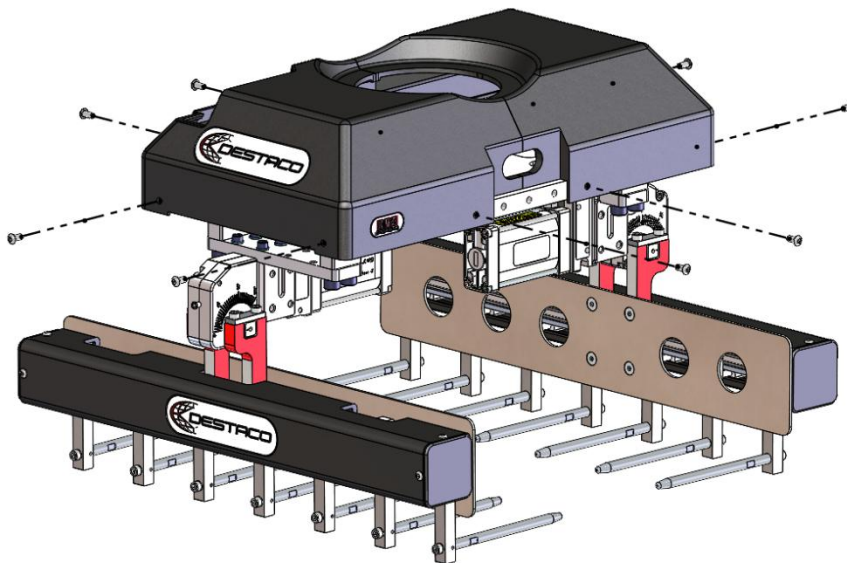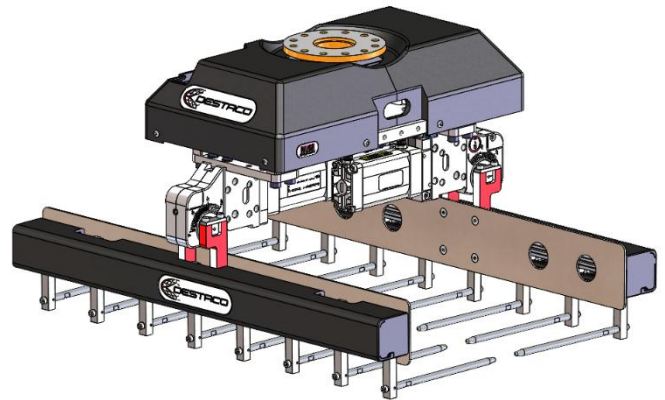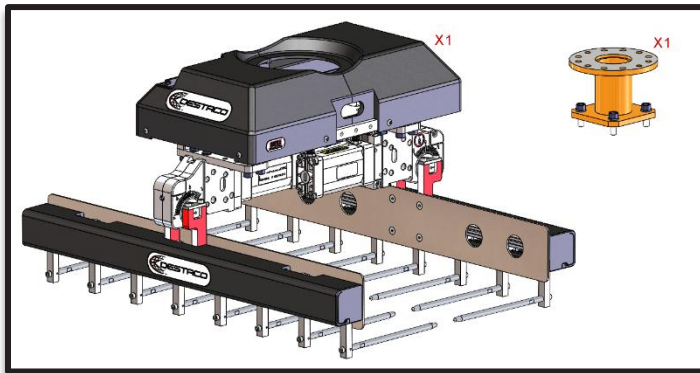

DPS15 BAG GRIPPER





Bag Grippers | Assembly Instruction

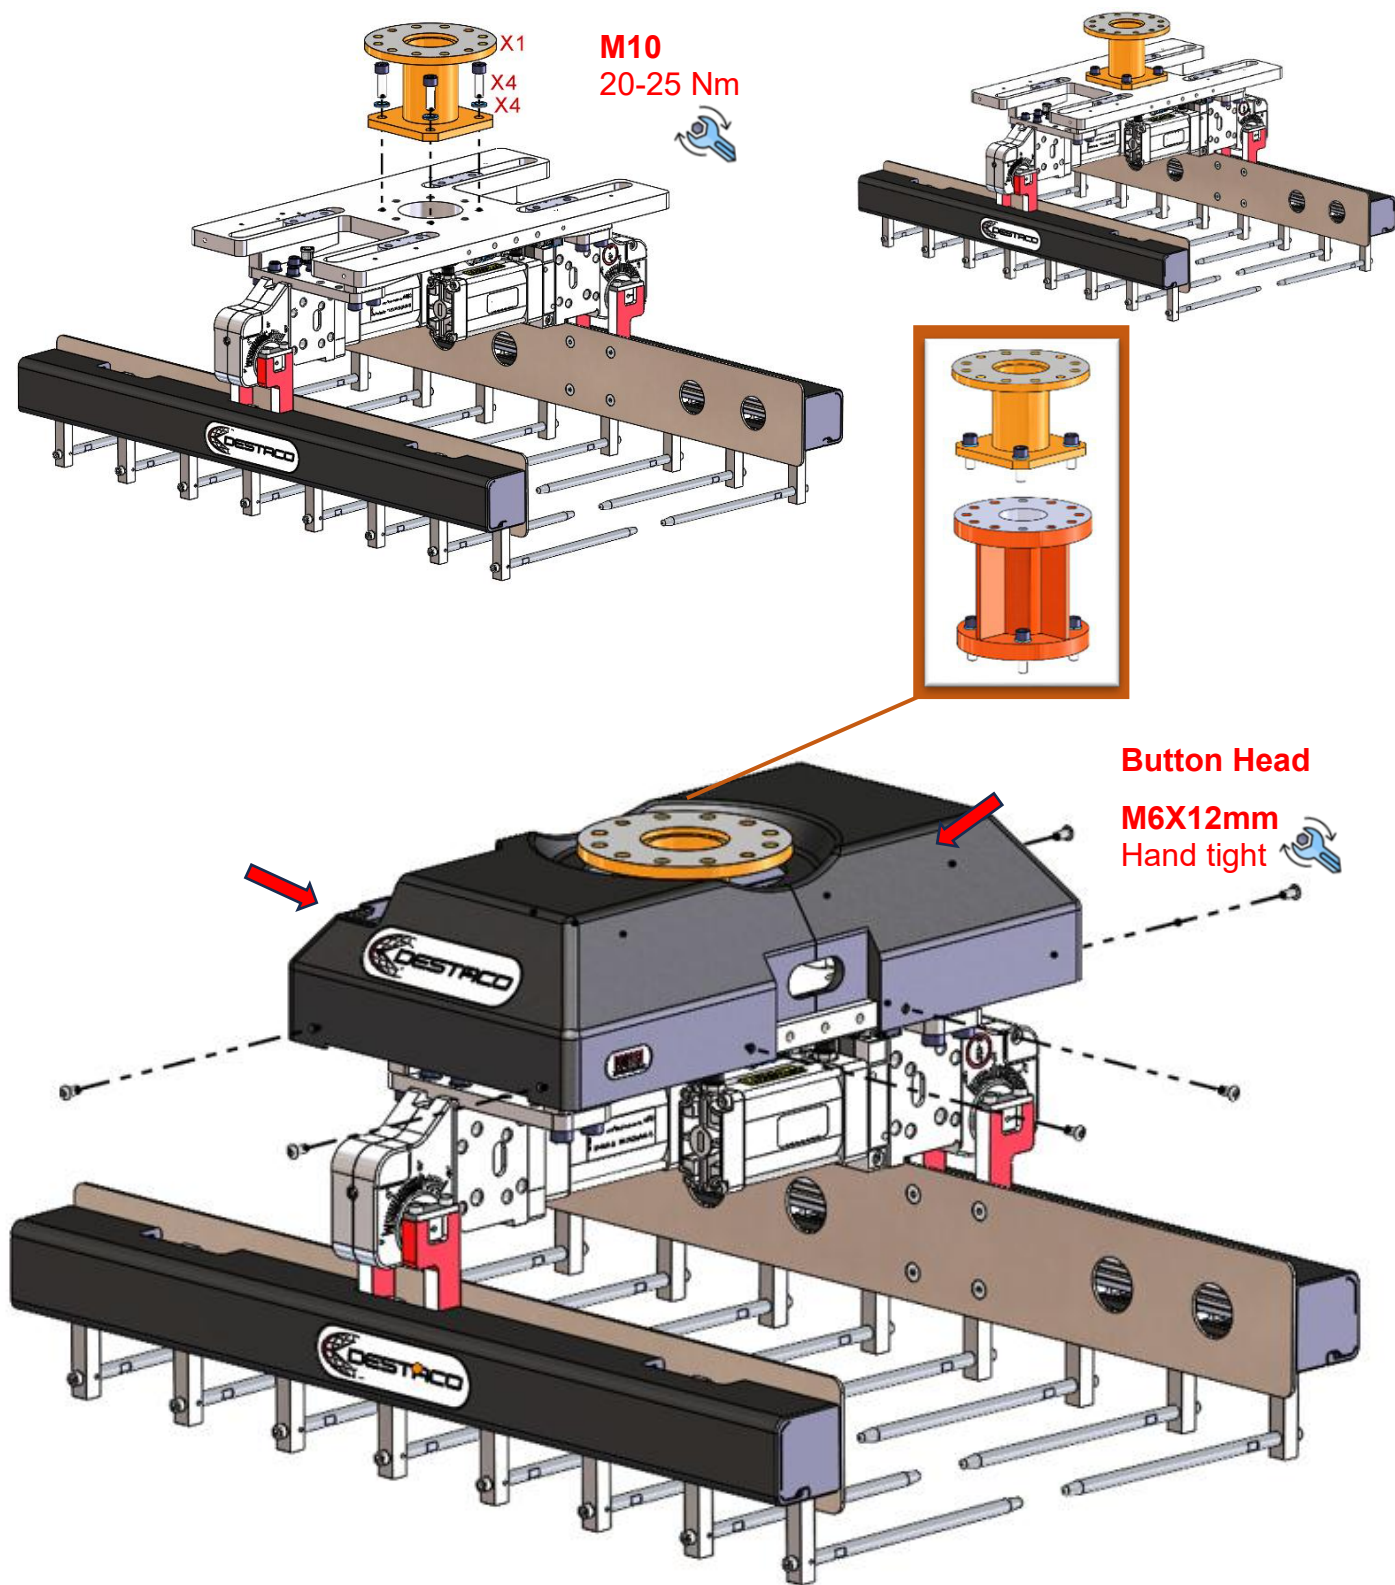

DPS15 BAG GRIPPER


Bag Grippers | Assembly Instruction

4. CONTROL UNITS

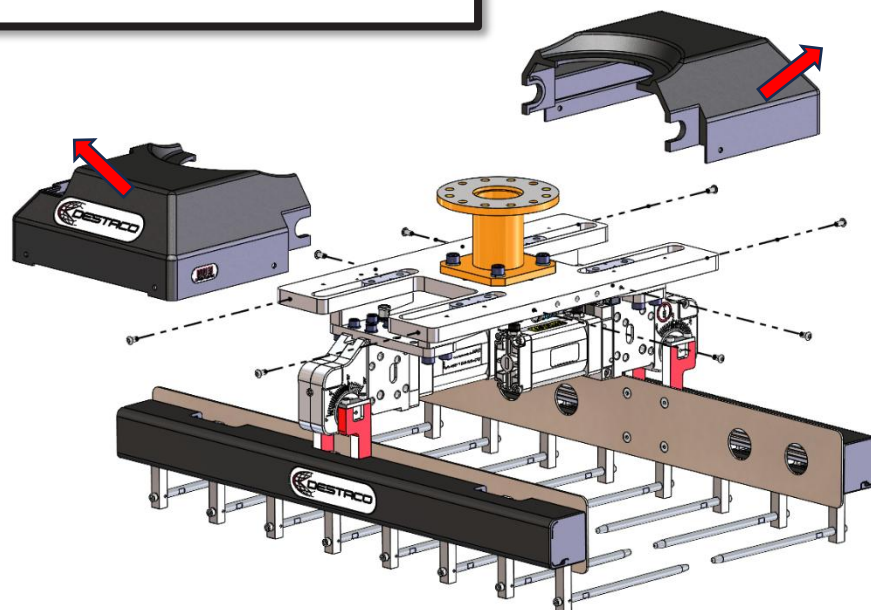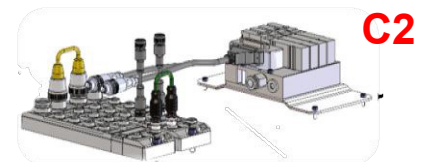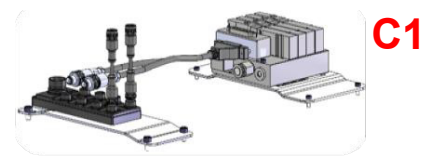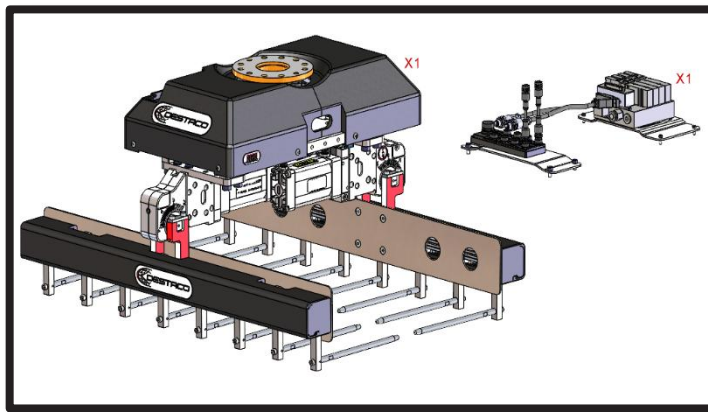







M6
10-15 Nm

M4x12mm
10-15 Nm

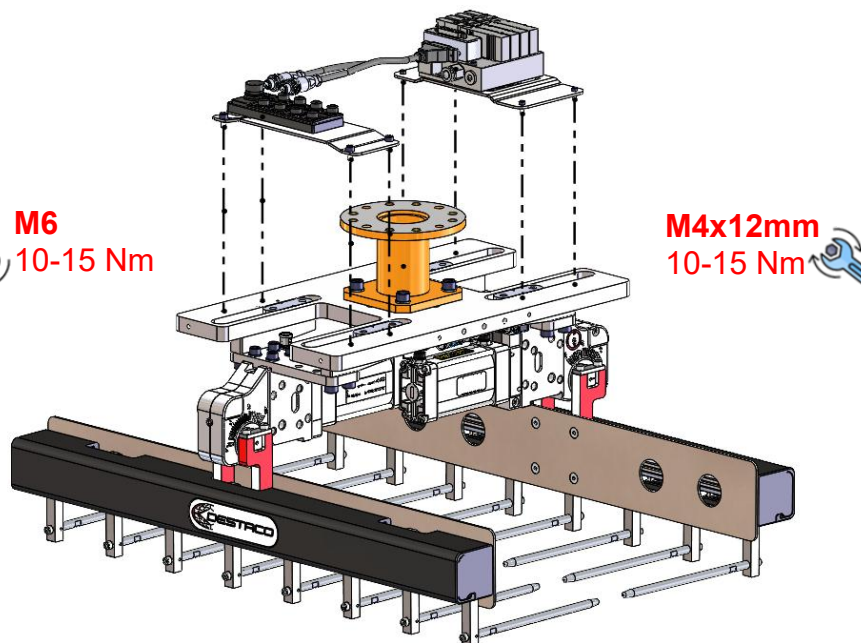

DPS15 BAG GRIPPER


Bag Grippers | Assembly Instruction

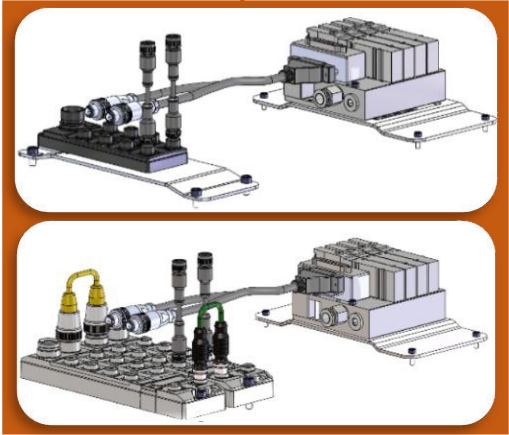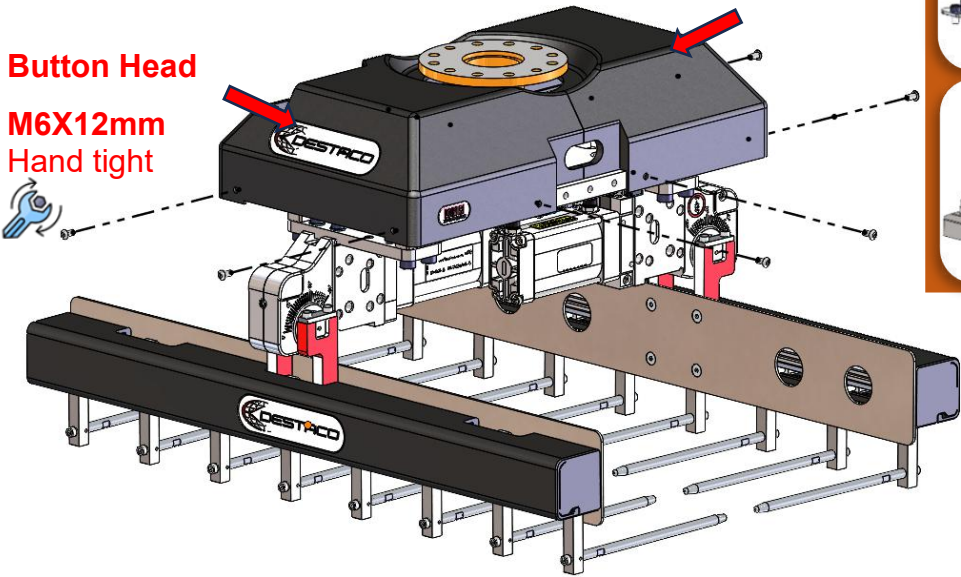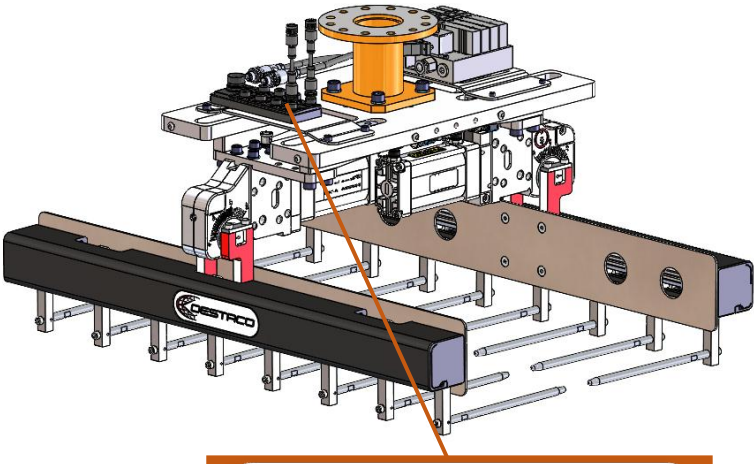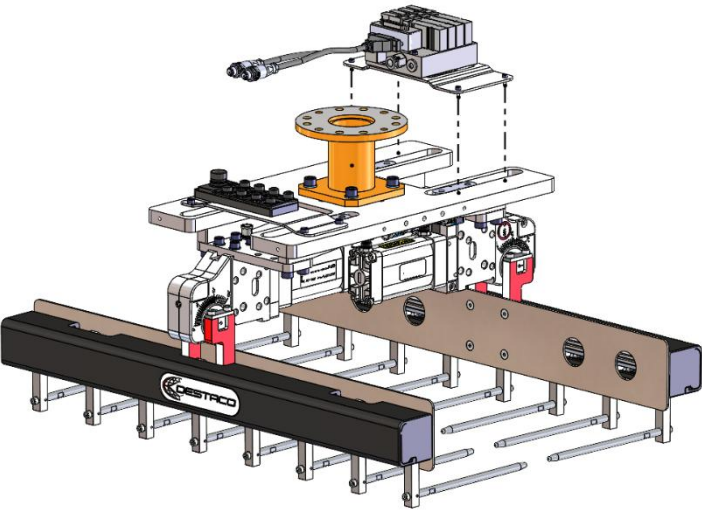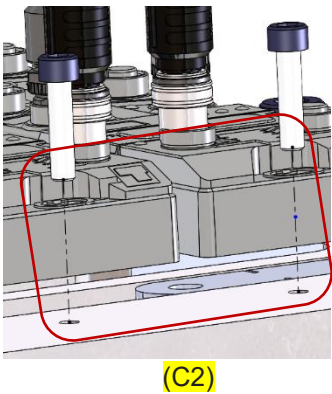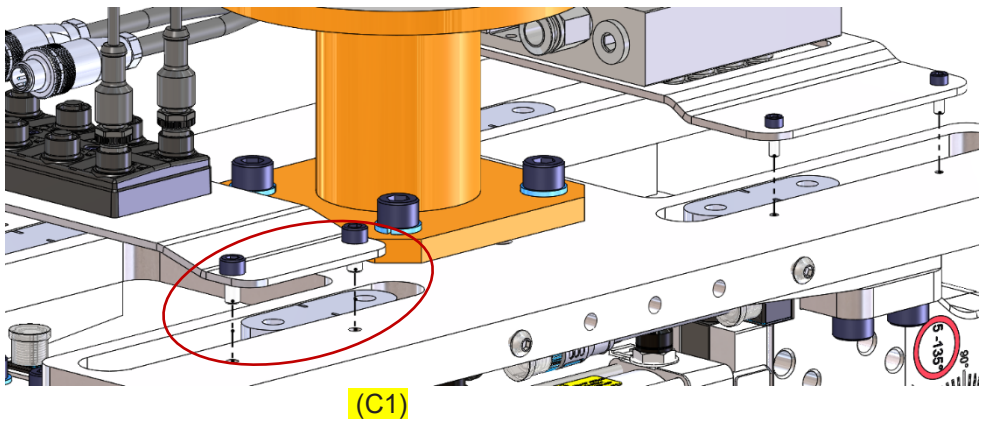

DPS15 BAG GRIPPER

Bag Grippers | Assembly Instruction

C1 CONTROL UNIT (For Base model)

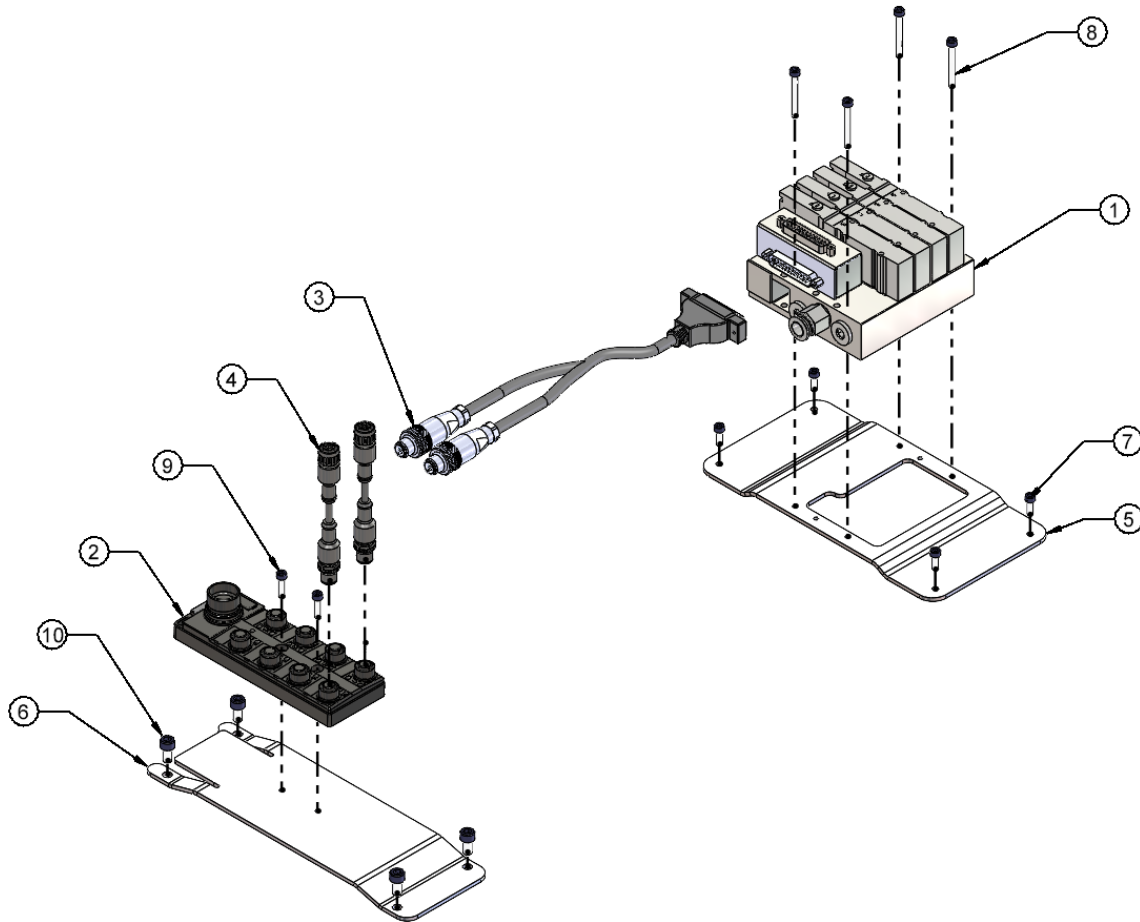


- Use PLUGS (347-8028-02) for open / not used port in Valve pack (VP-4-0-6)

11	347-8028-02	PLUG 1/8 BSPP-NICKEL PLATED	6
10	SHAM06C12	SHCS,M6*12MM, ALLOY	4
9	SHAM04C16	SHCS,M4*16MM, ALLOY	2
8	SHAM04C35	SHCS,M4*35MM, ALLOY	4
7	SHAM04C12	SHCS,M4*12MM, ALLOY	4
6	DPS-1P-00-004	IO MOUNT	1
5	DPS-1P-00-C-00-003	PNEUMATIC VALVE MOUNT	1
4	360-773430342933004-0100	CABLE, M12, 4 PIN CONNECTOR (STRAIGHT)	2
3	CABL-DPS-25	25 PIN D-SUB to M12 4 PIN CABLE	1
2	360-8MB12Z-5P3-CS19	TURCK 19 PIN IO BLOCK	1
1	VP-4-0-6	PNEUMATIC VALVE PACK	1
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.

DPS15 BAG GRIPPER

Bag Grippers | Assembly Instruction

C2 CONTROL UNIT (For Base model)

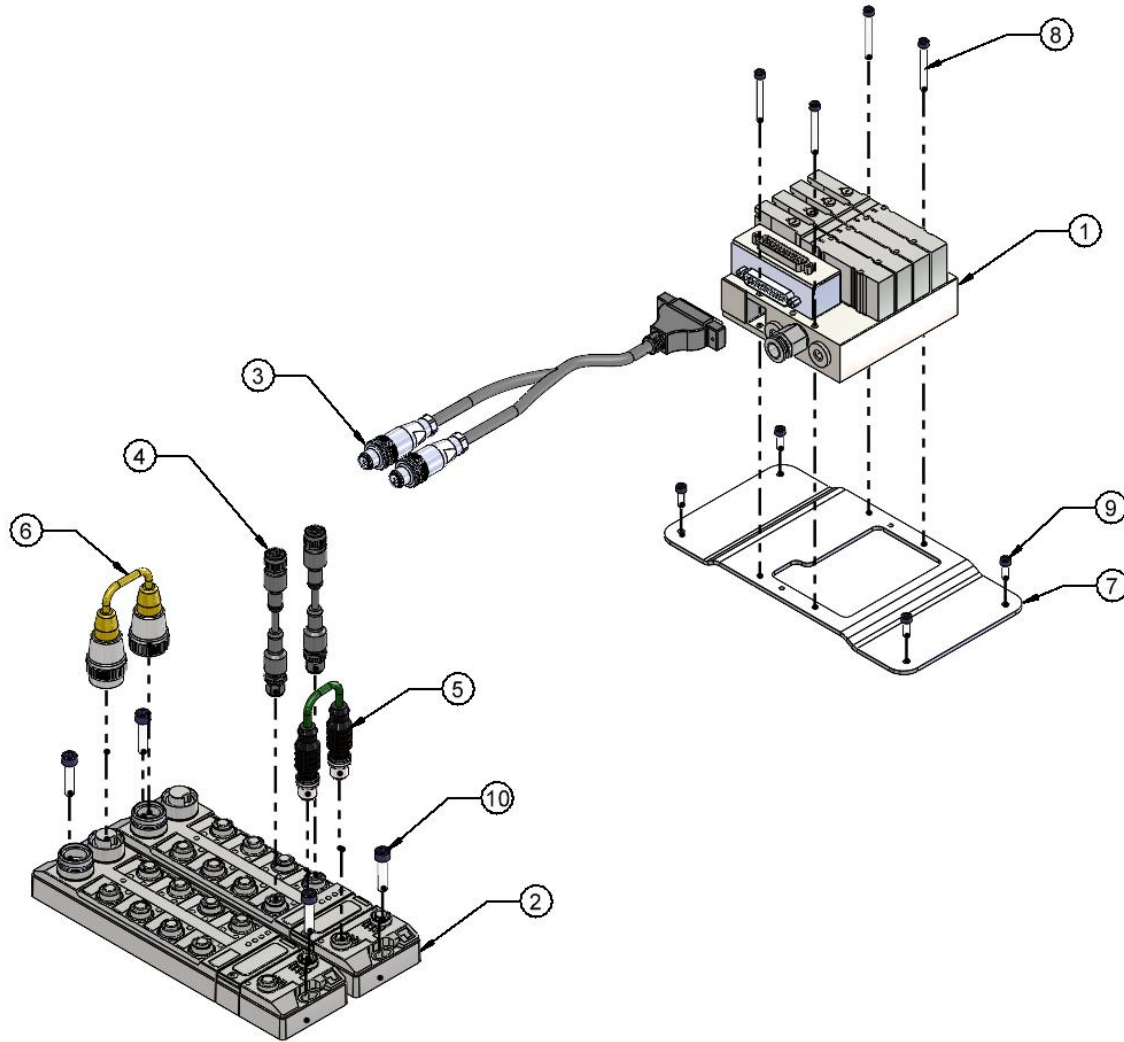



- Use PLUGS (347-8028-02) for open / not used port in Valve pack (VP-4-0-6)

11	347-8028-02	PLUG / 8 BSPP-NICKEL PLATED	6
10	SHAM06C25	SHCS,M6*25MM,ALLOY	4
9	SHAM04C12	SHCS,M4*12,ALLOY	4
8	SHAM04C35	SHCS,M4*35,ALLOY	4
7	DPS-1P-00-C-00-003	PNEUMATIC VALVE MOUNT	1
6	360-RSM-RKM-40-0.5M	POWER CABLE	1
5	360-RSSD-RSSD-441-0.5M	ETHERNET CABLE	1
4	360-773430342933004-0100	CABLE, M12, 4 PIN CONNECTOR (STRAIGHT)	2
3	CABL-DPS-25	25 PIN D-SUB to M12 4 PIN CABLE	1
2	360-TBEN-L4-8DIP-8DOP	TURCK I/O BLOCK, PNP, 8x8	2
1	VP-4-0-6	PNEUMATIC VALVE PACK	1
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.



DPS15 BAG GRIPPER

Bag Grippers | Assembly Instruction

5. PNEUMATIC STABILIZER OPTION

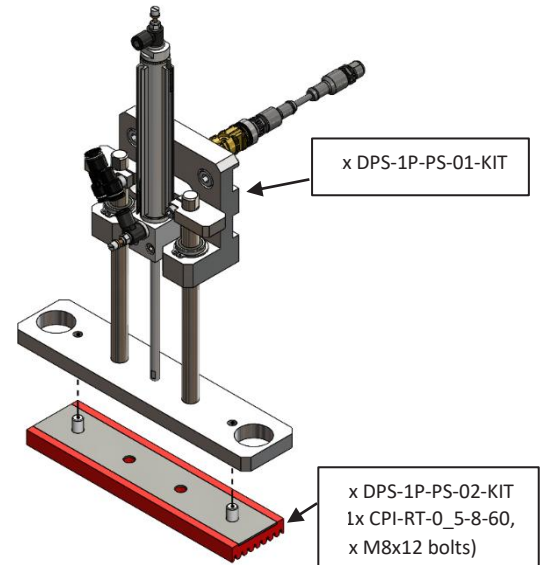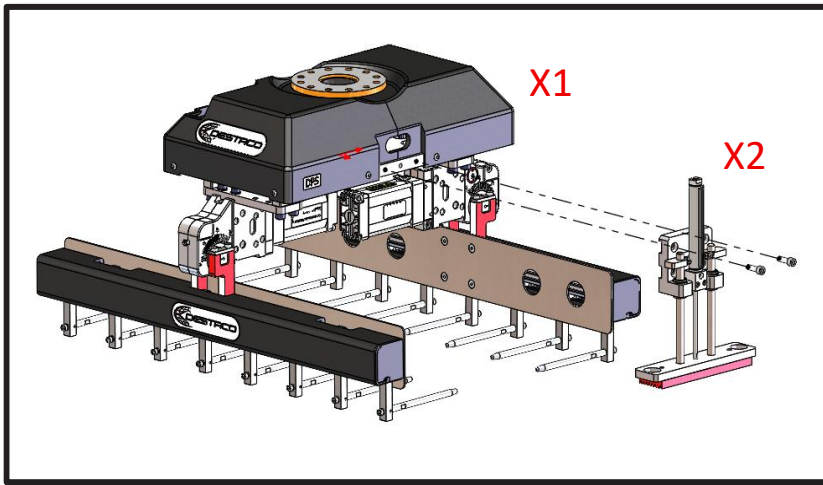


DPS-1P-PS-01-KIT

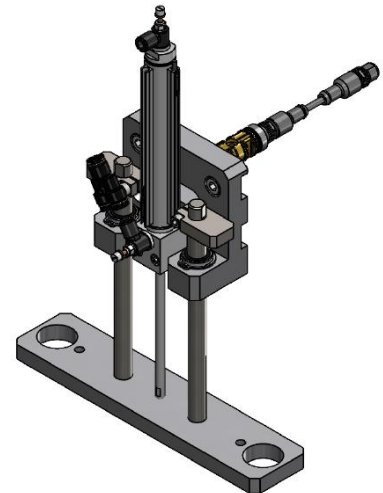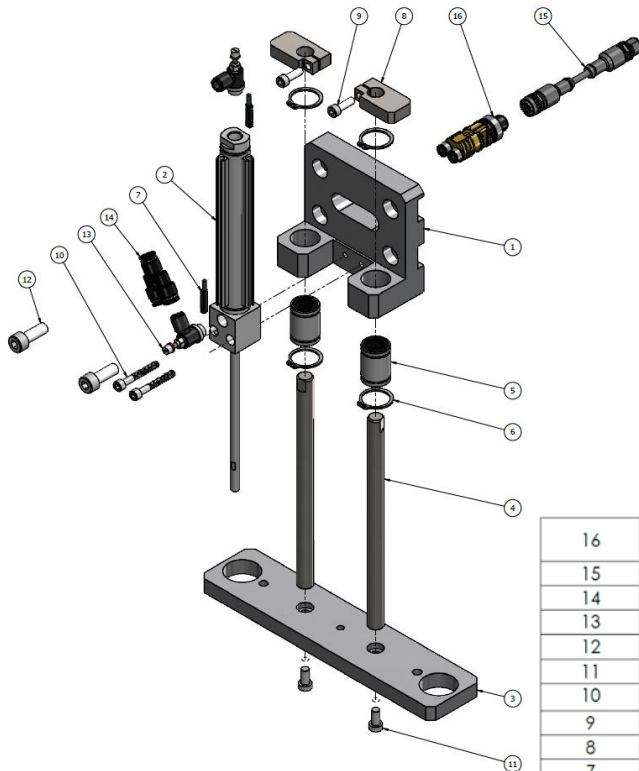

16	VBRS_4.4-2SKM-3	MICRO TO PICO SPLITTER FOR VERTICLE PROX SWITCH	1
15	360-77-3430-3429-33004-0100	CABLE, M12, 4 PIN CONNECTOR (STRAIGHT)	1
14	347-PY06	PNEUFORCE 06mm UNION Y	1
13	VLVF-005	1/8 NPT FLOW CONTROL PUSH FITTING 6MM TUBE	2
12	SHSM08C22	SHCS,M8*22MM,SS	2
11	LHAM06C12	LOW HEAD CAP SCREW, M06*12MM	2
10	SHA#10F22	10-32 x 1-3/8" Long SHS	2
9	SHSM05C16	SHCS,M5*16MM,SS	2
8	DLT-1220	IMPACT FLAG, 12mm	2
7	OHSP-017_OHSN-017	SENSOR	2
6	328-STWN21	RETAINING RING	4
5	340-LMUF12	LINEAR BUSHING SS	2
4	DPS-1P-PS-01-003	PS/SS GUIDE ROD 12mm	2
3	DPS-1P-PS-01-002	PS PAD / SS SPRING MOUNTING PLATE	1
2	352-BFM-044-DBT1T2W	AIR CYLINDER	1
1	DPS-1P-PS-01-001	CYLINDER MOUNT PLATE	1
ITEM NO.	PART NUMBER	Description	QTY.

DPS15 BAG GRIPPER


Bag Grippers | Assembly Instruction

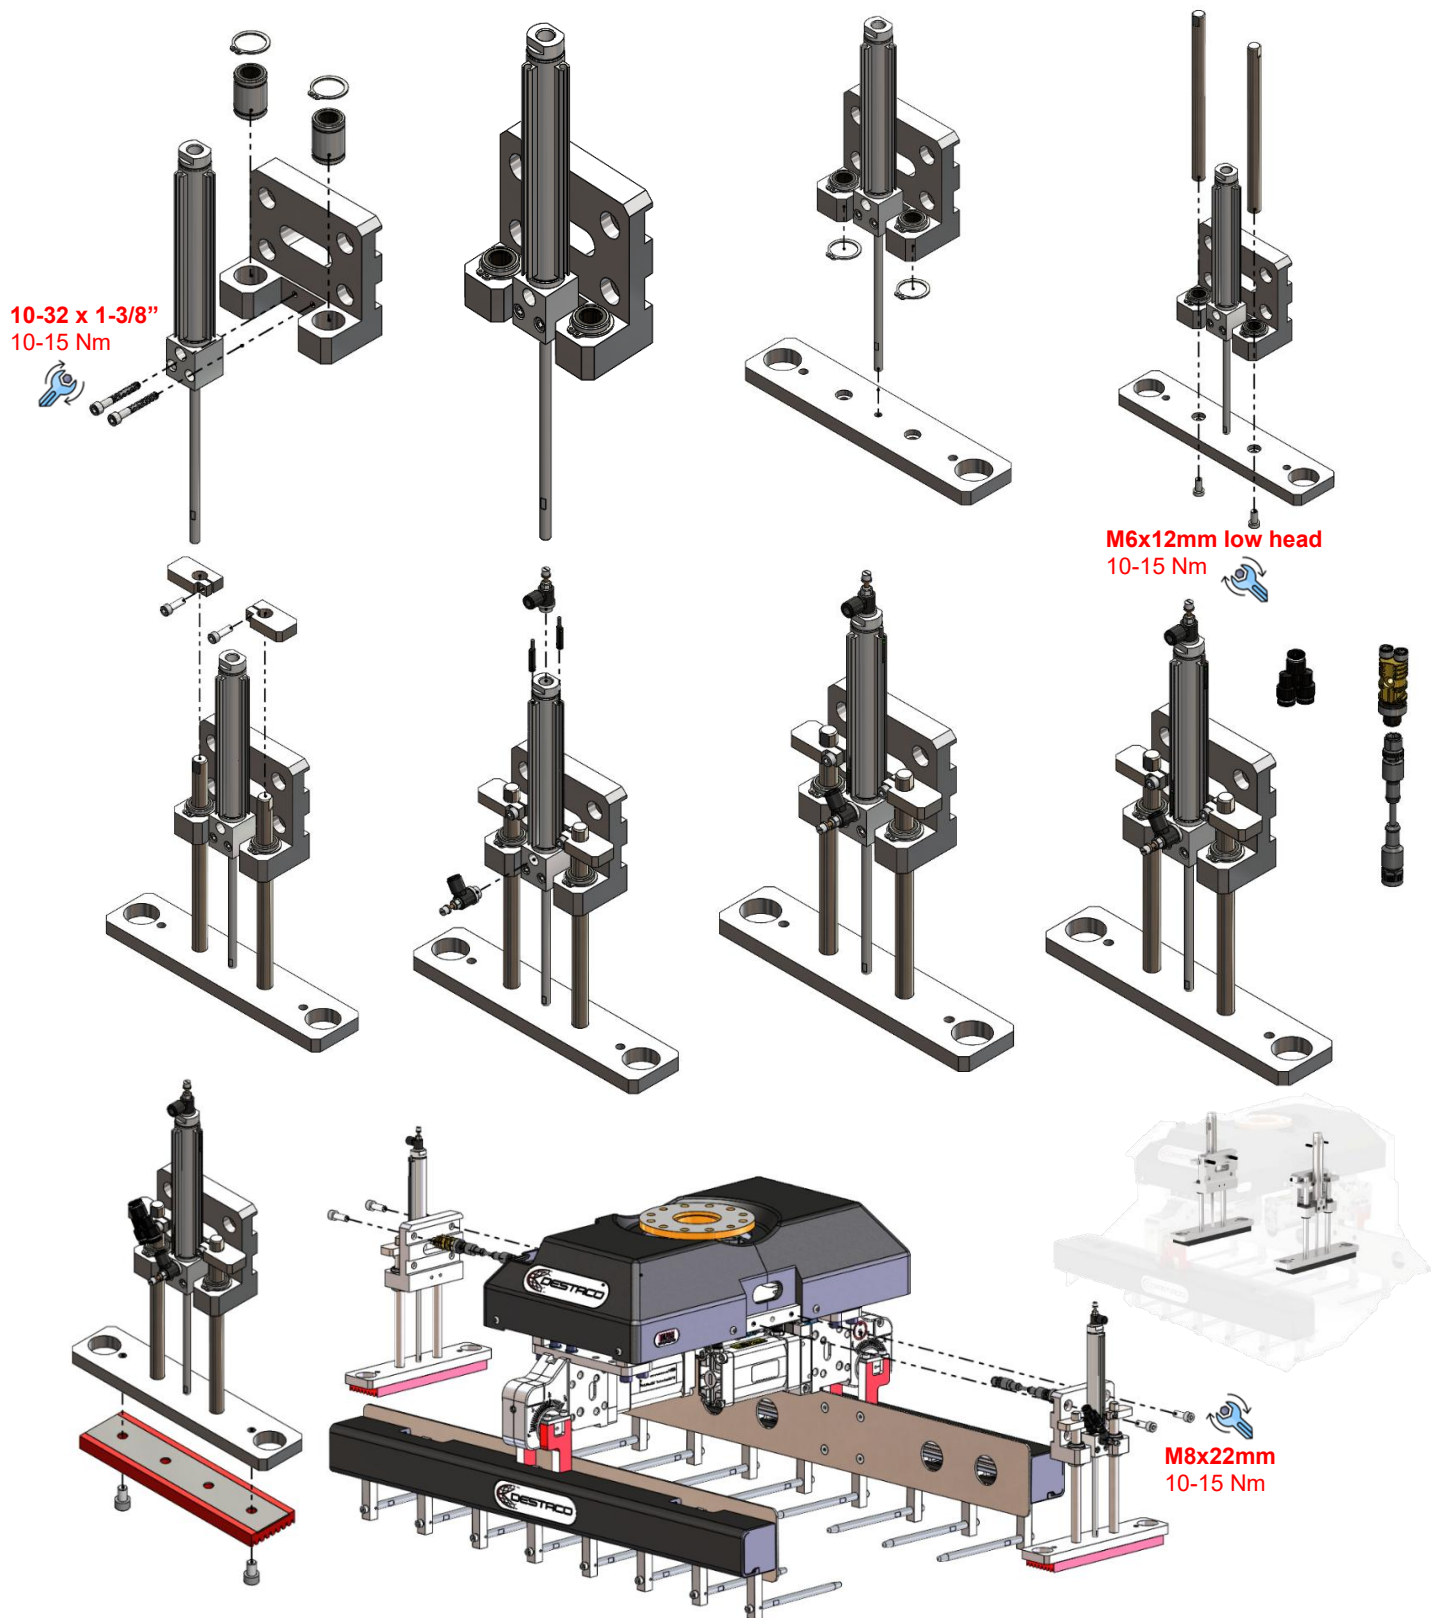



DPS15 BAG GRIPPER

Bag Grippers | Assembly Instruction

6. SLIP SHEET OPTION

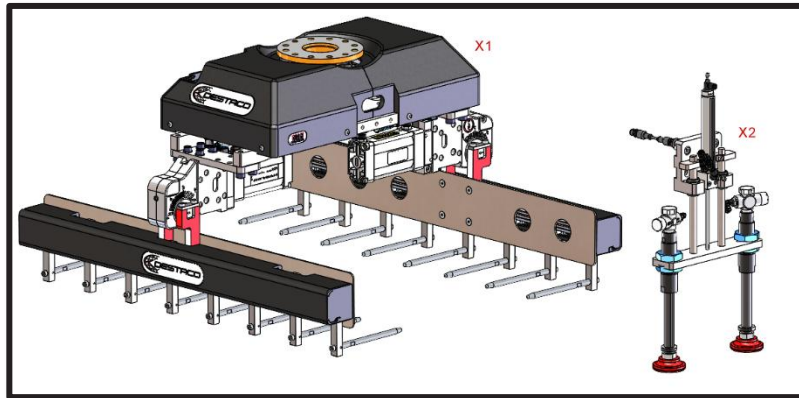


X2

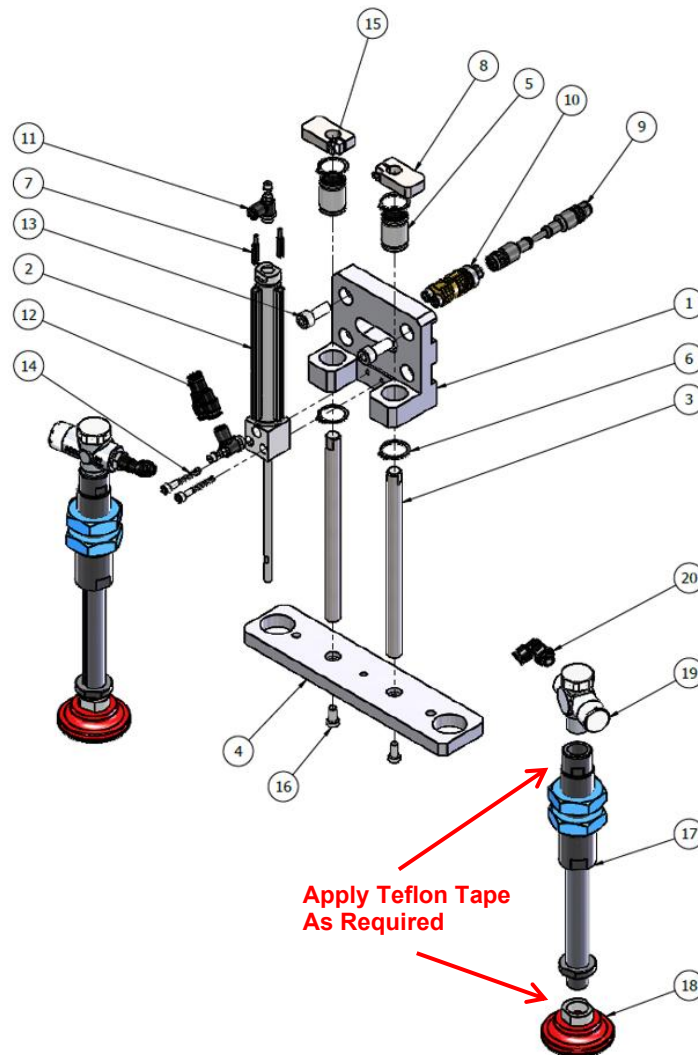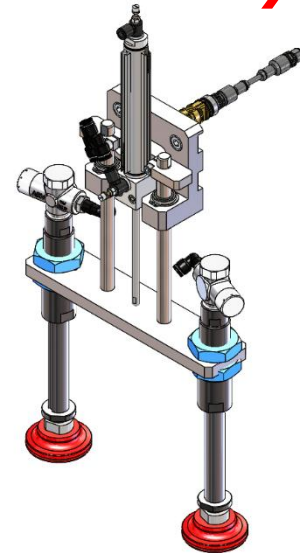

20	347-PL06-U01	PNEUFORCE 1/8 UNIVERSAL X 6MM TUBE ELBOW	2
19	CPI-VSA-ARVR-000-U38	3/8" NPT VENTURI BLOWOFF	2
18	CPI-20AC-B-45	2" BELCUP	2
17	LW-SCMB-100-U38-A	LIGHTWEIGHT SPRING CUP MOUNTS	2
16	LHAM,06C12	LHCS,M6*12MM,ALLOY	2
15	SHSM05C16	SHCS,M5*16MM,SS	2
14	SHA#10F22	10-32 x 1-3/8" Long SHS	2
13	SHSM08C22	SHCS,M8*22MM,SS	2
12	347-PY06	PNEUFORCE 06mm UNION Y	1
11	VLVF-005	1/8 NPT FLOW CONTROL PUSH FITTING 6mm TUBE	2
10	VBRS_4.4-2SKM-3	MICRO TO PICO SPLITTER FOR VERTICLE PROX SWITCH	1
9	360-77-3430-3429-33004-0100	CABLE, M12, 4 PIN CONNECTOR (STRAIGHT)	1
8	DLT-1220	IMPACT FLAG, 12mm	2
7	OHSP-017_OHSN-017	SENSOR	2
6	328-STWN21	RETAINING RING	4
5	340-LMUF12	LINEAR BUSHING SS	2
4	DPS-1P-PS-01-002	PS PAD / SS SPRING MOUNTING PLATE	1
3	DPS-1P-PS-01-003	PS/SS GUIDE ROD 12mm	2
2	352-BFM-044-DBT1T2W	AIR CYLINDER	1
1	DPS-1P-PS-01-001	CYLINDER MOUNT PLATE	1
ITEM NO.	PART NUMBER	Description	QTY.


DPS15 BAG GRIPPER

Bag Grippers | Assembly Instruction

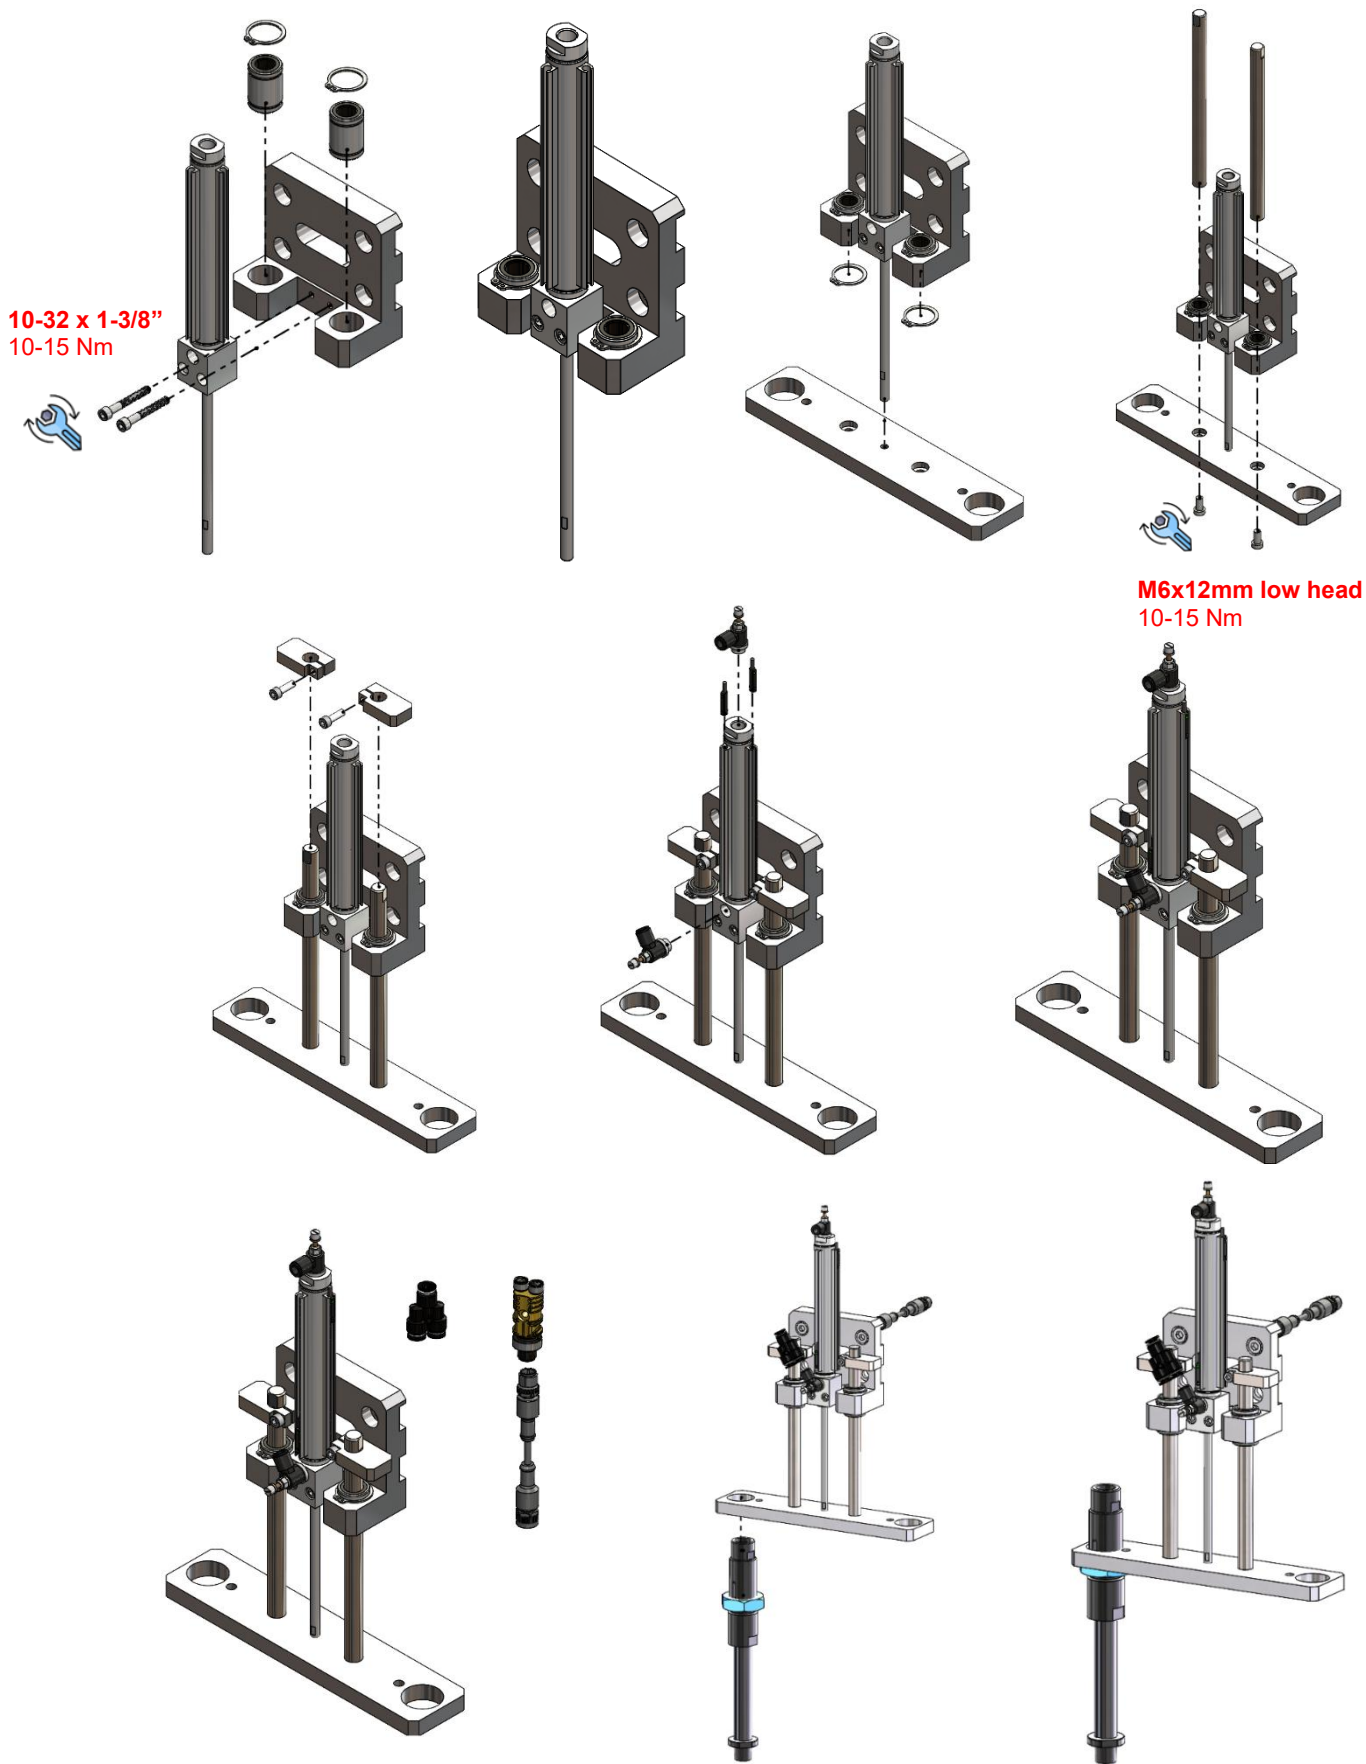

DPS15 BAG GRIPPER





Bag Grippers | Assembly Instruction

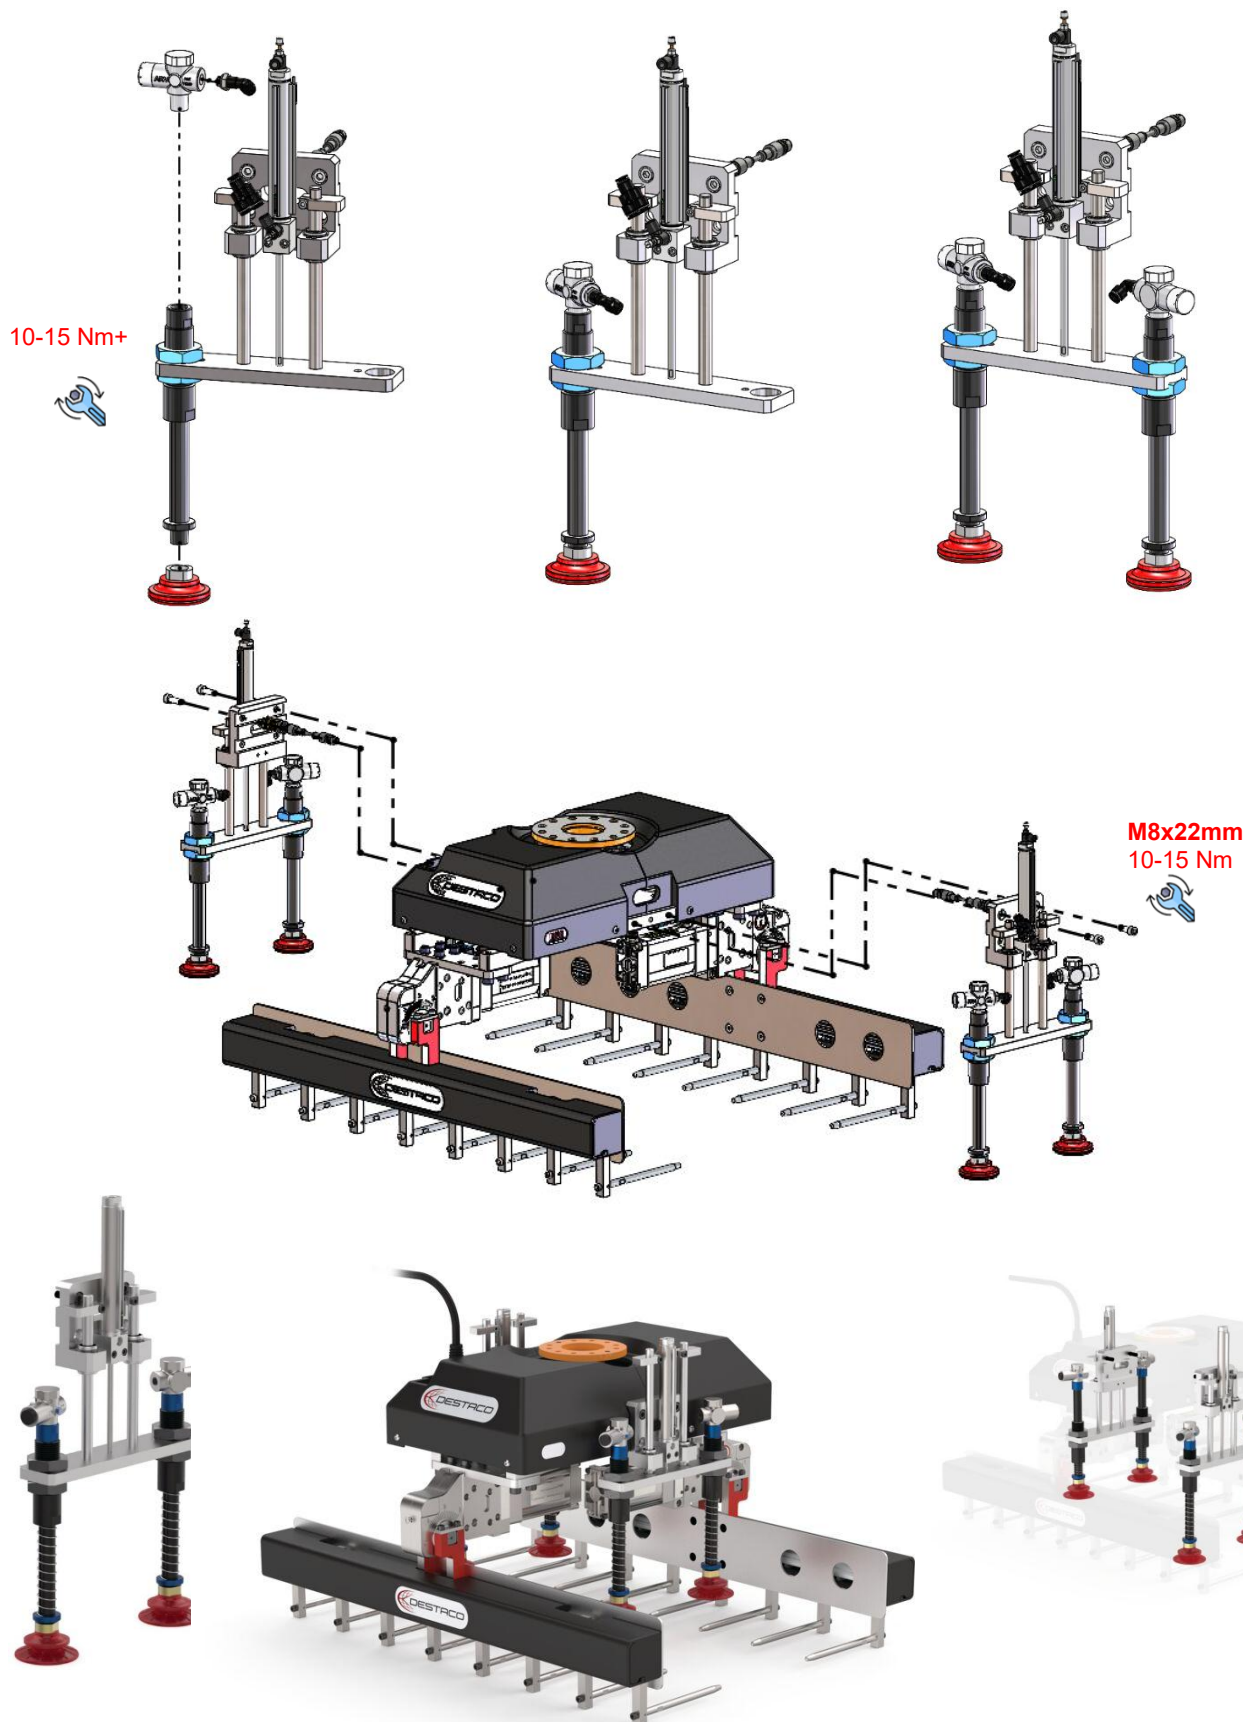


DPS15 BAG GRIPPER

Bag Grippers | Assembly Instruction

7. LED LIGHT UNIT

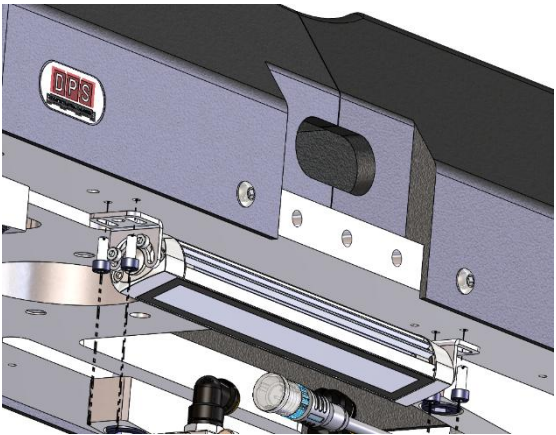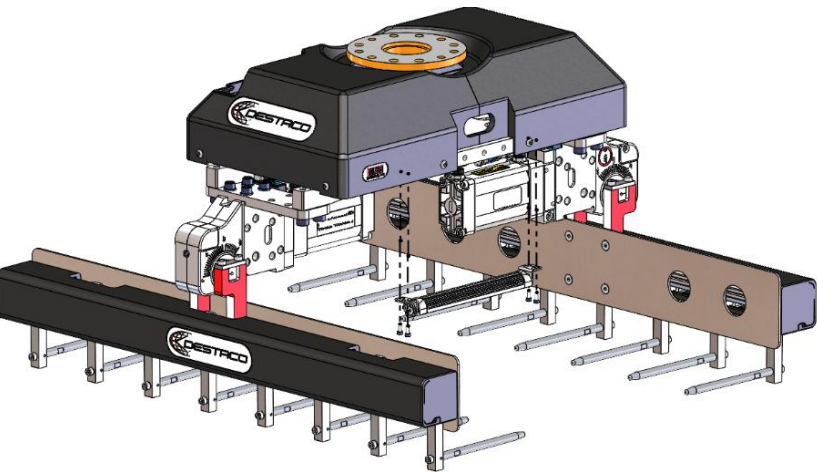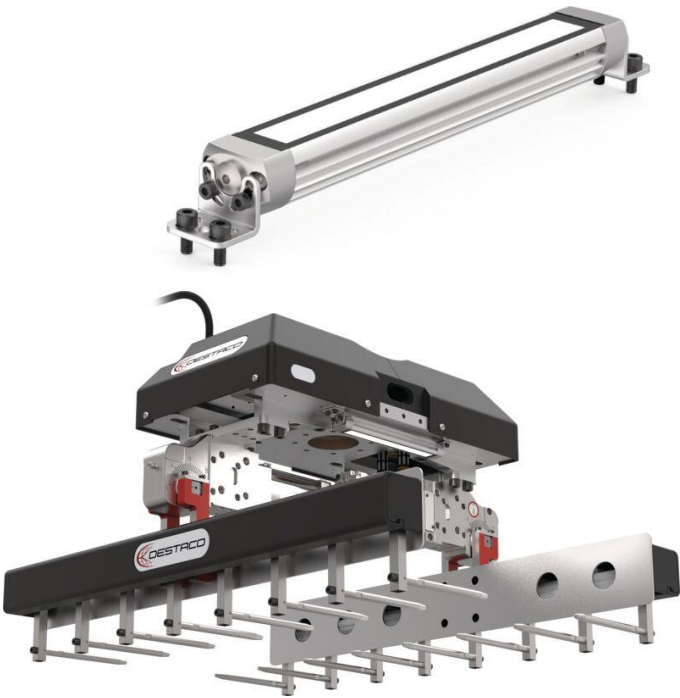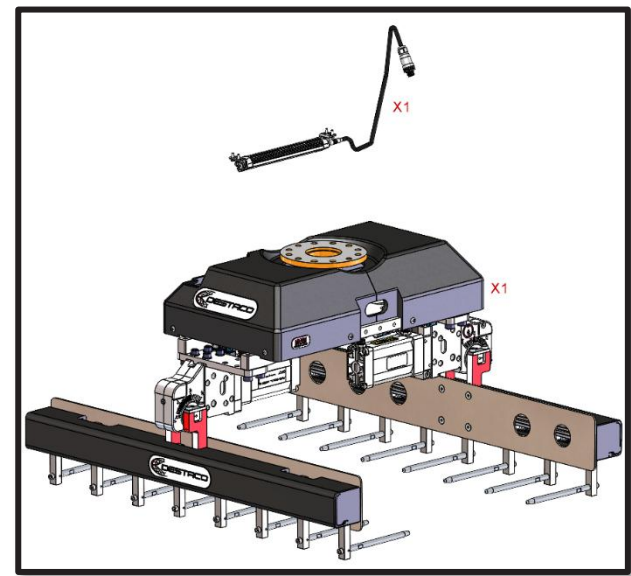

M4x10
10-15 Nm

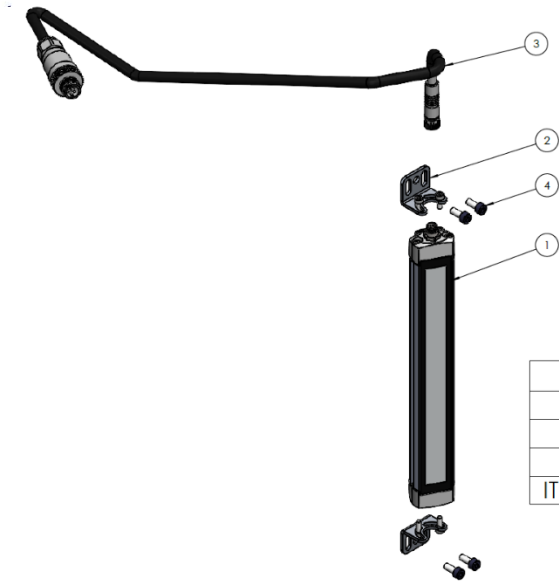


4	SHAM04C10	SHCS,M4*10MM,ALLOY	4
3	DPS-1P-00-L-00-003	M12 A-CODE TO M8 B-CODE CABLE	1
2	DPS-1P-00-L-00-002	TUBELED_MOUNT_BRACKET	2
1	DPS-1P-00-L-00-001	TUBE LED	1
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.

DPS15 BAG GRIPPER

Bag Grippers | Assembly Instruction


8. CONTROL UNIT C1 SCHEMATIC (BASE MODEL)

TURCK I/O JUNCTION BLOCK TO PLC VIA M23 CABLE				
IO PORT #	IO PORT PIN	FUNCTION	M23 PIN	M23 FLY END COLOR
1	2	PNEU CONTROL PWR CLAMP OPEN	7	GREY/PINK
	4	NOT IN USE	15	WHITE
2	2	NOT IN USE	4	RED/BLUE
	4	NOT IN USE	5	GREEN
3	2	NOT IN USE	8	WHITE/GREEN
	4	NOT IN USE	16	YELLOW
4	2	NOT IN USE	14	BROWN/GREEN
	4	NOT IN USE	3	GREY
5	2	NOT IN USE	9	WHITE/YELLOW
	4	NOT IN USE	17	PINK
6	2	NOT IN USE	13	YELLOW/BROWN
	4	NOT IN USE	2	RED
7	2	PWR CLAMP SENSE	10	WHITE/GREY
	4	PWR CLAMP SENSE	11	BLACK
8	2	PWR CLAMP SENSE	18	GREY/BROWN
	4	PWR CLAMP SENSE	1	VIOLET
GND (SHARED)	12	GND	12	GREEN/YELLOW
COM (SHARED)	6	COM	6	BLUE
PWR (SHARED)	19	PWR	19	BROWN

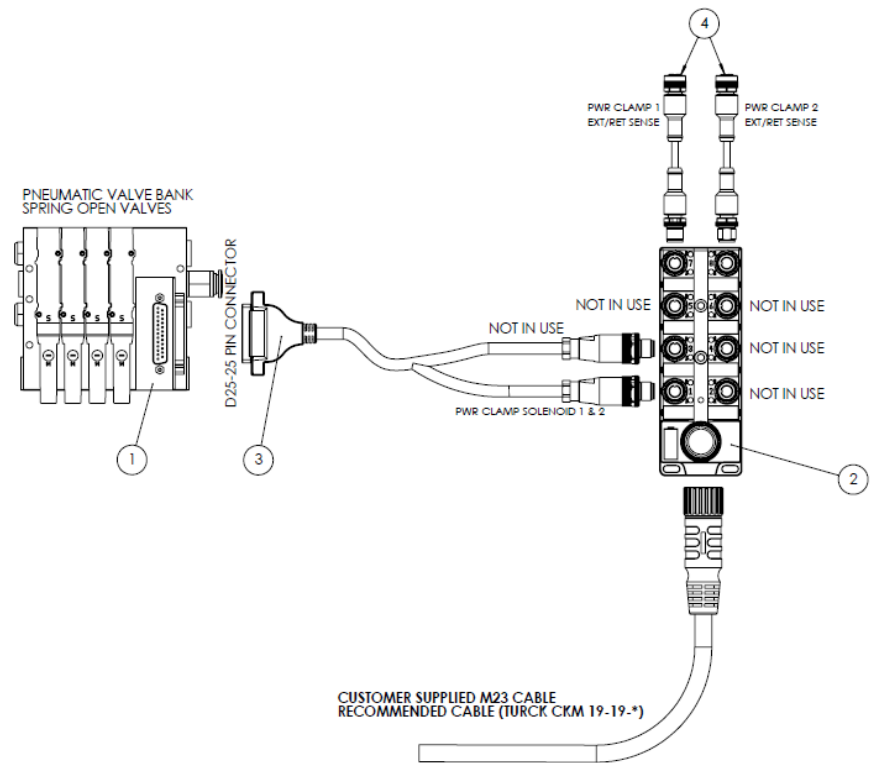

- Use PLUGS (347-8028-02) for open / not used port in Valve pack (VP-4-0-6)


5	347-8028-02	PLUG 1/8 BSPP-NICKEL PLATED	6
4	360-773430342933004-0100	CABLE, M12, 4 PIN CONNECTOR (STRAIGHT)	2
3	CABL-DPS-25	25 PIN D-SUB to M12 4 PIN CABLE	1
2	360-8MB12Z-5P3-CS19	TURCK 19 PIN IO BLOCK	1
1	VP-4-0-6	PNEUMATIC VALVE PACK	1
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.

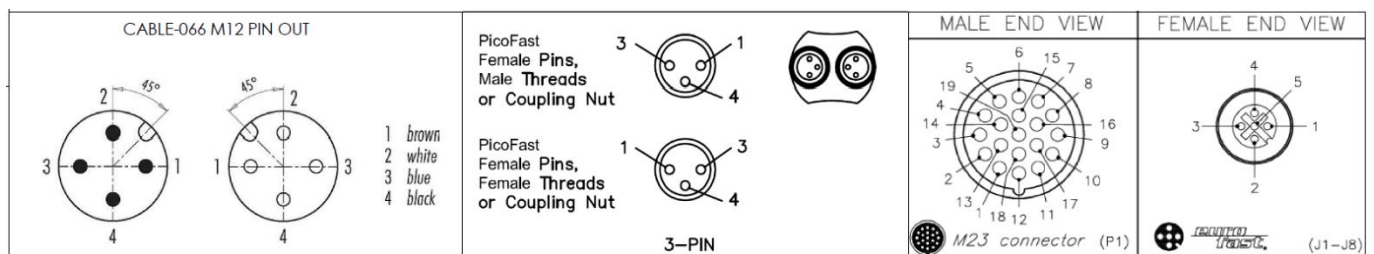

DPS15 BAG GRIPPER


Bag Grippers | Assembly Instruction

9. CONTROL UNIT C2 SCHEMATIC (BASE MODEL)

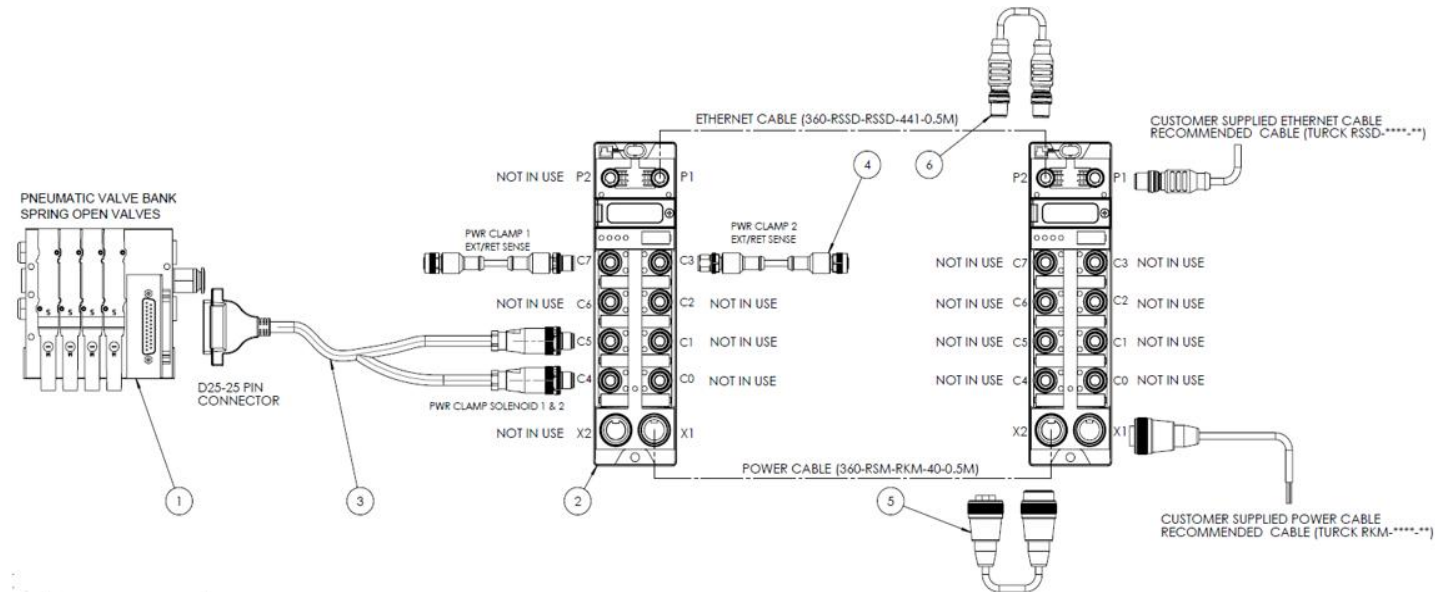

- Use PLUGS (347-8028-02) for open / not used port in Valve pack (VP-4-0-6)

7	347-8028-02	PLUG 1/8 BSPP-NICKEL PLATED	6
6	360-RSSD-RSSD-441-0.5M	ETHERNET CABLE	1
5	360-RSM-RKM-40-0.5M	POWER CABLE	1
4	360-773430342933004-0100	CABLE, M12, 4 PIN CONNECTOR (STRAIGHT)	2
3	CABL-DPS-25	25 PIN D-SUB to M12 4 PIN CABLE	1
2	360-TBEN-L4-8DIP-8DOP	TURCK I/O BLOCK, PNP, 8x8	2
1	VP-4-0-6	PNEUMATIC VALVE PACK	1
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.

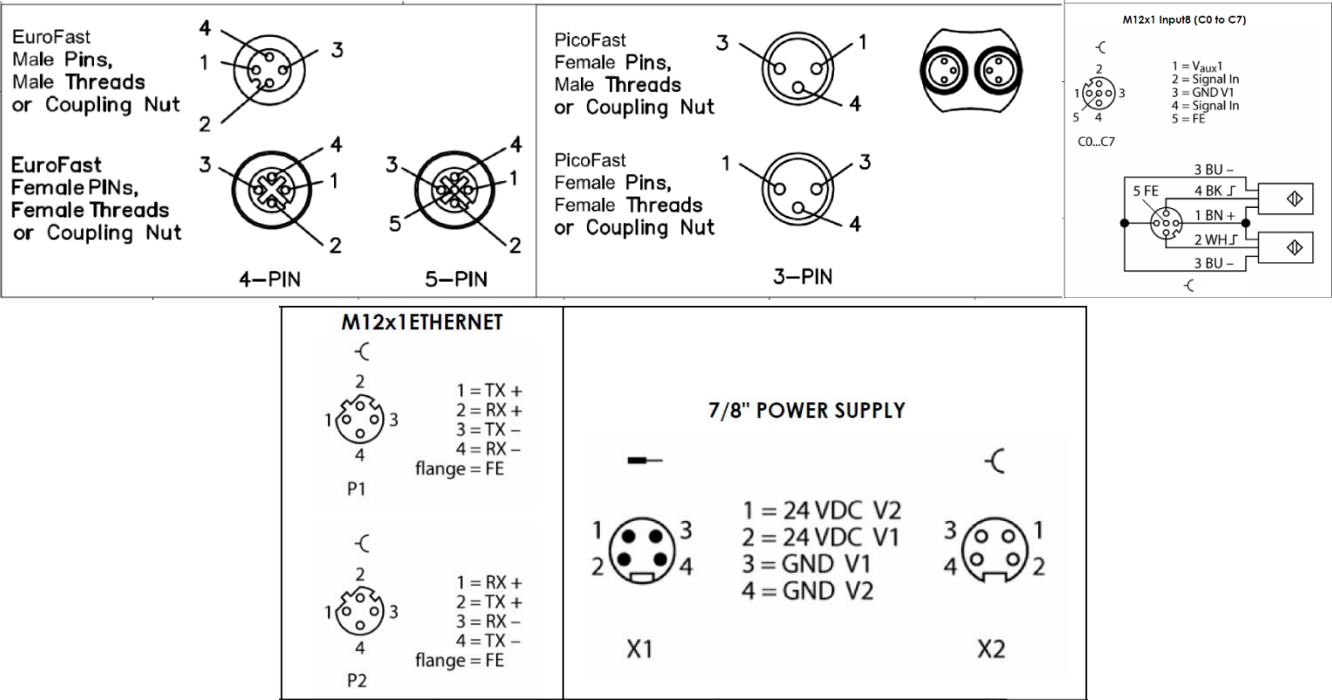

Troubleshooting Problem:

-	Problem	Possible Cause
1	Gripper has lower grip force than normal	• Supply air pressure below specified operating pressure • Air leak at power clamp, tubing, or fitting • Power clamp not reaching full clamped position • Worn or damaged power clamp mechanism • Bent, damaged, or incorrectly installed tines • Bag is positioned incorrectly between the tines • Mechanical obstruction preventing full clamp travel • Width adjustment is too large compared to bag size
2	Power clamp will not actuate	• No compressed air supplied to gripper • Valve island not receiving electrical command • Solenoid valve not switching • Air line kinked, blocked, or disconnected • Power clamp mechanism is mechanically jammed • PLC output or wiring fault • Emergency stop or machine interlock preventing actuation
3	Power clamp only moves partially	• Low air pressure or insufficient airflow • Mechanical interference with tine or linkage • Bent or damaged tine • Contamination inside power clamp mechanism • Flow control adjusted too far closed • Valve not fully shifting • Power clamp requires service
6	One side of gripper actuates but other side does not	• Individual power clamp or valve fault • Power clamp pneumatic plumbing not routed to single valve • Disconnected, damaged or leaking air line • Electrical connection to valve island loose or damaged • Failed position sensor on power clamp • Power clamp mechanism damaged or jammed
7	Gripper will not release the bag	• Power clamp does not receive unclamp command • Valve Island solenoid is stuck or not switching • Exhaust port or muffler is restricted • Residual pneumatic pressure trapped in clamp circuit • PLC sequence is waiting for another interlock or sensor to be met.


DPS15 BAG GRIPPER

Bag Grippers | Assembly Instruction

8	Gripper opens or closes slower than normal	• Low air pressure at gripper • Restricted or kinked pneumatic tubing • Flow control valve incorrectly adjusted • Contaminated valve or pneumatic circuit • Restricted valve exhaust or muffler • Power clamp mechanism contaminated or binding • Excessive load on tines
9	Gripper Motion is harsh or too quick	• Flow control valve adjusted to far in the open position • Supply pressure is above the rated operating pressure • Exhaust flow control is missing or incorrectly installed • Incorrect valve configuration
10	Gripper width adjustment jammed	• Width adjustment lugs are still torqued • Lower clamping assembly is binding or twisted • Debris jamming slot for width adjustment
11	Gripper makes abnormal noise during operation	• Power clamp or linkage is dry or contaminated • Loose mounting of hardware • Tines are bend warped or otherwise not in proper position • Pneumatic exhaust restriction causing abnormal clamp operation • Pneumatic island leaking or bleeding air • Covers are loose or actuation is too fast causing vibration
12	Gripper unexpectedly drops or loses the bag or fails to close	• Insufficient clamping force • Bag orientation is wrong • Incorrect tine placement • Bag is undersized for width adjustment • Tine surface and guide plates contaminated or coated in oil like substances • Bag is undersized, improperly positioned, or damaged
13	Excessive air leakage from gripper	• Losse pneumatic fittings • Damaged or cut tubing • Push to connect fittings not fully seated • Damage to pneumatic fitting threads

DPS15 BAG GRIPPER

Bag Grippers | Assembly Instruction

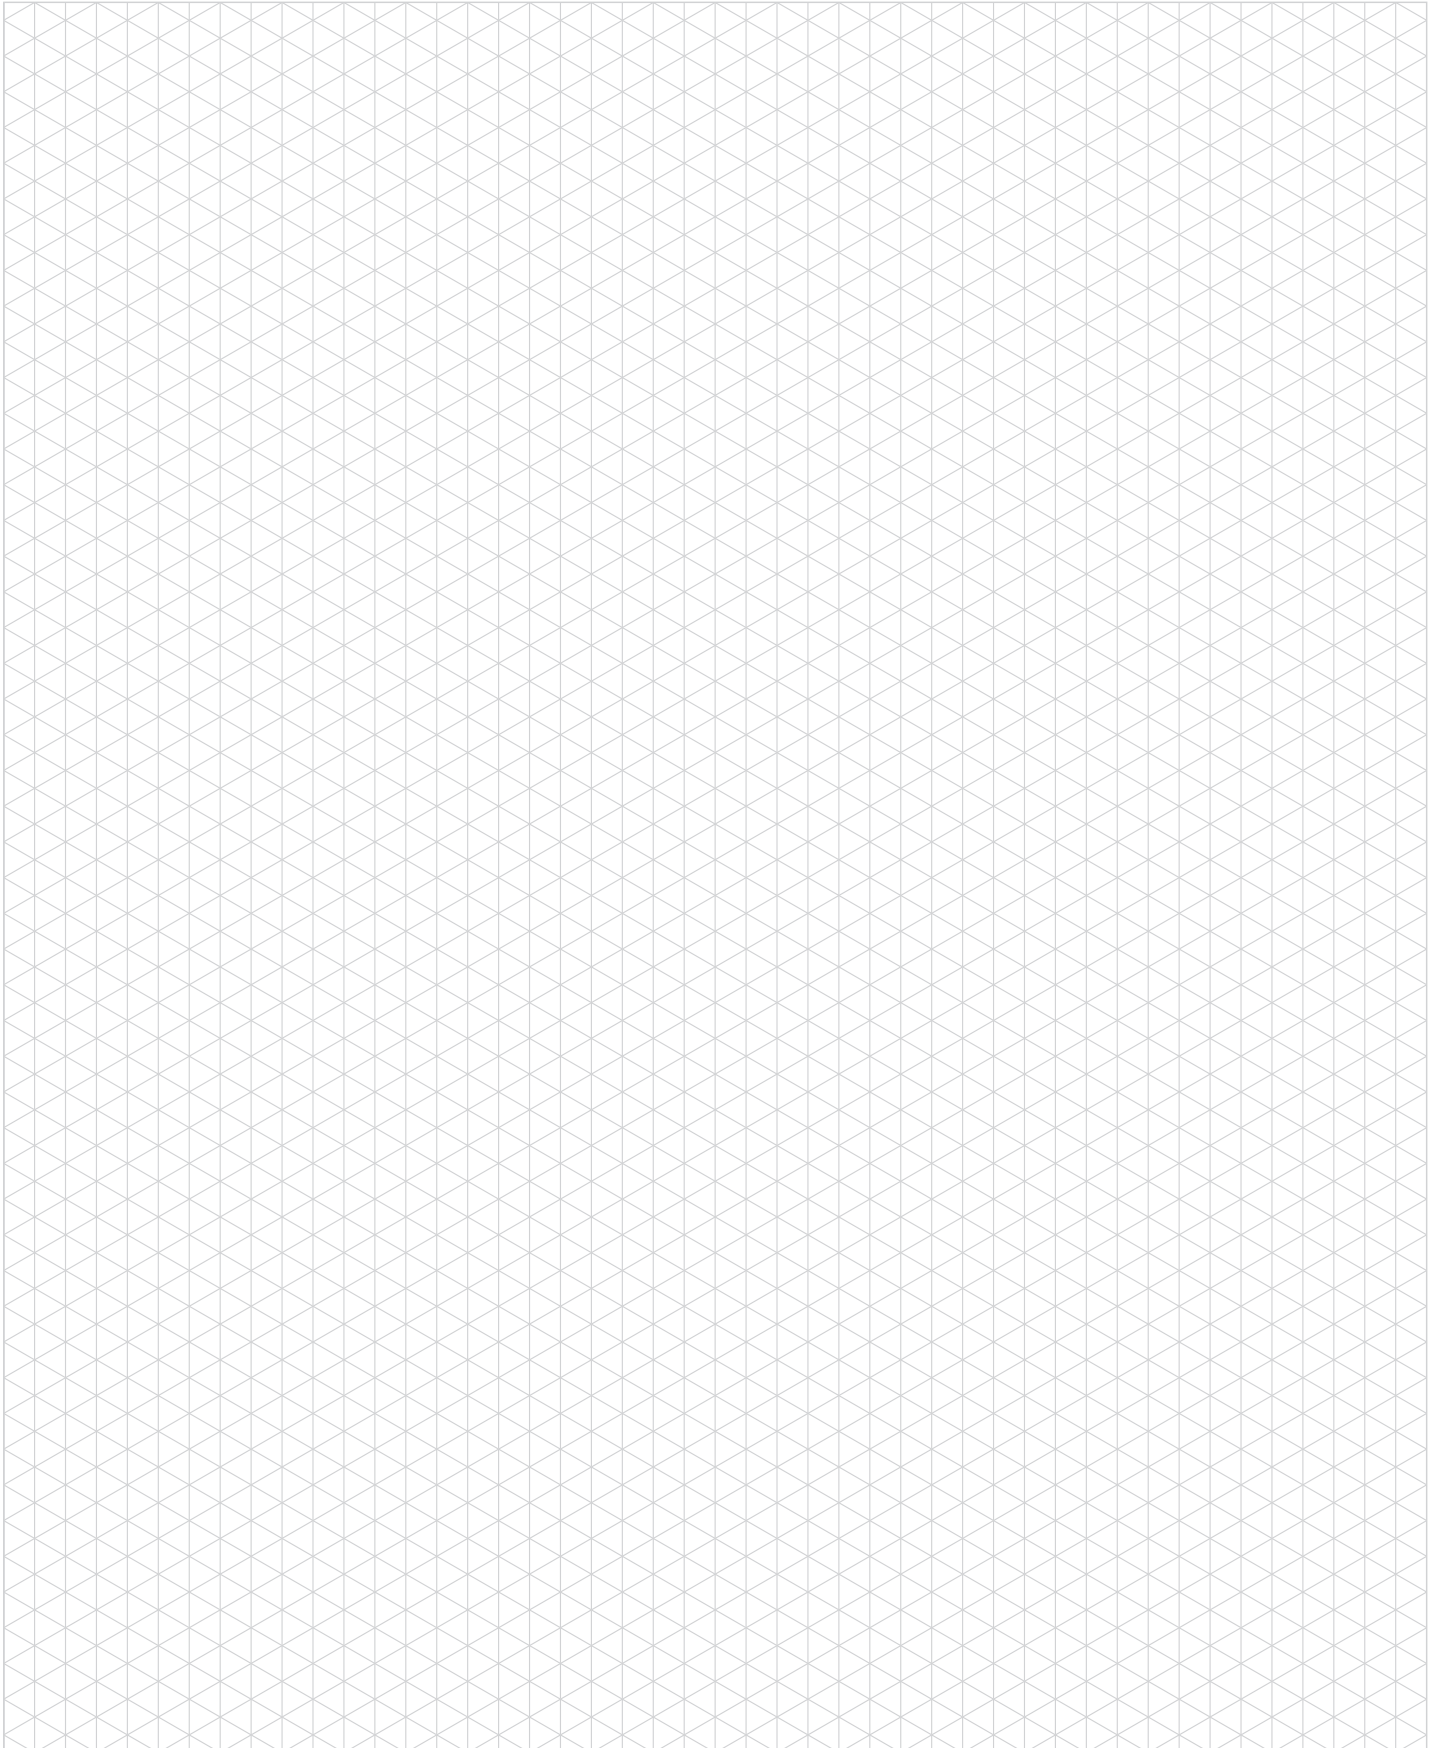

GLOBAL SALES CONTACTS

CORPORATE HEADQUARTERS



US

+1-888-DESTACO
+1-248-836-6700
northamerica@destaco.com

THE BEST PRODUCTS.
UNMATCHED SERVICE.
WORLDWIDE.



DE

+49-6171-705-0
europe@destaco.com



SP

+34-936361680
spain@destaco.com



PL

+48-506002115
poland@destaco.com



IN

+91-80-41123421-426
india@destaco.com



MX

mexico@destaco.com



FR

+33-4-7354-5001
france@destaco.com



CN

+86-21-2411-2678
china@destaco.com



NL

+31-297285332
benelux@destaco.com



SG

singapore@destaco.com



UK

+44-1902-797980
uk@destaco.com



TH

+66-2326-0812-6
asia@destaco.com



CZ

+420-603-577-341
czech@destaco.com



CA


canada@destaco.com



Click or Scan
to learn more
about Stabilus.



Industries

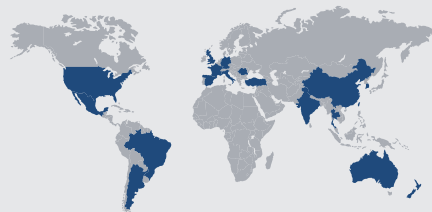


44 Locations in 19 Countries



8K Employees



2025 Revenues

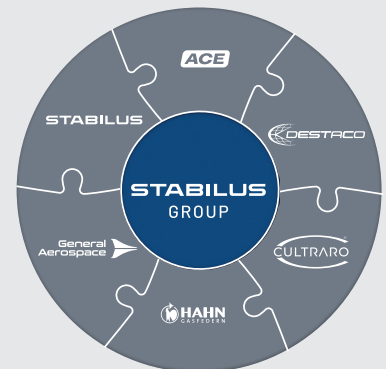

Expert Brands