 


# La Crosse®

## COLOR WEATHER STATION

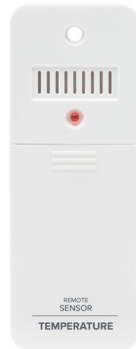

\*AC adapter not included

 
MODEL: 308-159/308-66677

### POWER UP

Thank you for protecting the planet by using your own power brick!

1. Insert 2-AAA batteries into your Outdoor Sensor.
2. Insert the 5.0 volt USB power cord into your USB power brick (not included), then into the side of your Weather Station.  
Optional: Insert 2-AAA batteries into your station.
3. Adjust time and date settings on the station.
4. Once the Outdoor Sensor is reading to your station, place it outside in a shaded location.

Watch our sensor mounting video: [bit.ly/th\\_sensor\\_mounting](http://bit.ly/th_sensor_mounting)

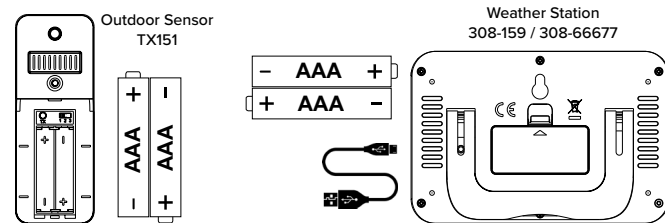

### BACKLIGHT

Power Cord:

- Hold the LCD LIGHT button until the station beeps to turn the continuous Backlight ON or OFF.
- When the Backlight is off, press any button to turn it on for about 8 seconds.

 
**Batteries Only:** Press any button to activate the backlight for 8 seconds.

### SETTINGS

1. Press the SET/ALARM button so the word "TIME" shows in the upper right corner.
2. With the word "TIME" showing in the upper right corner, hold the SET/ALARM button to enter the main Settings Menu.
3. Once the settings begin flashing, let go of the SET/ALARM button and use the + or - button to adjust, and SET/ALARM to confirm or exit.

Settings Menu order:

- 12/24 Hour Time
- Hour
- Minute
- Year
- Month
- Date
- Language  
(ENG, GER, FRE, SPA, ITA, DUT, DAN)

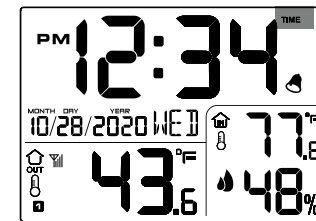

**Language:** The language selected in this menu will adjust the Weekday readout and menu items.

**Weekday:** Weekday sets automatically when Year, Month and Date are set.

### FAHRENHEIT OR CELSIUS

 
Press the  $\frac{F}{C}$  button to select Fahrenheit or Celsius temperature display.

### ALARM

1. Press the SET/ALARM button so the word "ALARM" shows in the upper right corner.
2. With the word "ALARM" showing in the upper right corner, hold the SET/ALARM button to enter Alarm Settings.
3. Use the + or - button to adjust, and SET/ALARM to confirm and exit.


Alarm Settings Order:

- Hour
- Minute

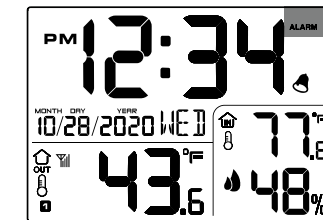


Activate/Deactivate Alarm:

Setting the alarm time and activating the alarm are separate actions.

- Press the ALARM ON/OFF button to activate or deactivate the alarm.
- When active the Alarm Icon  will show.

Silence Alarm for 24-hours:

- When the alarm sounds, press any button to silence the alarm for 24-hours.
- The Alarm Icon  will continue to show.

## MIN/MAX READINGS

The MIN/MAX readings are all time values from when the station was first powered on or last reset.


 

1. Press the MIN/MAX button to view indoor & outdoor MAX records.
2. Press MIN/MAX again to view MIN records.

### Reset Records:








1. Press the MIN/MAX button to view records.
2. Hold the MIN/MAX button to reset all Indoor and Outdoor records to current readings.





## SEARCH FOR OUTDOOR SENSOR

- If the sensor loses connection to the station for any reason, the station will show dashes after 3 minutes.
- To search for your Outdoor Sensor, hold the  button until the Reception Icon  animates.
- When the sensor is connected, the Reception Icon  will flash once when new signal is received.
- If your outdoor sensor is unable to reconnect on its own, a reset of your station may be necessary. Use a paper clip to press the RESET button on the back of the station.



 


## BUTTON FUNCTIONS

	Power Cord: Hold to turn off Backlight. Hold again for continuous Backlight.
	Press to view Sensor Channels or initiate the Auto-scroll feature. <b>Settings Menu:</b> Press to increase values. Hold to search for Outdoor Sensor.
	Press to select Time or Alarm Mode, and to confirm settings in menus. Hold to enter Time or Alarm Settings.
	Press to select Fahrenheit or Celsius Temperature display. <b>Settings Menu:</b> Press to decrease values.
	Press to view indoor and outdoor MAX or MIN Records. Hold to reset MAX and MIN Records.
	Press to activate or deactivate Alarm.
	Press to Factory Reset Station

## LOW BATTERY INDICATOR

- When the Battery Indicator  shows next to the outdoor temperature, replace batteries in the Outdoor Sensor.
- When the Battery Indicator  shows next to the indoor temperature, replace batteries in the Weather Station.

## CHANNEL INDICATOR

- This station can show data for up to 3 remote sensors. The Channel Indicator  will highlight which sensor data is being displayed.
- The Channel Number on the station should match the Channel  selected on the sensor.
- The Auto-scroll Icon  shows when the station cycles through all three channels.  Press the  button to start or stop the auto-scroll. Visit [bit.ly/308-159\\_parts](http://bit.ly/308-159_parts) for add-on sensor availability.

## SPECIFICATIONS

### Station 308-159:

**Temperature Range:** 14°F to 122°F (-10°C to 50°C)

**Humidity Range:** 20% to 95% RH

**Power Requirements:** 5V/1A USB Power Cord\*

\*Thank you for protecting the planet by using your own power brick!

**Optional:** 2 "AAA" LR3 Batteries (not included)

**Battery Life:** Over 12 months with reputable batteries

**Dimensions:** 5.45" x 0.91" x 3.62" (13.85 cm x 2.3 cm x 9.2 cm)

### Sensor TX151:

**Temperature Range:** -40°F to 140°F (-40°C to 60°C)

**Transmission Range:** Over 197 feet (60 meters) in open air RF 433MHz

**Update Interval:** About every 50 seconds

**Power Requirements:** 2 "AAA" LR3 Batteries (not included)

**Battery Life:** Over 12 months with reputable batteries

**Dimensions:** 4.72" x 0.79" x 1.77" (12.0 cm x 2.0 cm x 4.5 cm)

## WE'RE HERE TO HELP!

If you require additional support, get in touch with our friendly customer support team based out of La Crosse, WI.

**Phone:** 1-608-782-1610

**Self Help:** [bit.ly/308-159\\_support](http://bit.ly/308-159_support)

**Online:** [bit.ly/contact\\_techsupport](http://bit.ly/contact_techsupport)

Our knowledgeable customer support team is available:  
Monday-Friday, 8am-6pm CST.

## STAY IN TOUCH!

Ask questions, watch set up videos, and provide feedback on our social media outlets. Follow La Crosse Technology on Youtube, Facebook, and Instagram.



**WARNING** This product can expose you to chemicals including acrylonitrile, 1,3-butadiene, and styrene, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to: [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

## WARRANTY INFO

La Crosse McCormick, LLC provides a 1-year limited warranty on this product against manufacturing defects in materials and workmanship. Under the Song-Beverly Act, in the state of California, the warranty on this item becomes effective on the date of delivery.

If a defect that is covered by this warranty arises during the warranty period, promptly return the product (postage prepaid) with proof of purchase showing the date of purchase to the following address and such defects will be repaired, or the product will be replaced at La Crosse McCormick, LLC option without charge.

La Crosse McCormick Warranty Department 2830 South 26th Street, La Crosse, Wisconsin 54601

## CARE + MAINTENANCE

- Do not mix old and new batteries.
- Do not mix Alkaline, Lithium, standard, or rechargeable batteries.
- Always purchase the correct size and grade of battery most suitable for intended use.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries have with correct polarity (+ / -).
- Remove batteries from equipment that will not to be used for an extended period.
- Promptly remove expired batteries.

## FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**CAUTION!** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.