

SPECIFICATIONS

Battery Requirements: 1 AA (IEC, LR6, 1.5V) required in the Battery Compartment (Alkaline recommended)

Battery Life: 12 months

Temperature Range: 0°F to 120°F

Humidity Range: 10% RH to 90% RH

Dimensions: 15" x 2.12"

WARRANTY & SUPPORT

This product is warranted to be free from defects in material and workmanship under normal use and service for a period of two years from the date of sale to the customer. Warranty will not apply to defects resulting from abuse, accidents, or misuse. If a defect that is covered by this warranty arises during the warranty period, promptly return the clock (postage prepaid) with proof of purchase showing the date the clock was purchased to the following address and such defects will be repaired, or the products will be replaced at

La Crosse Clock Company option without charge.

La Crosse Clock Company
Warranty Department
2830 South 26th Street.
La Crosse, WI 54601

For online support visit: bit.ly/contact_techsupport

Patents: www.lacrossetechnology.com/pages/patent

CA WARNING:

This product can expose you to chemicals including acrylonitrile, butadiene, and styrene, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to: www.P65Warnings.ca.gov

Made in China - Printed in China

LA CROSSE
CLOCK CO.


15-Inch Indoor/Outdoor Payton Wall Clock



Model: 404-3015CC
DC: 081622


MOVEMENT COVER

1. **OPEN:** Turn the cover counterclockwise until the head is aligned with the arrow. Then lift the cover off the clock.
2. **CLOSE:** Place the cover in the open position. Then turn it clockwise until the head is back on top, directly under the hanger hole.

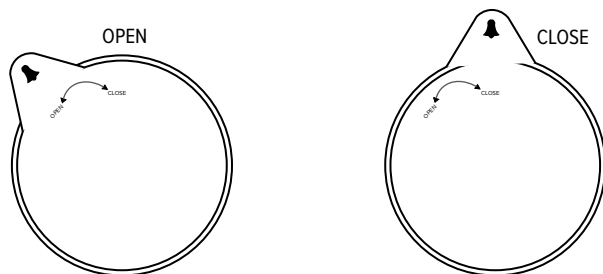

POWER UP

1. Insert 1 fresh AA alkaline battery, according to polarity, into the snug Battery Compartment.
2. Rotate the Time Set Wheel to set the time.
3. Mount on a wall and enjoy!

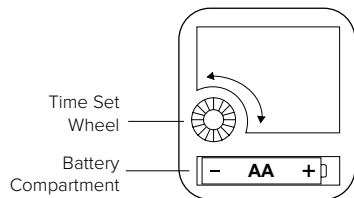

Note: The quartz movement will keep the clock running accurately. If the clock does not operate, or steadily loses time, replace the battery.

THERMOMETER / HYGROMETER

- Your thermometer and hygrometer have been pre-calibrated and should not need adjustment.
- Before manually adjusting your sensors, allow the clock to sit for at least 2 hours in the same location.
- To manually adjust your sensors, gently turn the temperature or humidity sensor adjustment on the back of the clock until desired setting is reached.

MOUNTING

Indoor: Mount the clock on a wall using the hanging hole on the back.

Outdoor: Choose a location with an overhang to protect the clock from the overhead sun or standing snow or rain. A shaded location will prevent inaccurate temperature readings. Mount the clock on a wall using the hanging hole on the back.

CARE & MAINTENANCE

Battery replacement instruction:

When batteries of different brand or type are used together, or new and old batteries are used together, some batteries may be over-discharged due to a difference of voltage or capacity. This can result in venting, leakage, and rupture and may cause personal injury.

- Always purchase the correct size and grade of battery suitable for the intended use.
- Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.
- Clean the battery contacts and those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from product during periods of non-use. Battery leakage can cause corrosion and damage to this product.
- Remove used batteries promptly.
- For recycling and disposal of batteries, and to protect the environment please check the internet or your local phone directory for local recycling centers and / or follow local government regulations.

Learn more from our video: bit.ly/wallclock_setup