

WARRANTY & SUPPORT

This product is warranted to be free from defects in material and workmanship under normal use and service for a period of two years from the date of sale to the customer. Warranty will not apply to defects resulting from abuse, accidents, or misuse. If a defect that is covered by this warranty arises during the warranty period, promptly return the clock (postage prepaid) with proof of purchase showing the date the clock was purchased to the following address and such defects will be repaired, or the products will be replaced at La Crosse Clock Company option without charge.

La Crosse Clock Company
Warranty Department
2830 South 26th Street.
La Crosse, WI 54601

For Online support visit:

www.lacrossetechnology.com/support

Patents: www.lacrossetechnology.com/pages/patents

 CA WARNING:

This product can expose you to chemicals including acrylonitrile, butadiene, and styrene, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to:

www.P65Warnings.gov

Made in China - Printed in China

LA CROSSE
CLOCK CO.

15.1 - Inch Gear Wall Clock



Model: 404-3439

DC: 071323

POWER UP

1. Pull up on the OPEN end of the Battery Cover and slide off to reveal the battery compartments.
2. Insert 1 fresh AA alkaline battery, according to polarity, into the Movement.
3. Rotate the Time Set Wheel to set the time.
4. Insert 3 fresh AA alkaline batteries, according to polarity, to operate the moving gears.
4. Mount on a wall and enjoy!


Learn more from our video:
bit.ly/wallclock_setup

Note: The quartz movement will keep the clock running accurately. If the clock does not operate, or steadily loses time, replace the battery in the movement

MOUNTING

Use the Hanger Hole on the back to mount the clock.

For Moving Gears

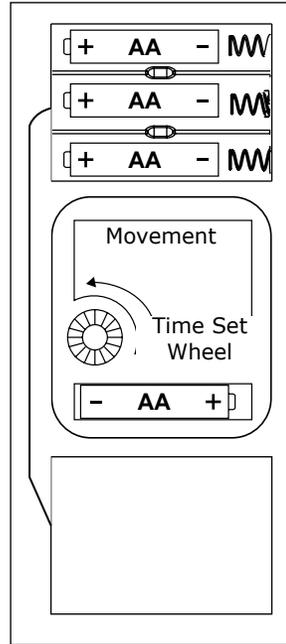

SPECIFICATIONS

Battery Requirements: 1 AA (IEC, LR6, 1.5V) required in the Movement (Alkaline recommended)

Optional Moving Gears: 3 AA (IEC, LR6, 1.5V) batteries into the Moving Gear compartment.

Battery Life: Over 12 months for the clock

Dimensions: 15.12" x 2.55" x 15.12" (38.5cm x 6.5cm x 38.5cm)

Movement: Step

Lens: Glass

CARE & MAINTENANCE

When batteries of different brand or type are used together, or new and old batteries are used together, some batteries may be over-discharged due to a difference of voltage or capacity. This can result in venting, leakage, and rupture and may cause personal injury.

- Always purchase the correct size and grade of battery most suitable for the intended use.
- Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from product during periods of non-use. Battery leakage can cause corrosion and damage to this product.
- Remove used batteries promptly.
- For recycling and disposal of batteries, and to protect the environment, please check the internet or your local phone directory for local recycling centers and/or follow local government regulations.