 


LA CROSSE[®]
TECHNOLOGY

 
 
14.1 - Inch Insta-Set Wi-Fi Wall Clock

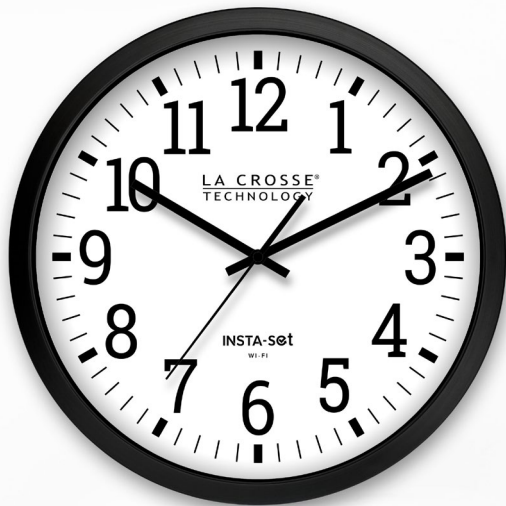

MODEL: 404-3836

Power Up

1. Insert 2-AA batteries Into your clock according to polarity markings.
2. Wait until the hands spin and stop at 12:00. Wi-Fi Connection will start.
3. On your phone, open the Wi-Fi Settings and select the **LT CLOCK** network.
4. Follow the prompts on the pop-up window to enter settings.

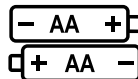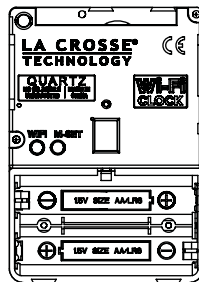

Pop-up Window

1. Enter your 2.4Ghz Network Name and Password.
2. Use the **CHANGE** button to select your time zone. (Do this even if your Time Zone is already showing).
3. Select your Daylight Saving Time Setting.
AUTOMATIC: Changes Spring and Fall.
DST ON: Daylight Saving Time all year.
DST OFF: Standard Time all year.
4. Select **SAVE**. Your clock will set to network time.

LA CROSSE[®]
TECHNOLOGY

WIFI CLOCK SETUP

Select a Wi-Fi Network
Note: This device only works with 2.4Ghz Wi-Fi Networks in range

Wi-Fi Network:

Network Name

Password

Enter Password

Time Zone

ET

Daylight Saving Time (DST) Settings

Automatic

Normal Function

- Your clock will connect one time each day to check the time setting.
- Between Midnight and 6:00am, The Second Hand will stop at 12:00, and not move. This is a battery saving function. The minute and hour hand will continue to move and keep time. The Second hand will start moving again at 6:00am.

Battery Change

- When all three hands stop at 1:50, it is time to replace the batteries.
- After a battery change the hands will move to the 12:00 position. The clock will automatically connect to the same Wi-Fi Network, if the password has not changed.

1. If the clock does not automatically connect, hold the **WIFI** button.
2. On your phone, open the Wi-Fi Settings and select the **LT CLOCK** network.
3. Follow the prompts on the pop-up window to enter settings.

Manual Setting

If the clock goes to 12:00 and does not receive the WIFI signal to set, you can manually set the time.

1. Press and release the **M-SET** button to move the hands slowly. Hold the **M-SET** button to move the hands quickly.
2. Once set the clock will run as a normal quartz clock.

Note: When in manual set mode, remove and reinsert the batteries to return to WIFI mode.

Stay in Touch!

Ask questions, watch set up videos, and provide feedback on our social media outlets. Follow La Crosse Technology on Youtube, Facebook, and Instagram.



We're Here to Help

Still have questions? Use the links below to find additional resources or reach out to our staff directly.

Self-Help: bit.ly/404-3836_support

Online Support: bit.ly/contact_techsupport

Phone: 608-782-1610

Our friendly support team based in La Crosse, WI is available Mon-Fri, 9am-6pm CST.

SCAN HERE

Additional info.
and Support



Warranty & Patents

La Crosse Technology Ltd. provides a 1-year limited-time warranty on this product relating to manufacturing defects in materials & workmanship. Per the Song-Beverly Act, in the state of California, the warranty on this item becomes effective on the date of delivery.

La Crosse Technology, Ltd, 2830 S. 26th St., La Crosse, WI 54601

For Full Warranty Details, Visit: www.lacrossetechnology.com/pages/warranty

Patents: www.lacrossetechnology.com/pages/patents

⚠ WARNING: This product can expose you to chemicals including acrylonitrile,

1, 3-butadiene, and styrene, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to:

www.P65Warnings.ca.gov

Specifications

- **Time Digit Height:** 1.54 in. (3.91 cm)
- **Quartz Movement:** Silent Sweep (WiFi)
- **Lens Type:** Glass
- **Numerals:** Arabic
- **Construction:** Plastic, Glass
- **Placement:** Indoor Only
- **Mounting Type:** Wall Hanging
- **Power Requirements:** 2 "AA" Alkaline Battery (Not Included)
- **Battery Life:** 12+ Months
- **Clock Face Diameter:** 12.6 in. (32.0cm) Diameter
- **Dimensions:** 14.06 inch diameter x 1.93 inch deep (35.7cm diameter x 4.9cm deep)

Care & Maintenance

When batteries of different brand or type are used together, or new and old batteries are used together, some batteries may be over-discharged due to a difference of voltage or capacity.

This can result in venting, leakage, and rupture and may cause personal injury.

- Never mix Standard, Alkaline, Lithium and Rechargeable Batteries.
- Do not mix old and new batteries.
- Always purchase the correct size and grade of battery most suitable for the intended use.
- Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from product during periods of non-use. Battery leakage can cause corrosion and damage to this product.
- Remove used batteries promptly.
- For recycling and disposal of batteries, and to protect the environment, please check the internet or your local phone directory for local recycling centers and/or follow local government regulations.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and consider removing the no-collocation statement.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.