

LA CROSSE
CLOCK CO.

14-Inch Rowan

Indoor/Outdoor Wall Clock




Model: 433-3836 / 433-3836A

Remove/Replace Battery Cover

To Remove: Remove the two screws securing the battery cover to the clock, then lift off the cover to access the clock movement and battery compartment.


To Replace: Position the battery cover back on the clock and secure it with the two screws.

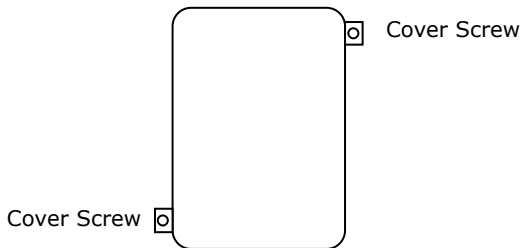

Power Up

1. Insert 1 fresh AA alkaline battery (not included), according to polarity, into the Movement.
2. Rotate the Time Set Wheel to set the time.
3. Mount on a wall and enjoy!

Learn more from our video: bit.ly/wallclock_setup

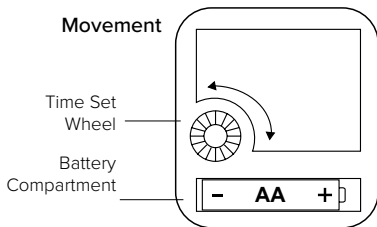

Note: The quartz movement will keep your clock running accurately. Replace the battery if the clock does not operate or steadily loses time.

Thermometer & Hygrometer

- The Thermometer and Hygrometer are self-adjusting and do not need a battery to operate.
- Allow 24 hours for proper automatic adjustment.

Mounting

1. Be sure the Battery Cover is secure.
2. Use the integrated Hanging Hole on the back to mount the clock on a wall.

Specifications

Time Digit Height: 1.42 in. (3.61 cm)

Movement: Quartz - Step Motion

Numerals: Arabic (1-12)

Lens Type: Glass

Construction: Plastic, Glass, Metal

Placement: Indoor/Outdoor

Mounting Type: Wall Mount

Temperature Range: -40°F to 140°F

Humidity Range: 0% to 100%

Power Requirements: 1 "AA" Alkaline Battery (Not Included)

Battery Life: 12+ Months

Dimensions: 14.0 in (35.6cm) Diameter 2.05 in. (5.2 cm) Depth

Care & Maintenance

When batteries of different brand or types are used together, or new and old batteries are used together, some batteries may be over-discharged due to a difference of voltage or capacity. This can result in venting, leakage, and rupture and may cause personal injury.

- Do Not Mix Old and New Batteries.
- Do Not Mix Alkaline, Standard, or Rechargeable Batteries.
- Always purchase the correct size and grade of battery most suitable for the intended use.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from products during periods of non-use. Battery leakage can cause corrosion and damage to this product.
- Remove used batteries promptly.
- For recycling and disposal of batteries, and to protect the environment, please check the internet or your local phone directory for local recycling centers and/or follow local government regulations.

Warranty & Support

La Crosse McCormick, LLC provides a 2-year limited warranty on this product against manufacturing defects in materials and workmanship. Under the Song-Beverly Act, in the state of California, the warranty on this item becomes effective on the date of delivery.

If a defect that is covered by this warranty arises during the warranty period, promptly return the product (postage prepaid) with proof of purchase showing the date of purchase to the following address and such defects will be repaired, or the product will be replaced at La Crosse McCormick, LLC option without charge.

La Crosse Clock Company
Warranty Department
2830 South 26th Street.
La Crosse, WI 54601

For Online support visit: bit.ly/433-3836_support

Warranty: www.lacrossetechnology.com/pages/warranty-lm

Scan Here



Stay in Touch!

Ask questions, watch set up videos, and provide feedback on our social media outlets. Follow La Crosse Technology on Youtube, Facebook, and Instagram.



⚠ WARNING: This product can expose you to chemicals including acrylonitrile, 1, 3-butadiene, and styrene, which are known to the State of California to cause cancer and birth defects or other reproductive harm.

For more information go to: www.P65Warnings.ca.gov