

WARRANTY & SUPPORT

This product is warranted to be free from defects in material and workmanship under normal use and service for a period of two years from the date of sale to the customer. Warranty will not apply to defects resulting from abuse, accidents, or misuse. If a defect that is covered by this warranty arises during the warranty period, promptly return the clock (postage prepaid) with proof of purchase showing the date the clock was purchased to the following address and such defects will be repaired, or the products will be replaced at La Crosse Clock Company option without charge.

La Crosse Clock Company, Warranty Department,
2830 South 26th Street., La Crosse, WI 54601

For Online support visit: www.lacrossetechnology.com/support

CARE + MAINTENANCE

Battery replacement instruction:

When batteries of different brand or type are used together, or new and old batteries are used together, some batteries may be over-discharged due to a difference of voltage or capacity. This can result in venting, leakage, and rupture and may cause personal injury.

- Always purchase the correct size and grade of battery suitable for the intended use.
- Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.
- Clean the battery contacts and those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from product during periods of non-use. Battery leakage can cause corrosion and damage to this product.
- Remove used batteries promptly.
- For recycling and disposal of batteries, and to protect the environment please check the internet or your local phone directory for local recycling centers and / or follow local government regulations.



CA WARNING:

This product can expose you to chemicals including acrylonitrile, butadiene, and styrene, which are known to the State of California to cause cancer and birth defects or other reproductive harm.

For more information, go to: www.P65Warnings.ca.gov

LA CROSSE
CLOCK CO.

15.5-INCH INDOOR/OUTDOOR LIGHTED LEAVES WALL CLOCK




Model: 435-3239

DC: 020722

POWER UP CLOCK

1. Remove Round Battery Cover to access the clock movement and battery compartment.
2. Insert 1 AA battery into the movement in the center of the clock.
3. Spin the time set wheel to set the time.

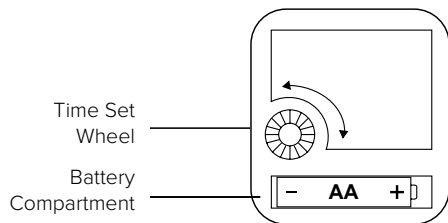

Note: The quartz movement will keep the clock running accurately. If the clock does not operate, or steadily loses time, replace the battery.

Learn more from our video: bit.ly/wallclock_setup

Thermometer/Hygrometer

- Your thermometer and hygrometer (sensors) have been pre-calibrated and should not need adjustment.
- Before manually adjusting your sensors, allow the clock to sit for at least 2 hours in the same location.
- To manually adjust your sensors, gently turn the temperature or humidity sensor adjustment on the back of the clock until desired setting is reached.

POWER UP LIGHTED DIAL


Remove the Lighted Dial Battery Covers and insert 4 D batteries into the Battery Compartments.

IMPORTANT: Be sure all batteries are of the same voltage.

Light Sensor Switch

Set to ON to activate the Lighted Dial in dark conditions. Set to OFF to deactivate this function all together and conserve batteries.

The Light Sensor is located on the front of the clock between the six and seven. The light timer will reset once the clock is exposed to light. When it gets dark, the Lighted Dial will stay on for 6 hours and then automatically shut off.

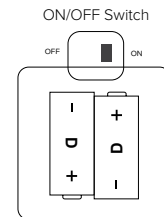

SPECIFICATIONS

Battery Requirements: 1 AA (IEC LR6) required in movement.
4 D (IEC LR20) for Lighted Dial. Batteries not included

Clock Battery Life: 1 Battery - 1 year,

Temperature Range: -20°F to 120°F (-28.8°C to 48.8°C)

Humidity Range: 10% to 90% RH

Dimensions: 15.55" L x 3.03" W x 15.55" H
(39.5 cm L x 7.7 cm W x 39.5 cm H)