

LA CROSSE®  
TECHNOLOGY

# ATOMIC DIGITAL CLOCK

 
 


SETUP GUIDE

MODEL: 515-1419v2

## Power Up

1. Insert 3-AA batteries into your Atomic Clock.
2. Use the Intergrated Hanging Holes to mount on a wall or use the pull out stand to place on a table.

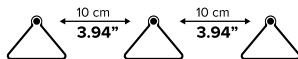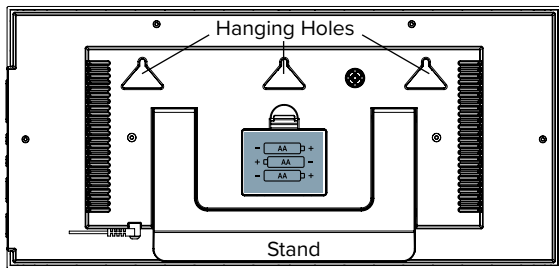

### HANGING INSTRUCTIONS

*In the location you would like to hang the clock, mark three level spots, each 3.94"/10 cm apart. Use your preferred fastener to install clock.*

## Atomic Time

- Your Clock will automatically search for the Atomic Time Signal at UTC 7:00, 8:00, 9:00, 10:00, and 11:00.
- Press and release the - (**MINUS**) button to manually start or stop a search for the WWVB Atomic Time Signal.
- While searching, the Tower Icon (🗼) will flash. The Tower Icon will be solid when the WWVB Signal is received by your clock.
- For information about WWVB Atomic Time visit: [bit.ly/atomic\\_time](https://bit.ly/atomic_time)

## Settings Menu

1. Hold the **MODE** button until the display changes to enter the Settings Menu.
2. Press and release the **+** or **-** button to adjust values.
3. Press and release the **MODE** button to confirm and move to next menu item.
4. Press and release the **TIME ADVANCE** button at any time to exit.

### Settings order:

- Beep ON/OFF
- Atomic ON/OFF
- Daylight Saving Time: AUT/ ON / OFF
- Time Zone
- 12/24 Format
- Hour
- Minutes
- Year
- Month
- Date
- Month/Date or Date/Month
- Fahrenheit/Celsius



### Daylight Saving Time Settings

- AUT = Changes Spring and Fall
- ON = DST all year
- OFF = Standard Time All year


### Time Zones

 
- AT = Atlantic
- ET = Eastern
- CT = Central
- MT = Mountain
- PT = Pacific
- AKT = Alaska
- HAT = Hawaii

**Atomic Off:** When Atomic Off is selected, you will move directly to the 12/24 Hour setting.

**Weekday:** Weekday will set automatically when the Year, Month and Date are set.


## Custom Display


- Press and release the **MODE** button to toggle between Seconds, Indoor Temperature, or Auto-scroll Temperature and Seconds.
- The Auto-scroll Indicator  will lose one segment every second, for 5 seconds, then switch to the next item.

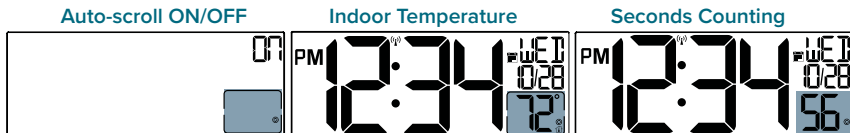

## Time Advance


Use the Time Advance feature to easily view the time in another part of the world.

 1. Hold the **TIME ADVANCE** button until the hour begins flashing.
2. Use the **+ (PLUS)** button to adjust the secondary time zone to one ahead of yours (+1 to +12) or the **- (MINUS)** button to set it to one behind (-1 to -12).
3. Press and release the **TIME ADVANCE** button to confirm and toggle between advanced time and current time. The Time Advance Icon  will show when viewing this mode.

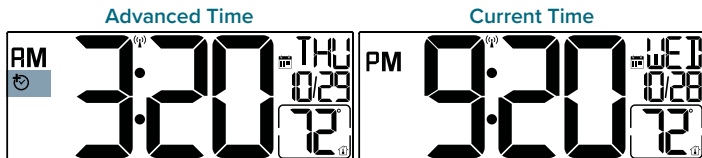

## Time Alarm

 
1. Hold the **ALARM** button to enter alarm settings. **ALM** will show and the hour will flash.
2. Press and release the **+** or **-** button to choose the hour.
3. Press and release the **ALARM** button to confirm and move to the minutes. Minutes will flash.
4. Press and release the **+** or **-** button to choose the minutes.
5. Press and release the **ALARM** button to confirm and exit.
6. Press the **TIME ADVANCE** button at any time to exit.

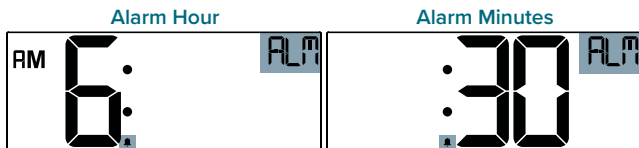

## Activate/Deactivate Alarm

The alarm is active when set. The Alarm Icon 🔔 will show.

 1. Press and release the **ALARM** button to view alarm time.
2. When viewing alarm time, press the **ALARM** button to activate or deactivate the alarm.

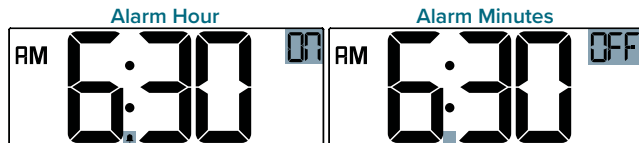


## Snooze

When the alarm sounds, press and the **ALARM** button to silence the alarm for 10 minutes. The Snooze Icon **Zz** will flash.



## Silence a Sounding Alarm

When the alarm sounds, press any button except the ALARM button to silence the alarm for 24-hours. The alarm will sound the next day at the set time. The Alarm Icon  will continue to show.

## Low Battery Icon

- When the Low Battery Icon  appears by the time, replace batteries.

## Stay in Touch!

Ask questions, watch set up videos and provide feedback on our social media outlets. Follow La Crosse Technology on YouTube, Facebook, and Instagram.



## Specifications

### Atomic Clock (515-1419v2):

**Time Digit Height:** 4.48 inch (11.4 cm)

 
**Time Format:** 12 or 24-Hour Time

**Indoor Temperature Range:** 32°F to 122°F (0°C to 50°C)

**Power Requirement:** 3 “AA” (LR6, IEC) batteries (Not Included)

**Battery Life:** 24+ Months

**Dimensions:** 15.42 in L x 1.14 in W x 7.33 in H  
(39.18 cm L x 2.90 cm W x 18.63 cm H)

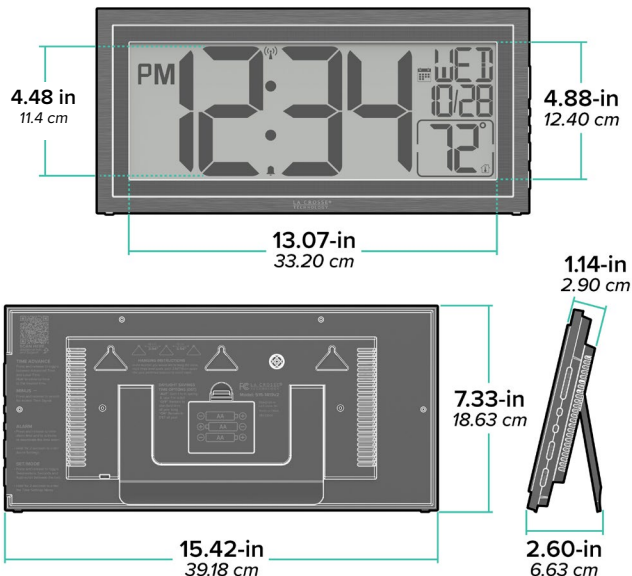

## We're Here to Help

If you require additional assistance, get in touch with our friendly customer support team based in La Crosse, WI.

**Self Help:** [bit.ly/515-1419v2\\_support](https://bit.ly/515-1419v2_support)

**Online:** [bit.ly/contact\\_techsupport](https://bit.ly/contact_techsupport)

**Phone:** 1.608.782.1610

Our knowledgeable customer support team is available:  
Mon-Fri 8am-6pm CST

SCAN HERE  
Additional Info  
and Support ✓



## Warranty & Patents

La Crosse Technology Ltd. provides a 1-year limited-time warranty on this product relating to manufacturing defects in materials & workmanship. Per the Song-Beverly Act, in the state of California, the warranty on this item becomes effective on the date of delivery.

La Crosse Technology, Ltd, 2830 S. 26th St. La Crosse, WI 54601

For Full Warranty Details, Visit: [www.lacrossetechnology.com/pages/warranty](https://www.lacrossetechnology.com/pages/warranty)

Patents: [www.lacrossetechnology.com/pages/patents](https://www.lacrossetechnology.com/pages/patents)

**⚠ WARNING:** This product can expose you to chemicals including acrylonitrile, 1, 3-butadiene, and styrene, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to: [www.P65Warnings.ca.gov](https://www.P65Warnings.ca.gov)

## Care & Maintenance

When batteries of different brand or types are used together, or new and old batteries are used together, some batteries may be over-discharged due to a difference of voltage or capacity. This can result in venting, leakage, and rupture and may cause personal injury.

- Do Not Mix Old and New Batteries.
- Do Not Mix Alkaline, Standard, or Rechargeable Batteries.
- Always purchase the correct size and grade of battery most suitable for the intended use.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from products during periods of non-use. Battery leakage can cause corrosion and damage to this product.
- Remove used batteries promptly.
- For recycling and disposal of batteries, and to protect the environment, please check the internet or your local phone directory for local recycling centers and/or follow local government regulations.

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

### Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**All rights reserved.** This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher. This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized. The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

# DOUBLE YOUR WARRANTY



Scan the QR Code or visit:

[bit.ly/515-1419v2\\_register](https://bit.ly/515-1419v2_register)

to register your product and double the standard 1-year warranty for free by opting to receive occasional product emails.