



# REC-MK760YC

6.6 TON CUTTING TOOL

SERIES 7M  
PRO LINE

# OPERATOR MANUAL



LINEMAN PROVEN

UTILITY APPROVED

SINCE 1976

**WARNING** To reduce the risk of injury, user must read and understand manual completely before first using this product and save this manual for future use

Huskie Tools is not affiliated with, authorized, or endorsed by Milwaukee Electric Tool Corporation. Milwaukee listed batteries and chargers are being re-sold by Huskie Tools. Milwaukee® M18™ REDLITHIUM™ are registered trademarks of Milwaukee Electric Tool Corporation. Huskie Tools is not affiliated with, authorized, or endorsed by Makita® Corporation. Makita® listed batteries and chargers are being re-sold by Huskie Tools. Makita® and LXT® are registered trademarks of Makita® Corporation.



**Huskie  
TOOLS®**

**BUILT FOR EVERYTHING  
THAT'S ON THE LINE.™**

**HUSKIETOOLS.COM**

## **PRE-USE CHECKLIST:**

- Visually confirm there are no missing or broken components. If found, stop use and have the tool checked by a qualified technician.
- Check and ensure triggers are moving freely with no binding.
- Rotate head where applicable to ensure it rotates 180 degrees. If head rotates more than 180 degrees, stop use and have tool checked by a qualified technician.
- Please read the instructions supplied with the battery and charger.



**Thank you for purchasing  
a Huskie Tools product.**

Our mission is to supply the finest cable connecting and cutting tools and cable-related products to the transmission and distribution markets. Huskie Tools products will represent state-of-the-art tools and be dependable and safe.

**THE POWER TO CHOOSE.**

## **TABLE OF CONTENTS**

**MODEL: REC-MK760YC**

|                        |   |
|------------------------|---|
| Description            | 4 |
| Safety Symbols         | 5 |
| Safety Information     | 6 |
| Operating Instructions | 7 |
| Troubleshooting Guide  | 8 |
| Warranty Information   | 9 |

# REC-MK760YC

The REC-MK760YC is a Battery-Powered Cutting tool with a 6.6 ton output.

## WHAT'S INCLUDED

### EACH TOOL KIT INCLUDES:

TOOL WITH JAW

18V-5.0AH LI-ION BATTERY PACK [X2]

BATTERY CHARGER

TOOL BAG



## COMPONENTS

INTEGRATED LED WORK LIGHT

USER INTERFACE PANEL

ADVANCE TRIGGER

RELEASE TRIGGER

18V-5.0AH LI-ION BATTERY

## SPECIFICATIONS

| SPECIFICATIONS         |                                        |
|------------------------|----------------------------------------|
| CUTTING FORCE          | 6.6 Ton                                |
| WEIGHT                 | 9.2 lbs (4.2 kg)                       |
| DIMENSIONS (H X L X W) | 10.6" x 16.7" x 3.3", 69 x 424 x 85 mm |

| CUTTING CAPACITIES |            |
|--------------------|------------|
| ALUMINUM           | 2" Dia.    |
| COPPER             | 500 MCM    |
| ACSR               | Do Not Cut |

| CUTTING ESTIMATES [5.0Ah BATTERY] |                     |
|-----------------------------------|---------------------|
| 500 MCM CU                        | 345 (Cycles/Charge) |

Huskie Tools is not affiliated with, authorized, or endorsed by Milwaukee Electric Tool Corporation. Milwaukee listed batteries and chargers are being re-sold by Huskie Tools. Milwaukee® M18™ REDLITHIUM™ are registered trademarks of Milwaukee Electric Tool Corporation. Huskie Tools is not affiliated with, authorized, or endorsed by Makita Corporation. Makita® listed batteries and chargers are being re-sold by Huskie Tools. Makita® and LXT® are registered trademarks of Makita Corporation.

# SAFETY SYMBOLS

You will see this symbol  Exclamation-Triangle throughout this manual. This purpose of this symbol is to call your attention to hazards and/or unsafe practices that have the potential to cause injury or property damage. The severity of each hazard is further explained in detail below. Failure to follow all instructions may result in electric shock, fire and/or serious injury. The term “power tool” in all warnings refers to your battery operated (cordless) power tool.

## DANGER

Immediate hazards are present which will result in severe injury or death if not avoided.


## CAUTION

Hazards or unsafe practices may result in injury or property damage if not avoided.

## WARNING


Hazards are present that could result in severe injury or death if not avoided.

## WARNING

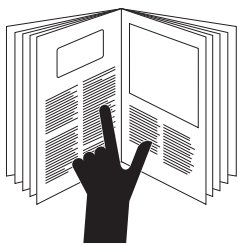

Read all instructions and safety information detailed in this operator manual prior to operating or servicing this tool. Failure to observe this warning could result in severe injury or death.

## CAUTION

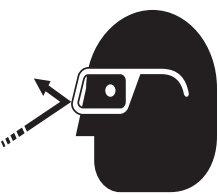

**Wear Eye Protection:**  
Use safety glasses when operating or servicing this tool to prevent eye injury from flying debris.

## DANGER



**Electric Shock Hazard:**  
Use appropriate personal protective equipment when using this unit on or near energized electrical lines.

## DANGER



**Pinch Point Hazard:**  
Remove battery before servicing.  
Keep hands away from crimping head during cycle.

## DANGER



**Cutting Hazard:**  
Remove battery before servicing.  
Keep hands away from cutting head during cycle.



**DO NOT DISCARD  
THIS PRODUCT OR  
THROW AWAY!**

FOR RECYCLING INFORMATION,  
CONTACT 800-822-8837

# SAFETY INFORMATION

## DANGER

### WORK AREA SAFETY

- Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep bystanders away while operating a power tool. Distractions can cause you to lose control.

## CAUTION

### PERSONAL SAFETY

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of distraction while operating power tools may result in personal injury.
- Use personal protection equipment. Always wear eye protection. Safety equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.

## WARNING

### TOOL USE AND CARE

- To prevent leakage, overheating, smoke generation, fire, and rupturing from occurring, follow these instructions when handling our rechargeable power tools (tool main body/battery pack/charger).
- Do not force the tool. Use the correct tool for your application. The correct tool will do the job better and safer at the rate for which it was designed.
- Do not use the tool if the switch does not turn it on and off. Any tool that cannot be controlled with the switch is dangerous and must be repaired.
- Disconnect the battery pack from the tool before making any adjustments, changing accessories, or storing. Such preventive safety measures reduce the risk of starting the tool accidentally.
- Store idle tools out of the reach of children and do not allow persons unfamiliar with the tool or these instructions to operate the tool. These tools can be dangerous in the hands of untrained users.
- Maintain tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the tools operation. If damaged, have the tool repaired before use.
- Use power tools only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- Under abusive conditions, liquid may be ejected from battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

**Read the instructions supplied with the battery and charger.**

# OPERATING INSTRUCTIONS

## CUTTING

1. Retract blades by pressing the release button.
2. Be sure that material being cut is within the specified cutting capacity of the tool.
3. Place the material to be cut between the blades and press the advance trigger until blades hold the material in place.
4. Check material for proper alignment to the cutting blades. It should be at a 90° degree angle to the blades. Any other angle will cause the blades to spread apart and possibly break.
5. Press and hold the trigger until the cut is completed. The ram will advance and once the cycle is complete, the tool will automatically shut off and retract\*. A green LED will appear on the display followed by an audible beep to alert the user the compression was complete. If the cycle was not completed, the LED will flash red and a series of audible beeps will sound alerting the user the cycle was not completed.
6. If the auto-retract\* feature is turned off, press the release button to retract to ram. The ram continues to retract while the release button is pressed. The ram stops when it reaches the lower end.



**RIGHT**



 
**WRONG**



## AUTO RETRACT\*

The auto retract feature can be toggled on or off depending on user preference or specific job requirement. To turn auto retraction on or off, remove rubber grommet and use a flat blade screwdriver to rotate the indicator 90 degrees to either position as shown:

Lift Grommet



# TROUBLESHOOTING GUIDE

## BEFORE YOU BEGIN

1. Make sure that the battery is charged. Recheck the battery after several minutes to make sure the battery is holding its charge.
2. Use a nonflammable contact cleaner or pencil eraser to clean the electrical contacts on the battery and tool.
3. Reinstall the battery and check the tool again.

| REC-MK754M                                                        |                                               |                                                                     |
|-------------------------------------------------------------------|-----------------------------------------------|---------------------------------------------------------------------|
| PROBLEM                                                           | CAUSE                                         | SOLUTION                                                            |
| <b>Motor runs but the tool jaws will not advance</b>              | Insufficient hydraulic oil                    | Consult factory for repair service                                  |
|                                                                   | Air block in hydraulic system                 | Invert tool to allow air to rise towards the top of the oil bladder |
|                                                                   | Defective hydraulic circuit                   | Consult factory for repair service                                  |
| <b>Motor runs, tool jaws advance, but will not build pressure</b> | Insufficient hydraulic oil                    | Consult factory for repair service                                  |
|                                                                   | Defective suction valve or bypass cartridge   | Consult factory for repair service                                  |
| <b>Motor will not run at all</b>                                  | Defective battery                             | Charge or replace battery                                           |
|                                                                   | Bad contact or loose battery connections      | Check all connections and wires                                     |
|                                                                   | Misaligned switch                             | Check to make sure that switch is properly aligned with trigger     |
|                                                                   |                                               | Consult factory for repair service                                  |
| <b>Tool jaws will not release</b>                                 | Tool did not complete a full cycle and bypass | Press trigger and allow tool to bypass, then release tool jaws      |
|                                                                   | Connector is jammed in tool jaws              | Press and hold release trigger while prying tool jaws apart         |
|                                                                   | Release trigger is bent or misaligned         | Consult factory for repair service                                  |

# WARRANTY INFORMATION

|                                             |                |
|---------------------------------------------|----------------|
| <b>SL-SERIES BATTERY OPERATED PRODUCTS</b>  | <b>5 YEARS</b> |
| <b>REC-SERIES BATTERY OPERATED PRODUCTS</b> | <b>5 YEARS</b> |
| <b>IL-SERIES BATTERY OPERATED PRODUCTS</b>  | <b>3 YEARS</b> |
| <b>ECO-SERIES BATTERY OPERATED PRODUCTS</b> | <b>1 YEAR</b>  |

---

## **BATTERIES**

|                  |                |
|------------------|----------------|
| BL1820B, BL1850B | <b>3 YEARS</b> |
|------------------|----------------|

---

## **CHARGERS**

|                |                |
|----------------|----------------|
| DC18SE, DC18RC | <b>3 YEARS</b> |
|----------------|----------------|

---

The warranty does not cover any damages incurred from a Huskie tool including damages to property, bodily injuries and lost wages resulting from such injuries. This warranty solely covers the repair or replacement of tools supplied by Huskie. These remedies are exclusive, and the total liability of Huskie Tools, LLC whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the tool. In no event, shall Huskie Tools, LLC be liable for consequential, incidental or special damages.

**HUSKIE TOOLS, LLC MAKES NO OTHER WARRANTIES OF ANY KIND, EXPRESSED OR IMPLIED, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED.**

Huskie reserves the right to determine all warranty claims. Huskie will not warranty tools containing parts or batteries not originally supplied by Huskie. Failure due to misuse, improper maintenance, misapplication, not following instructions or warnings, abuse or repairs attempted by anyone other than Huskie Tools, LLC, or an authorized service center renders this warranty null and void.

## **REPAIR AND WARRANTY CLAIMS**

All claims must be sent to Huskie for inspection and authorization. A Return Goods Authorization (RGA) is required before shipping tools to Huskie. Secure the authorization by telephoning or writing to Huskie's main office with details of the claim. Non-warranty repairs are handled using the same procedure. Repairs exceeding 50 percent of the cost of a new tool will be advised before repairs are made.

# MAINTENANCE NOTES

# MAINTENANCE NOTES



**Huskie  
TOOLS®**

**2105 W. CORPORATE DR STE B  
ADDISON, IL 60101-1470**

**PHONE 800-860-6170  
FAX 800-345-3767**

**HUSKIETOOLS.COM**

Huskie Tools reserves the right to change this information without further notice and holds no liability for printing errors in this content.

Copyright © 2021 Huskie Tools, Inc. All Rights Reserved.