

OPERATION AND SAFETY MANUAL

Mount to your vehicle and control from a distance for

hands-free worksite illumination

REMOTE CONTROL TRUCK WORK LIGHT

Designed to provide precision lighting for every occasion

 Part Number
 UPC
 Description

 31-RCSL2
 810075963397
 Remote control work light















Specifications	
LED Light Output	4800 lumens
Color Temperature	6000K
Flash Function	0.5 Hz
Rotation Range	360°
Tilt Range	-45° to +45°
Waterproof Rating	IP65
Size	7" x 7" x 8"
Weight	4.8 lbs.
RC Battery	23A (qty 2)
RC Range	170' (50m)

How to Use

- 1. Press the "ON/OFF" button on the remote control to turn the light on or off.
- 2. Press the movement control buttons to tilt and rotate the light head.
- 3. Press the "Flash" button to activate the emergency flash function.



Discarded electrical products must not be disposed of together with household waste. Please use recycling facilities at your local authority for advice on recycling.



Scan QR Code to learn more

Installation Instructions

- Using the diagram shown, procure a flat mounting area at least as large as the outer dimensions of the light base.
- Drill holes to match the holes provided. Use at least three holes to secure the light. Mounting hardware is provided.
- Guide the cable from the lamp to the power source (12VDC), keeping it tight and making sure it is protected against being pulled or damaged.
- Permanently connect to a fused 12 VDC power source.
- Identify a practical location for the RC unit inside the vehicle's cabin, making sure there's enough room for the RC unit without interfering with any vehicle controls. Clean the mounting surface thoroughly.

Note: It is not recommended to install the magnet in an outdoor environment.

Peel off the adhesive protector from the back of the mounting magnet and press against the chosen surface.

