


MODEL S-16 PARTS DIAGRAM

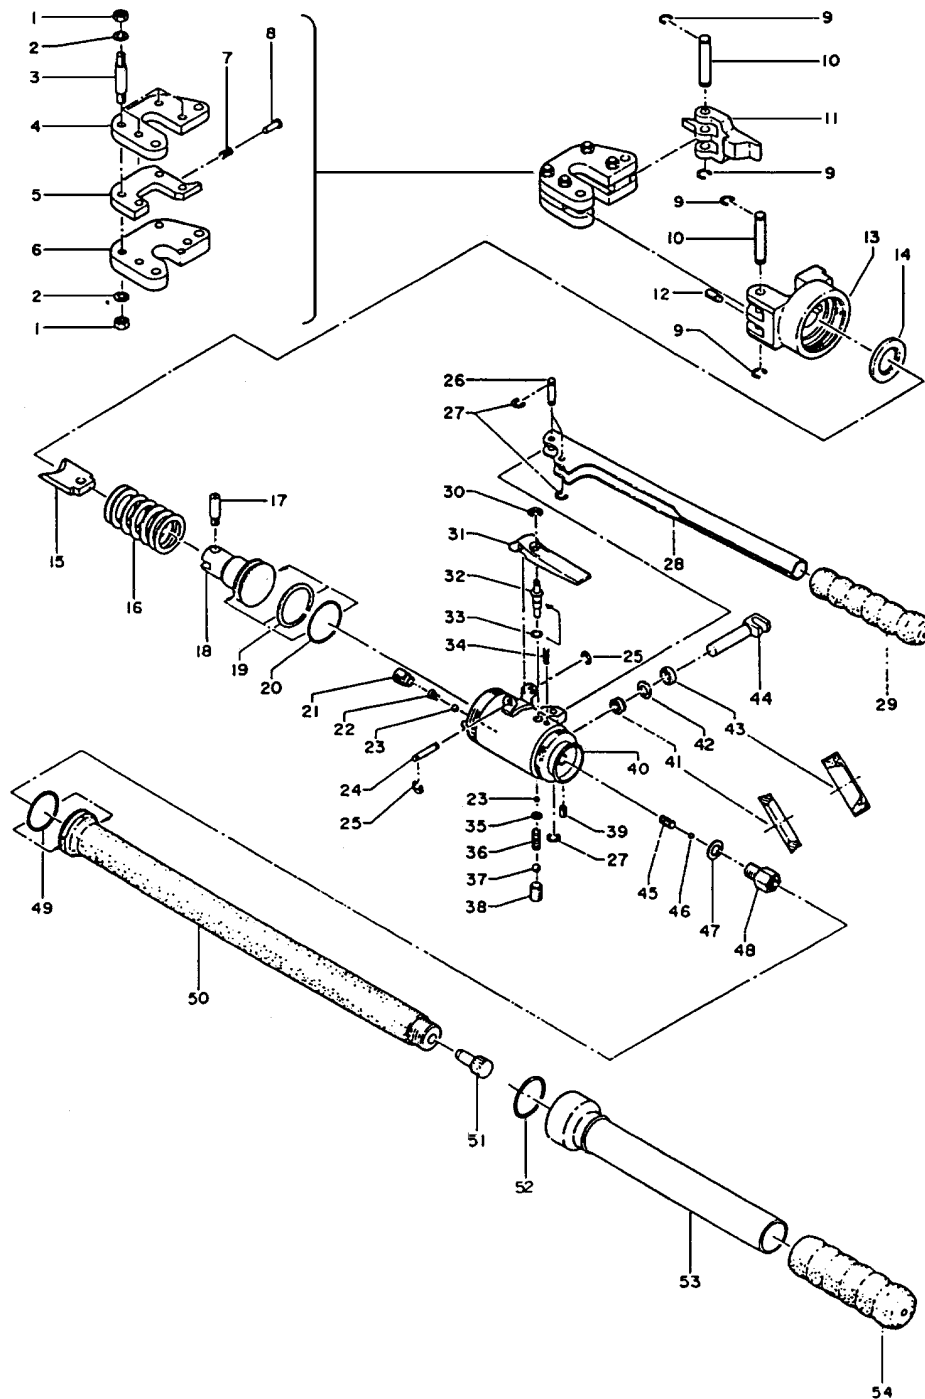

MODEL S-16 PARTS LIST

NO.	DESCRIPTION	CODE	QTY.
1	M6 Hex. Nut	16-01	8
2	M6 Lock Washer	16-02	8
3	Stud Bolt (1)	16-03	4
4	Main Head	20-04	1
5	Spacer	20-70	1
6	Head Shear	16-06	1
7	Spring (144)	85-37	1
8	Slide Pin	20-71	1
9	CE-8 Snap Ring	16-09	4
10	Pin (46)	16-10	2
11	Latch	16-11	1
12	M5 x 10 Stopper Screw	55A-11	1
13	Body Head	20A-01	1
14	Stopper Collar	16A-01	
15	Blade	20-07	1
16	Ram Spring (75)	16-17	1
17	Blade Screw	16-19	1
18	Ram	16-21	1
19	P-29 Back-Up Ring	16-22	1
20	P-29 O-Ring	16-23	1
21	Exhaust Valve Screw	16-24	1
22	Exhaust Valve Spring (2)	16-25	1
23	7/32" Ball	16-26	2
24	Pin (26)	16-27	1
25	E-2.5 Snap Ring	16-28	2
26	Pin (47)	16-29	2
27	CE-6 Snap Ring	16-30	4
28	Pump Handle	16-31	1
29	Pump Handle Grip	16-32	1
30	E-32 Snap ring	16-33	1
31	Release Lever	16-34	1
32	Release Valve Stem	16-35	1
33	P-3 O-Ring	16-36	1
34	Relase Lever Spring (77)	16-37	1
35	M3 Flat Washer	16-38	1
36	Release Valve Spring (76)	16-39	1
37	M4 x 0.7 x 6 Screw	16-42	1
38	Release Valve Screw	16-41	1
39	M4 x 0.7 x 6 Screw	16-42	1
40	Body	20A-02	1
41	PS-8 Pent Seal	16-44	1
42	P-8 Back-Up Ring (B.C.)	85-33	1
43	G-8 Dust Seal	40A-05	1
44	Pump Piston	16-47	1
45	Suction Valve Spring (4)	16-48	1
46	3-16" Ball	16-49	1
47	Copper Gasket (6)	16-50	1
48	Suction Valve Screw Ass'y	16-51	1

[illegible]