




# ALLEGRI.

BY KALCO LIGHTING™

Customer Service : (702)361-4345, (800)525-2655, customer.services@kalco.com


## WARNING -TO REDUCE THE RISK OF FIRE OR INJURY

Crystal Portable Fixture is Fragile. If you see any damage on the crate. Please take pictures of damage and contact our Customer Service immediately: customer.services@kalco.com.

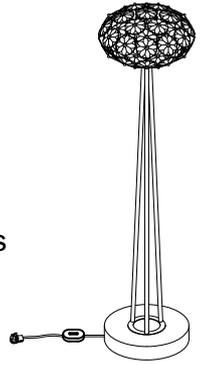

### Unpacking instruction

1. Lay the crate flat and make sure the side door which is labeled "Remove this door" is facing up.
2. Open the top door which is labeled "Remove this door".
3. Open the side door which is labeled "Remove this door".
4. Stand up the crate, then remove two more side doors;
5. Hold & lift the fixture where it is labeled "Where to hold & lift" (more than one person is required) to the place where it will be installed.

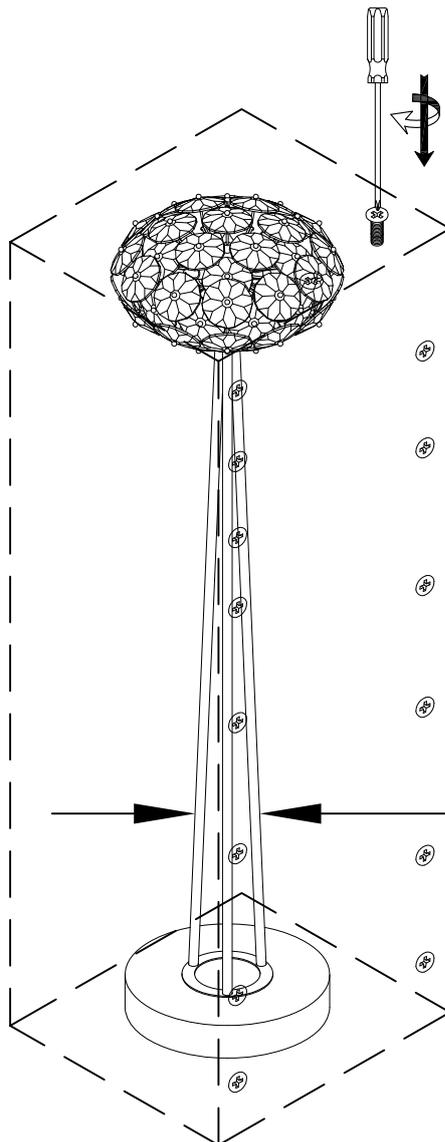

## Warning

Where to hold & lift  
more than one person is  
required




# ALLEGRI.

BY KALCO LIGHTING™

Customer Service :(702)361-4345,(800)525-2655,customer.services@kalco.com

Assembly & Installation Instructions for:  
027895-010-FR001 Floor lamp

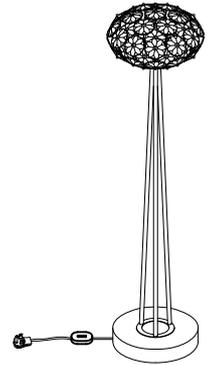

## Fixture Assembly

Step 1. Plug G9 lamp onto socket.

Step 2. Assemble crystals on all A rods before assembling on the longer B rods.

Step 3. Fix part #2 crystal tray and #3 clear rubber washer to part #1 metal lathe by using part #4 metal ball.

Step 4. Install G9 LED bulbs, do not use bulbs that exceeds 3W

### DIMMER SWITCH USE INSTRUCTION:

ON and OFF: quick pressure (less than 1 sec).

At ON, in order to help ignition of the lamp, it goes to the max, dimming value, after that it reaches latest memorized value.

MIN. and MAX: Continuous pressure (at every release of the button pressure the direction of the dimming is inverted).

Memorization of the latest setting made. It keeps the memory of last dimming, even in case of switching-off from a controlled electrical socket.

How to set the minimum adjustment modality: keep the button pressed for about 30 seconds to enter the minimum adjustment modality.

Once you have entered this function:

-the lamp switches on at the maximum brightness for about 2 seconds.

-Every 2 seconds the minimum brightness changes sequentially on 6 default values.  
-to confirm the choice, release the button in correspondence of the wished brightness.

