


Customer Service : (800) 525-2655, [customercare@kalco.com](mailto:customercare@kalco.com)

**WARNING - TO REDUCE THE RISK OF FIRE OR INJURY:**

- 1.If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit. More than one person may be necessary to install fixture, make sure you have enough qualified help.
- 2.Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.
3. DO NOT install bulb which exceeds the maximum wattage specified on the socket label.


**Fixture Assembly**

- 1** Step 1. Determine the position of anchor sleeve and install the anchor sleeve on wall. Hold up the fixture and attach the crossbar to junction box with two supplied screws.

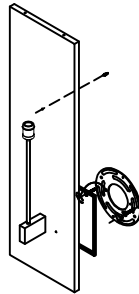


- 2** Step 2. Connect the supply wires to fixture wires with wire connectors.

The steel cable is to prevent the heavy fixture assembly falling down during maintenance.

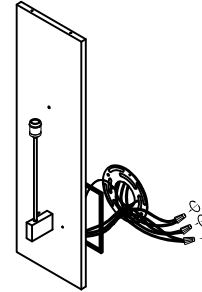


- 3** Step 3. Attach the fixture assembly to crossbar with two supplied knurled knobs.

Use a stainless steel self-tapping screw (not supplied) to secure the fixture assembly against the wall through the threaded collar, then screw the knob onto the collar.

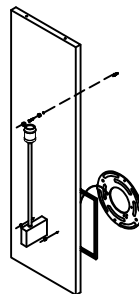


- 4** Step 4. Install the bulb into socket.

 DO NOT use bulb exceeding the maximum wattage specified on the socket label.



- 5** Step 5. Place the face cover over the fixture assembly and secure the screws on top and at bottom.

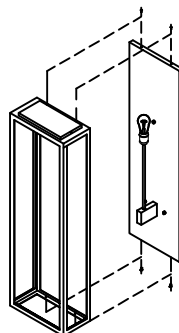

Remove the top cover for bulb replacement.

