



SSW-R INVERTER REMOTE

QUICK START GUIDE



SCAN TO SEE FULL
SSW MANUAL



SCAN TO SEE FULL
AIC MANUAL

PRODUCT SPECIFICATIONS

SPECIFICATIONS	
Dimensions	2.7 x 1.9 x 1.0 in
Applicable Models	Smart Sine Wave Inverters (SSWs) Advanced Inverter/Chargers (AICs)

FEATURES

The SSW-R is a remote switch that can be mounted in an easily accessible location, at a distance from the inverter. This allows the user to turn the inverter on/off without accessing the unit. The SSW-R is compatible with the Smart Sine Wave Inverter and the Advanced Inverter/Charger.

Operating instructions for the SSW-R are different for each of these compatible devices. Please refer to the Power On/Off section in your inverter's user manual for operating instructions.


TOOLS AND MATERIALS NEEDED

- Drill (power drill)
- 25 mm (1 in) hole saw bit
- Phillips Screwdriver (#2)
- Measuring tape
- Pencil or marker
- Wire stripper (only if the pre-stripped ends need adjustment)

INSTALLATION INSTRUCTIONS

1. Determine the mounting location for the SSW-R. The remote should be mounted in a location where the 7.6 m (25 ft) long cable can be routed to the inverter.
2. Once the mounting location is determined, use a 25 mm (1 in) hole saw to cut a hole in the center of the mounting location.
3. Route the 7.6 m (25 ft) cable through the hole to the location of the inverter.
4. Mount the remote switch assembly in the mounting location with the included mounting screws.
5. On the inverter, locate the remote switch terminals next to the power on/off button. The terminals feature push-in cage clamps. The wire insulation on the SSW-R wires is pre-stripped. Pull off the stripped ends of the wire insulation to expose the bare wire ends before connecting to the inverter. This remote switch is non-polarized. Either wire may be connected to either terminal. To connect the wires, press down the orange button on the side of the terminal. While pressing the button, insert the wire into the terminal opening. Release the button to clamp the wire in place. Always ensure the wire is securely inserted by firmly pulling back on it.
6. Refer to the Power On/Off section in the Smart Sine Wave Inverter or Advanced Inverter/Charger user manual for operation instructions.

TERMINAL LOCATION ON THE SSW:

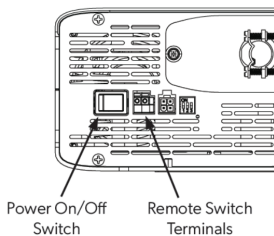

TERMINAL LOCATION ON THE AIC:

