

# LADDER STABILITY CLAMP



Part #: 10808; 10815

## Instructions



Part # 10808



### Applicable Safety Standards

Meets or exceeds:

- OSHA 1910.23
- OSHA 1926.1053

### Materials

Aluminum, polyester, nylon, & hook and loop.

✘ Do not throw instructions away.

⚠ Read and understand instructions before using this equipment.

### Ladder Requirements

The Ladder Stability Clamp functions to secure a ladder against the structure, and reduce the possibility of the bottom of the ladder kicking out as a result of transitions between the ladder and the structure.

The Ladder Stability Clamp also functions to reduce possibility of base of ladder slipping as a result of loose ground or wet surfaces, and prevents knock-over of ladder due to wind or accidental collisions.

⚠ **WARNING** Failure to read and follow instructions on the use of this product could result in serious personal injury. This product must be used in strict compliance with Local, State and federal OSHA regulations. Be safety conscious.

⚠ **WARNING!** Inspect Ladder Stability Clamp before each use, if parts are bent, cracked, or damaged immediately remove from use.

### Maintenance, Cleaning, and Storage

Cleaning after use is important for maintaining the safety and longevity of the system. Remove all dirt, corrosives, and contaminants from the kit before and after each use. If kit cannot be cleaned with plain water, use mild soap and water, then rinse and wipe dry. NEVER clean kit with corrosive substances.

When not in use or during transport, store equipment where it will not be affected by heat, light, excessive moisture, chemicals, or other degrading elements.

Part #	Description	Weight
10808	Ladder Stability Clamp, includes (2) 4 ft straps	2.2 lb (1 kg)
10815	4 ft Replacement Attachment Strap, pack of 2	1 lb (0,45 kg)

## Installation and Use:

### Setting the Ladder

- ⚠ WARNING!** Metal conducts electricity. Keep metal ladder and Ladder Stability Clamp away from electrical circuits. Acid damages aluminum. Never use a ladder when using acid. Failure to follow these guidelines could result in injury or death.
- ⚠** When storing straps, fold rough side against rough side. This will stop excessive wear of the attachment strap. Replace straps if functionality of attachment strap is noticeably diminished.
- ⚠** User must inspect Ladder Stability Clamp prior to each use. Competent Person must inspect Ladder Stability Clamp at least every 6 months.

#### ■ Step 1

Extend ladder to desired height, then secure one attachment strap around two adjacent ladder rungs at the mid-lock section of the ladder. This reduces the potential for accidental separation of ladder sections, as well as increases overall ladder stability.

#### ■ Step 2

Place ladder against structure and ensure ladder is stable. Ensure fifth rung from top of ladder is level with roof edge.

#### ■ Step 3

Climb up to roof eave and install Ladder Stability Clamp over roof eave. Turn T-clamp until hand tight.

#### ■ Step 4

Clip one attachment strap to Ladder Stability Clamp, then secure strap around ladder rung.

