

Tool Belts

Installation and Usage Instructions

85520 (Rev. A)

IMPORTANT NOTES:

- Inspect prior to each use and discard if rips, tears, cracks or excessive wear are noted.
- Not to be used to support body weight

INSTRUCTIONS FOR P/N BELTR, BELTL & BELTEZ



1 Start by adjusting the slider on the belt to properly fit it to the users waist. Either remove more belt material from the slider to increase the size or feed additional belt material to reduce the size



2 Once the belt is adjusted to the users waist slide on the appropriate tool pouch or attachment points to the desired location along the belt and fasten the two buckles



3 Once installed manipulate the pouches or attachment points to the final desired location.

Part No.	Description	Max Tether Length	Max Tool Weight (Per Tethered Tool)	Max Combined Wt of Accessories
BELTR	Webbing Belt Fits Waist (26" - 48")	48in (121.92cm)	6lbs (2.72kg)	25lbs (11.33kg)
BELTL	Webbing Belt Fits Waist (48" - 60")			
BELTEZR	EZ Clean Belt Fits Waist (26" - 48")			
BELTEZL	EZ Clean Belt Fits Waist (48" - 60")			
BELTCBR	Webbing Belt Fits Waist (26" - 48") - w/ Cara. Adapter	No tether length, for stowing tools only		
BELTCBL	Webbing Belt Fits Waist (48" - 60") - w/ Cara. Adapter			
BELTEZCBR	EZ Clean Belt Fits Waist (26" - 48") - w/ Cara. Adapter			
BELTEZCBL	EZ Clean Belt Fits Waist (48" - 60") - w/ Cara. Adapter			


INSTRUCTIONS FOR P/N BELT-LEATHER



1 Start by installing the necessary tool pouches on the belt or attachment points and then wrap the belt around your waist. Feed the tip of the belt through the buckle opening and bend the belt back and pull to tighten.



2 Once tightened flip the adjustment prong over and insert into the appropriate belt hole.

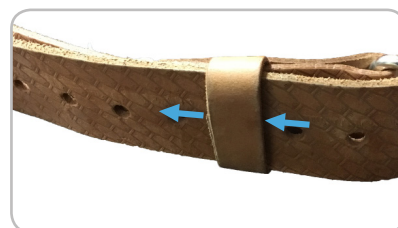

3 Slide the excess belt material into the strap holder and make any final adjustments to the tool pouch or attachment points around the users waist.

INSTALLATION

