




INSTALLATION, OPERATION, AND MAINTENANCE MANUAL

399-1500 MBH Hot Water Boiler Indoor/Outdoor

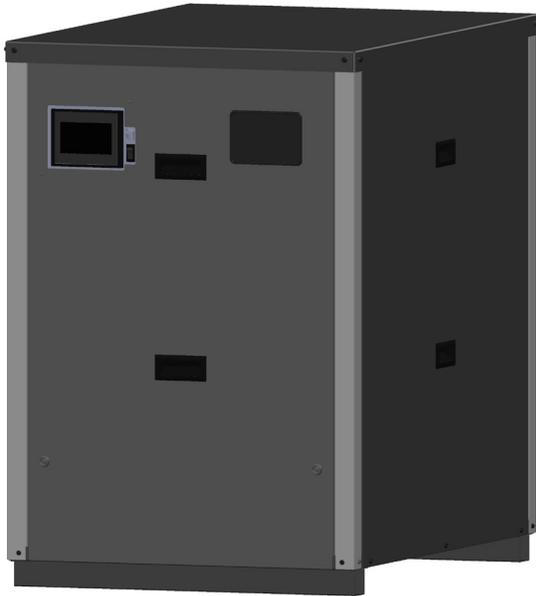

| Boiler Models |
|---------------|
| BFIT400C |
| BFIT500C |
| BFIT650C |
| BFIT800C |
| BFIT1000C |
| BFIT1250C |
| BFIT1500C |

⚠ WARNING

WARNING: If the information in these instructions is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.

⚠ DANGER

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency or the gas supplier.

| | |
|---------------------|----------------|
| Model: | Serial Number: |
| Installation Date: | System Type: |
| Heating Contractor: | Phone/Email: |
| Address: | |

Table of Contents

| | |
|--|-----------|
| I. Hazard Definitions | 4 |
| II. Read Before Proceeding | 5 |
| A. Local Codes | 5 |
| B. Warranty | 5 |
| C. Shipment Damage | 5 |
| D. Connecting Gas Supply Line | 5 |
| E. Gas Leakage (If you detect or smell gas...) | 5 |
| F. Maintenance | 5 |
| G. Product Identification Label | 5 |
| H. Factory Test and Inspections | 6 |
| I. Disclaimers and Local Codes | 6 |
| III. Product Rating, Specifications, and Dimensional Data | 7 |
| IV. Unpacking The Shipping Crate | 11 |
| A. Unpacking and Inspection | 11 |
| B. Check Equipment | 11 |
| C. Installation and Operation Manual | 11 |
| V. Component Identification | 12 |
| VI. Pre-Installation and Mounting | 14 |
| A. General | 14 |
| B. Appliance Mounting | 15 |
| C. Outdoor Conversion and Installation | 16 |
| D. Display Cover and Ergonomic Control | 16 |
| E. Appliance Stacking | 17 |
| F. Clearances | 18 |
| G. Clearances (French) | 18 |
| H. Closet and Alcove Installation | 18 |
| I. Side by Side and 0" Clearance Installation | 18 |
| VII. Venting | 19 |
| A. General Venting Guidelines | 19 |
| B. Venting Design Requirements | 19 |
| C. Field Installation | 20 |
| D. Room Air for Combustion | 22 |
| E. CPVC/PVC Venting Systems | 22 |
| F. Venting for Outdoor Installation | 22 |
| G. General Termination | 23 |
| H. Vent and Combustion Air Terminations | 27 |
| I. Multiple Appliance Terminations | 30 |
| J. Terminal Installation | 30 |
| K. Polypropylene Venting | 32 |
| L. Optional Room Air for Combustion | 34 |
| M. Removing Existing Appliance | 35 |
| N. Special Installation Requirements for Massachusetts | 36 |
| VIII. Condensate Disposal | 37 |
| A. Condensate trap | 37 |
| B. Condensate Neutralizer Installation | 37 |

Table of Contents

| | |
|--|-----------|
| C. Common Condensate pump/Sump | 38 |
| IX. Water Piping | 39 |
| A. General Piping Guidelines | 39 |
| B. Hot Water Supply Boiler/Water Heater | 39 |
| B. Factory Supplied Relief Valve Package | 40 |
| C. Standard Piping Components | 41 |
| D. Water Quality | 42 |
| E. Oxygen Contamination | 43 |
| F. Temperature Rise and Heat Exchanger Head Loss | 44 |
| X. Water Piping Diagrams | 45 |
| XI. Gas Piping | 49 |
| A. Guidelines and Requirements | 49 |
| B. Field Connecting Gas Supply | 49 |
| C. Gas Pressure Switches | 51 |
| XII. Electrical | 52 |
| A. General. | 52 |
| B. Power Requirements | 52 |
| C. Appliance Wiring | 52 |
| D. Routing Field Connections | 53 |
| E. System and Circulation Pump Wiring | 53 |
| XIII. System Start-up | 62 |
| A. Check System Setup | 62 |
| B. Start-up | 62 |
| C. Combustion Air/Fuel Adjustment | 64 |
| E. Field Conversion of Gas Type | 65 |
| F. Pump Control | 66 |
| G. Check Thermostat Operation | 66 |
| H. Adjust Supply Water Temperature | 66 |
| I. Testing of Controls and Safety Devices | 66 |
| XIV. Service and Maintenance | 67 |
| A. General Maintenance | 68 |
| B. Monthly Inspection | 68 |
| C. Annual Inspections and Service | 68 |
| D. Restarting after Prolong Shutdown | 71 |
| E. Troubleshooting | 71 |
| APPENDIX A: Tables | 72 |
| APPENDIX B: Figures | 73 |
| APPENDIX C: High Altitude Installations Above 2000 ft | 74 |
| A. Percent Derate For Altitudes Above 2000 ft. | 74 |
| B. Adjusting Parameters Using Display | 74 |
| C. Start-up instructions | 74 |
| APPENDIX D: Default Light-off and Modulation Rates | 75 |
| APPENDIX E: Gas Valve and Pressure Switch Tubing Schematics | 76 |

I. Hazard Definitions

The following terms are used throughout this manual to bring attention to the presence of hazards of various risk levels, or to important information concerning product life.

It is critical all personnel read and adhere to all information contained in DANGER, WARNING, and CAUTIONS. All DANGERS, WARNINGS, and CAUTIONS are for reference and guidance purpose, and, therefore, do not substitute for strict adherence to applicable jurisdictional and professional codes and regulations.

DANGER

Indicates a hazardous situation that, if not avoided, will result in death or serious injury.

CAUTION

Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

WARNING

Indicates a hazardous situation that, if not avoided, could result in death or serious injury.

NOTICE:

Indicates special instructions on installation, operation, or maintenance which are important but not related to personal injury hazards.

II. Read Before Proceeding

A. Local Codes

1. This unit shall be installed in accordance with those installation regulations enforced in the area where the installation is to be made. These regulations shall be carefully followed in all cases. Authorities having jurisdiction shall be consulted prior to installation.
2. This unit must be installed and serviced by a licensed electrician or certified gas supplier.
3. The City of New York requires a Licensed Master Plumber to supervise the installation of this product.
4. The Commonwealth of Massachusetts requires this product to be installed by a Licensed Plumber or Gas Fitter.

B. Warranty

1. This product has a limited warranty, a copy of which is shipped with the unit. It is the responsibility of the installing contractor to ensure all controls are correctly installed and are operating properly.
2. Factory warranty does not apply to units improperly installed or improperly operated.
3. Heat exchanger failure due to lime (scale) build-up in the heat exchanger is not covered under the manufacturer's warranty.
4. It is the responsibility of the customer to ensure water hardness level and flow rate conform to the levels listed in the water quality section.

C. Shipment Damage

1. Upon receiving the unit, inspect for signs of shipping damages. If the unit has been hit or otherwise mishandled, immediately notify the carrier.
2. Verify total number of factory supplied items as per the packing slip with received parts.

D. Connecting Gas Supply Line

1. Connect supply gas line to the appliance gas train at the rear of the appliance.

⚠ WARNING

Failure to prevent the gas line from turning could damage the gas train components on the appliance (gas valve, blower, etc.).

⚠ DANGER

This appliance **MUST NOT** be installed in any location where gasoline or flammable vapors are likely to be present or, in an environment that contains corrosive contaminants (see Table 4).

Do not block or restrict in any way the flow of combustion or ventilation air from or to the appliance.

Do not use this appliance if any part has been under water. Any appliance that has been under water must be replaced. Water damage to the unit can be extensive and present numerous safety hazards.

E. Gas Leakage (If you detect or smell gas...)

⚠ DANGER

1. Do not try to light any appliance.
2. Do not touch any electrical switch; do not use any phone in the building.
3. Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instruction.
4. If you cannot reach your gas supplier, call the fire department.

F. Maintenance

1. To avoid electrical shock, ensure all electrical connections are disconnected before attempting installation or service of electrical components or connections.
2. Lockout all electrical boxes with padlock once power is turned off.
3. To prevent severe burns, allow the appliance to cool before performing maintenance.

G. Product Identification Label

1. A nameplate, in accordance with the ASME code Section IV, is permanently attached to the heat exchanger.
2. To access the nameplate, remove front jacket panel from the appliance.

⚠ DANGER

Should overheating occur or the gas supply fail to shut off, turn off the manual gas control valve to the appliance.

II. Read Before Proceeding (continued)

H. Factory Test and Inspections

1. Prior to shipment, final air-fuel adjustments are performed by factory trained service personnel on each appliance. The factory emissions report is posted on the back of the front jacket panel as a reference for troubleshooting and maintenance.
2. In addition, the following tests and inspections are performed to ensure the appliance meets our highest safety and performance standards:
 - Operating test
 - Construction inspection
 - Electrical components inspection
 - Crating inspection.

I. Disclaimers and Local Codes

1. Installation must conform to the requirements of the authority having jurisdiction. In the absence of such requirements, installation must conform to the *National Fuel Gas Code, NFPA 54/ANSI Z223.1, and/or CSA B149.1 Natural Gas and Propane Code*. Where required by the authority having jurisdiction, the installation must conform to the *Standard for Controls and Safety Devices for Automatically Fired Boilers, ANSI/ ASME CSD-1*.
2. Installation, start-up, and maintenance of this equipment can be hazardous and requires trained, qualified installers and service personnel. Do not install, operate, service or repair any components of this equipment unless you are qualified and fully understand all requirements and procedures.
3. This instruction manual is an integral part of the product and must be retained by the person in charge of the appliance operation, service, and maintenance.

⚠ WARNING

This product can expose you to chemicals, including chromium, which are known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to: www.P65Warnings.ca.gov.

III. Product Rating, Specifications, and Dimensional Data

These boilers are condensing, high-efficiency, gas-fired, hot water boilers designed for space heating systems or indirect domestic water heating, where supply water temperature does not exceed 190°F. These boilers have special coil type stainless steel heat exchangers, constructed, tested, and stamped per Section IV of the ASME Boiler and Pressure Vessel Code, which provide maximum heat transfer and simultaneous protection against flue gas product corrosion. These boilers are not designed for use in gravity hot water space heating systems or systems containing significant amount of dissolved oxygen (swimming pool water heating, direct domestic water heating, etc.).

Table 1: Input and Output Ratings

| Commercial Gas Boiler | | | | | | |  |
|-----------------------|-------------|------|--------------------|-------------------------|------------------------|---------------------------|---|
| Boiler Model | Input (MBH) | | Gross Output (MBH) | Net Ratings Water (MBH) | Thermal Efficiency (%) | Combustion Efficiency (%) | |
| | Min. | Max. | | | | | |
| 400 | 40 | 399 | 387 | 337 | 97 | 97 | |
| 500 | 50 | 500 | 485 | 422 | 97 | 97 | |
| 650 | 65 | 650 | 631 | 548 | 97 | 97 | |
| 800 | 80 | 800 | 776 | 675 | 97 | 97 | |
| 1000 | 100 | 999 | 969 | 843 | 97 | 97 | |
| 1250 | 125 | 1250 | 1212 | 1054 | 97 | 96.6 | |
| 1500 | 150 | 1500 | 1440 | 1252 | 96 | 96 | |

Ratings shown are for installations at sea level and elevations up to 2000 ft. at minimum vent length. For high altitude installations above 2000 ft. see APPENDIX C

Table 2: General Specifications

| Specification | Boiler Models | | | | | | |
|------------------------------------|---|----------|----------|----------|----------|------|------|
| | 400 | 500 | 650 | 800 | 1000 | 1250 | 1500 |
| Fuel | NG or LP | NG or LP | NG or LP | NG or LP | NG or LP | NG | NG |
| Max. Water Temp. (°F) ¹ | 210 | 210 | 210 | 210 | 210 | 210 | 210 |
| Max. Working Pres. (psi) | 160 | 160 | 160 | 160 | 160 | 160 | 160 |
| Pressure Relief Valve (psi) | 75 (optional conversion kits available) | | | | | | |
| Water Vol. (gal) | 3.8 | 4.3 | 5.6 | 6.6 | 8.1 | 10.5 | 10.5 |
| Heat Transfer Area (sq. ft.) | 34.8 | 39.1 | 52.2 | 60.9 | 75.4 | 98.6 | 98.6 |
| Approx. Shipping Weight (lb) | 460 | 470 | 530 | 560 | 600 | 770 | 770 |

¹Appliance will go into hard lockout if temperature exceeds 200 °F. Maximum setpoint is 190°F.

Table 3: Appliance Connection Sizes

| Dimensions (in.) | Model | | | | | | |
|--------------------------|-------|-----|-----|-----|------|-------|-------|
| | 400 | 500 | 650 | 800 | 1000 | 1250 | 1500 |
| Gas Inlet | 3/4 | 3/4 | 1 | 1 | 1 | 1-1/4 | 1-1/4 |
| Water Outlet Pipe (FNPT) | 2 | 2 | 2 | 2 | 2 | 2 | 2 |
| Water Inlet Pipe (MNPT) | 2 | 2 | 2 | 2 | 2 | 2 | 2 |
| Air Intake | 4 | 4 | 6 | 6 | 6 | 6 | 6 |
| Vent Outlet | 4 | 4 | 6 | 6 | 6 | 8 | 8 |
| Condensate Drain (PVC) | 1 | 1 | 1 | 1 | 1 | 1 | 1 |
| Drain Line (FNPT) | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 |
| Electrical Conduit Holes | 7/8 | 7/8 | 7/8 | 7/8 | 7/8 | 7/8 | 7/8 |

III. Product Rating, Specifications, and Dimensional Data (continued)

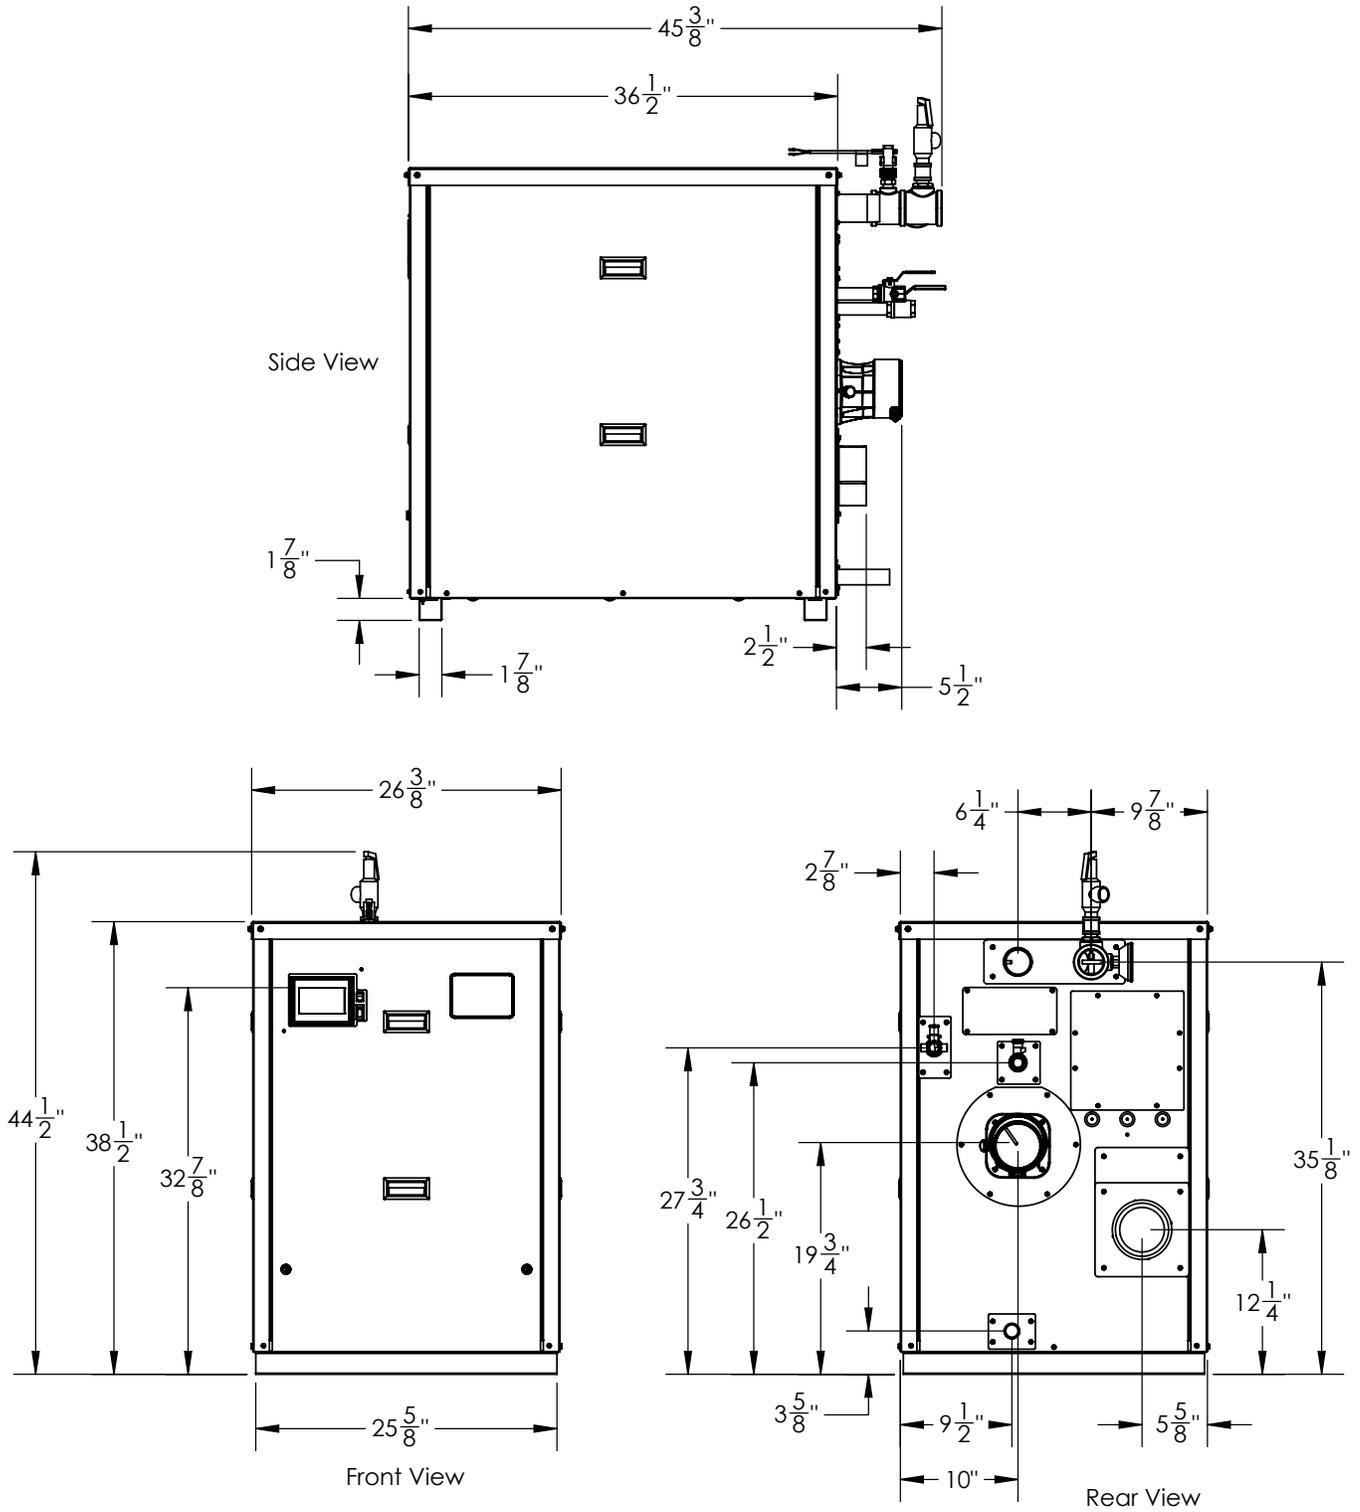


Figure 1: 400-500 Dimensions

III. Product Rating, Specifications, and Dimensional Data (continued)

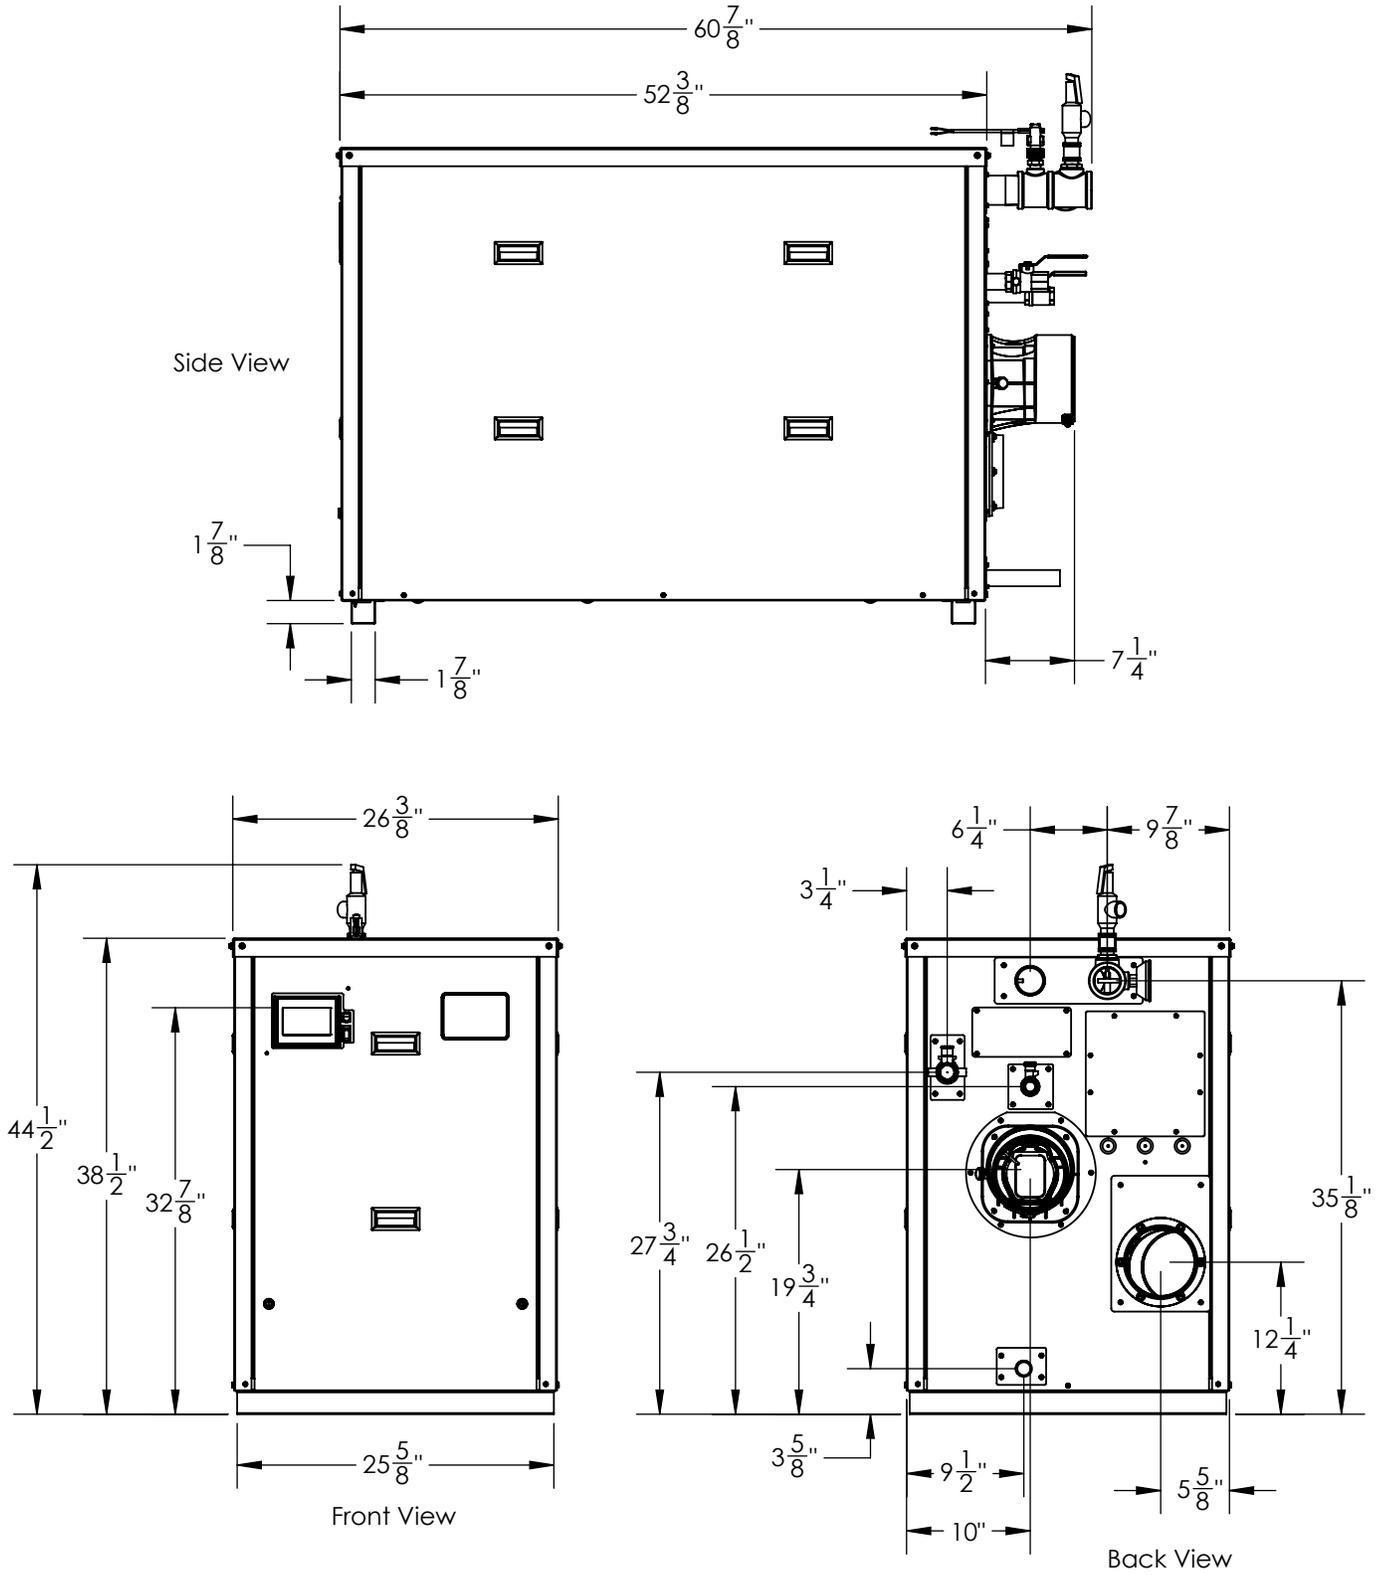


Figure 2: 650-1000 Dimensions

III. Product Rating, Specifications, and Dimensional Data (continued)

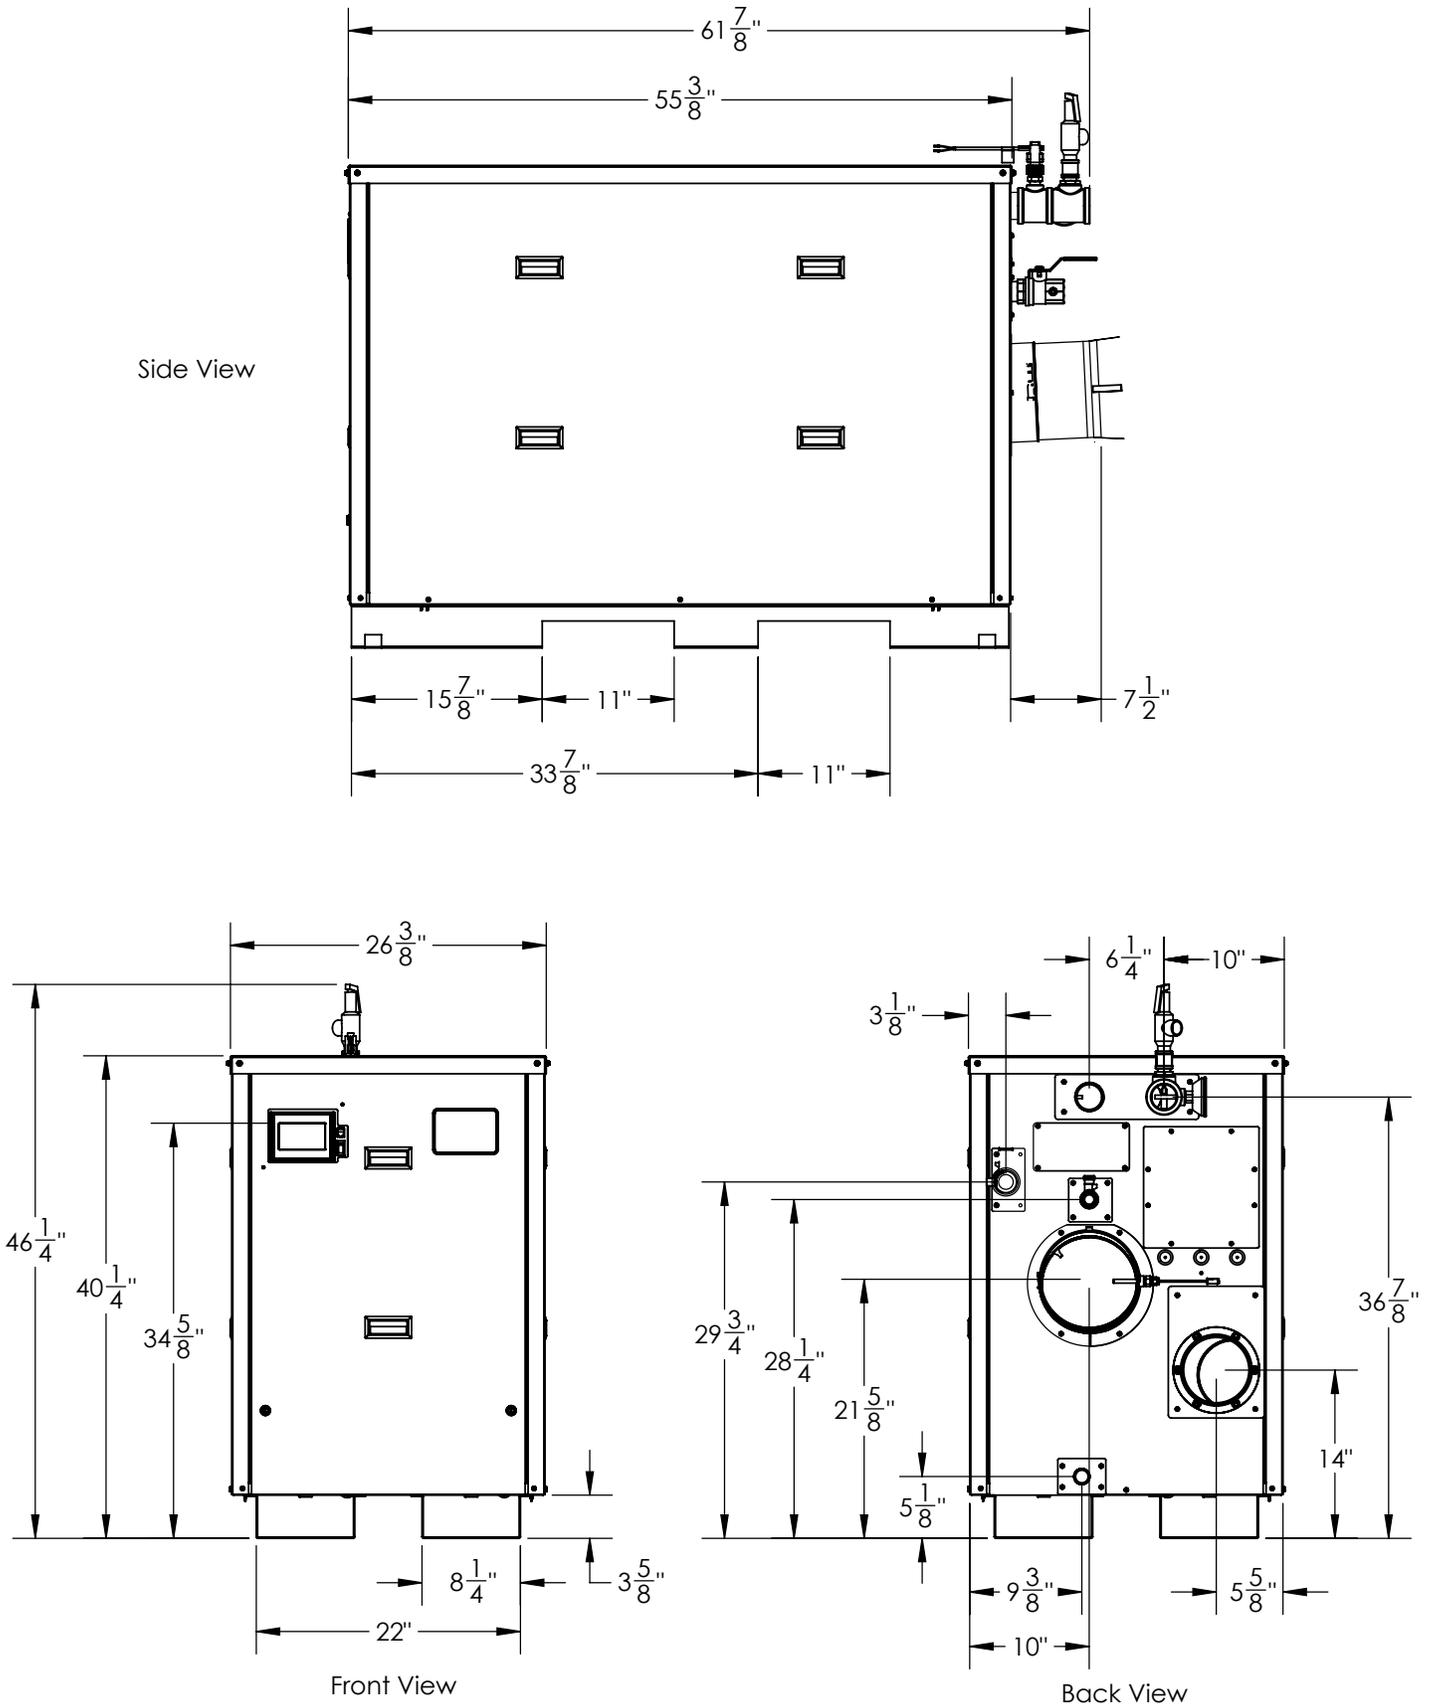


Figure 3: 1250-1500 Dimensions

IV. Unpacking The Shipping Crate

A. Unpacking and Inspection

1. Move appliance to approximate installation location.
2. Remove all crate fasteners.
3. Lift and remove outside container.
4. Remove lag screws securing base to the pallet.
5. Account for all loose shipped items.
6. The appliance can be moved to its permanent location via a fork lift, pallet jack, or dolly.
7. The appliance can be lifted from the base using a fork lift inserted from the side.

B. Check Equipment

1. Upon receiving the equipment, check for signs of shipment damage.
2. Pay particular attention to parts accompanying the appliance which may show signs of being hit or otherwise mishandled.
3. Verify total number of pieces shown on packing slip with those actually received. In case there is damage or a shortage, immediately notify the carrier.
4. Verify model size and type (Boiler/Water heater, C/V)
 - a. Model number and rating label is on the front control panel door.
5. Some parts are shipped loosely with the appliance. Some of these parts are required to install before operation.
 - a. Required to install: Manual gas shutoff valve, water flow switch, relief valve, temperature and pressure gage, and outlet water piping as shown in Figure 18.
 - b. Optional to install Loose parts: Outdoor intake panel and cover, stacking brackets.
6. Ensure the included polypropylene vent adapter is installed in the proper orientation. The clamp screw faces down, and the test port faces right (Gas train side). See Figure 1 and Figure 2.

C. Installation and Operation Manual

1. The instruction manual enclosed with the unit is an integral part of the product and must be retained by the person in charge of the appliance. Please read the instructions contained in this manual carefully as they provide important information regarding the safe installation, use and servicing of this appliance.

⚠ WARNING

Failure to assure the lifting forks are long enough to extend at least half way through the base will result in the appliance tipping and potentially falling. This could result in personal injury, death, or substantial property damage.

Do not operate this appliance if any part has been underwater. The possible damage to a flooded appliance can be extensive and present numerous safety hazards. Any appliance that has been underwater must be replaced.

NOTICE:

Do not drop, bump, or lean an object against the appliance. This could damaging the heat exchanger or other critical components.

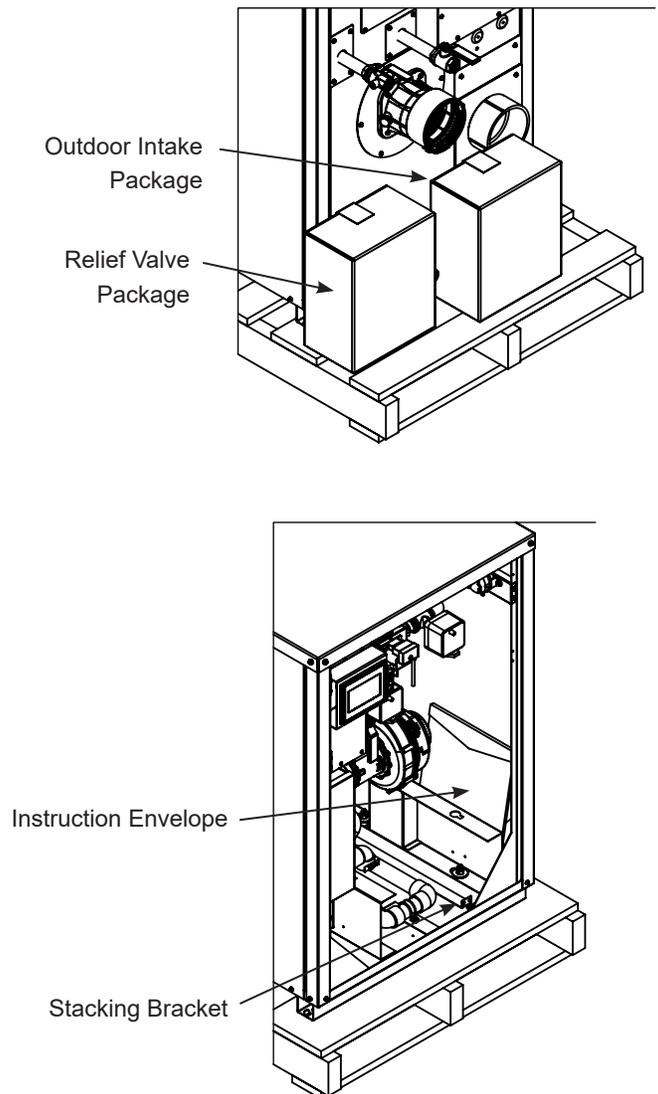


Figure 4: Loosely shipped parts locations

V. Component Identification

- 1. Communication Interface (Concert™ Control)**
Digital User interface for operational control of the appliance.
- 2. Main appliance control**
Receives and processes input signals from safety switches and sensors to control the appliance.
- 3. Front control box**
Slide out control box designed to allow easy access to the main controls for service.
- 4. Rear control box**
Houses Field connection PCBs.
- 5. ON/OFF switch**
Initiates or interrupts the power to the burner.
- 6. Main gas valve**
Combination air/fuel ratio and automatic safety shutoff gas valve.
- 7. Gas and Air Mixer/Venturi**
High Turn-down venturi that mixes air and gas before entering the blower.
- 8. Blower**
Modulating blower supplying combustion air to the appliance.
- 9. Burner**
The high efficiency, low NOx Burner is mounted on the burner door. Secured by blower adapter.
- 10. Ignition electrode**
Provides electrical spark for direct ignition of the main burner.
- 11. High gas pressure switch**
Monitors supply gas pressure and shuts off the electrical control circuit when pressure rises above the setpoint (see Table 24).
- 12. Low gas pressure switch**
Monitors supply gas pressure and shuts off the electrical control circuit in the event a low gas pressure condition occurs (see Table 24).
- 13. Outlet/Supply**
2" Female NPT connection for hot water supply.
- 14. Water flow switch**
Paddle activated switch that monitors water flow.
- 15. Gas supply connection**
Connection to appliance gas train. See Table 24 for model specific pipe sizes.
- 16. Inlet/Return**
2" Male NPT inlet water connection to the appliance.
- 17. Hot/outlet water temperature sensor**
Dual element temperature sensor for high limit control.
- 18. Cold/Inlet water temperature sensor**
Used for monitoring the inlet water temperature and temperature rise across the appliance.
- 19. Low water cut off (LWCO)**
The LWCO safeguards the heat exchanger from inadequate water level. The LWCO has a manual reset button.
- 20. Temperature and pressure gauge**
Provides real time outlet water temperature and pressure readings.
- 21. Pressure relief valve**
Protects the heat exchanger from over pressure conditions. Various pressure settings are available.
- 22. Condensate drain trap**
Drains condensate from the heat exchanger while preventing flue gases from escaping through the drain line.
- 23. Minimum combustion air proving switch**
Ensures adequate combustion air is supplied to the combustion chamber for ignition.
- 24. Blocked vent switch**
Interrupts the control circuit if there is a blockage in the venting system.
- 25. Combustion air filter box**
Houses the washable combustion air filter.
- 26. Heat Exchanger**
H stamped, 316L Stainless Steel, Condensing, water tube type heat exchanger.
- 27. Heat Exchanger Drain**
3/4" NPT ball valve is provided for draining the heat exchanger.
- 28. Exhaust Vent Connection**
400-1000: Polypropylene adapter for connection to stainless steel, Polypropylene, or CPVC venting systems.
1250-1500: Stainless steel Heat Fab Saf-T Vent adapter.
See Table 6 for model specific vent connections.
- 29. Condensate Drain Connection**
1" PVC pipe for condensate drain.
- 30. Combustion Air Intake Connection**
4" female PVC slip provided for 400-500 models.
6" aluminum ring provided for 650-1500 models.

V. Component Identification (continued)

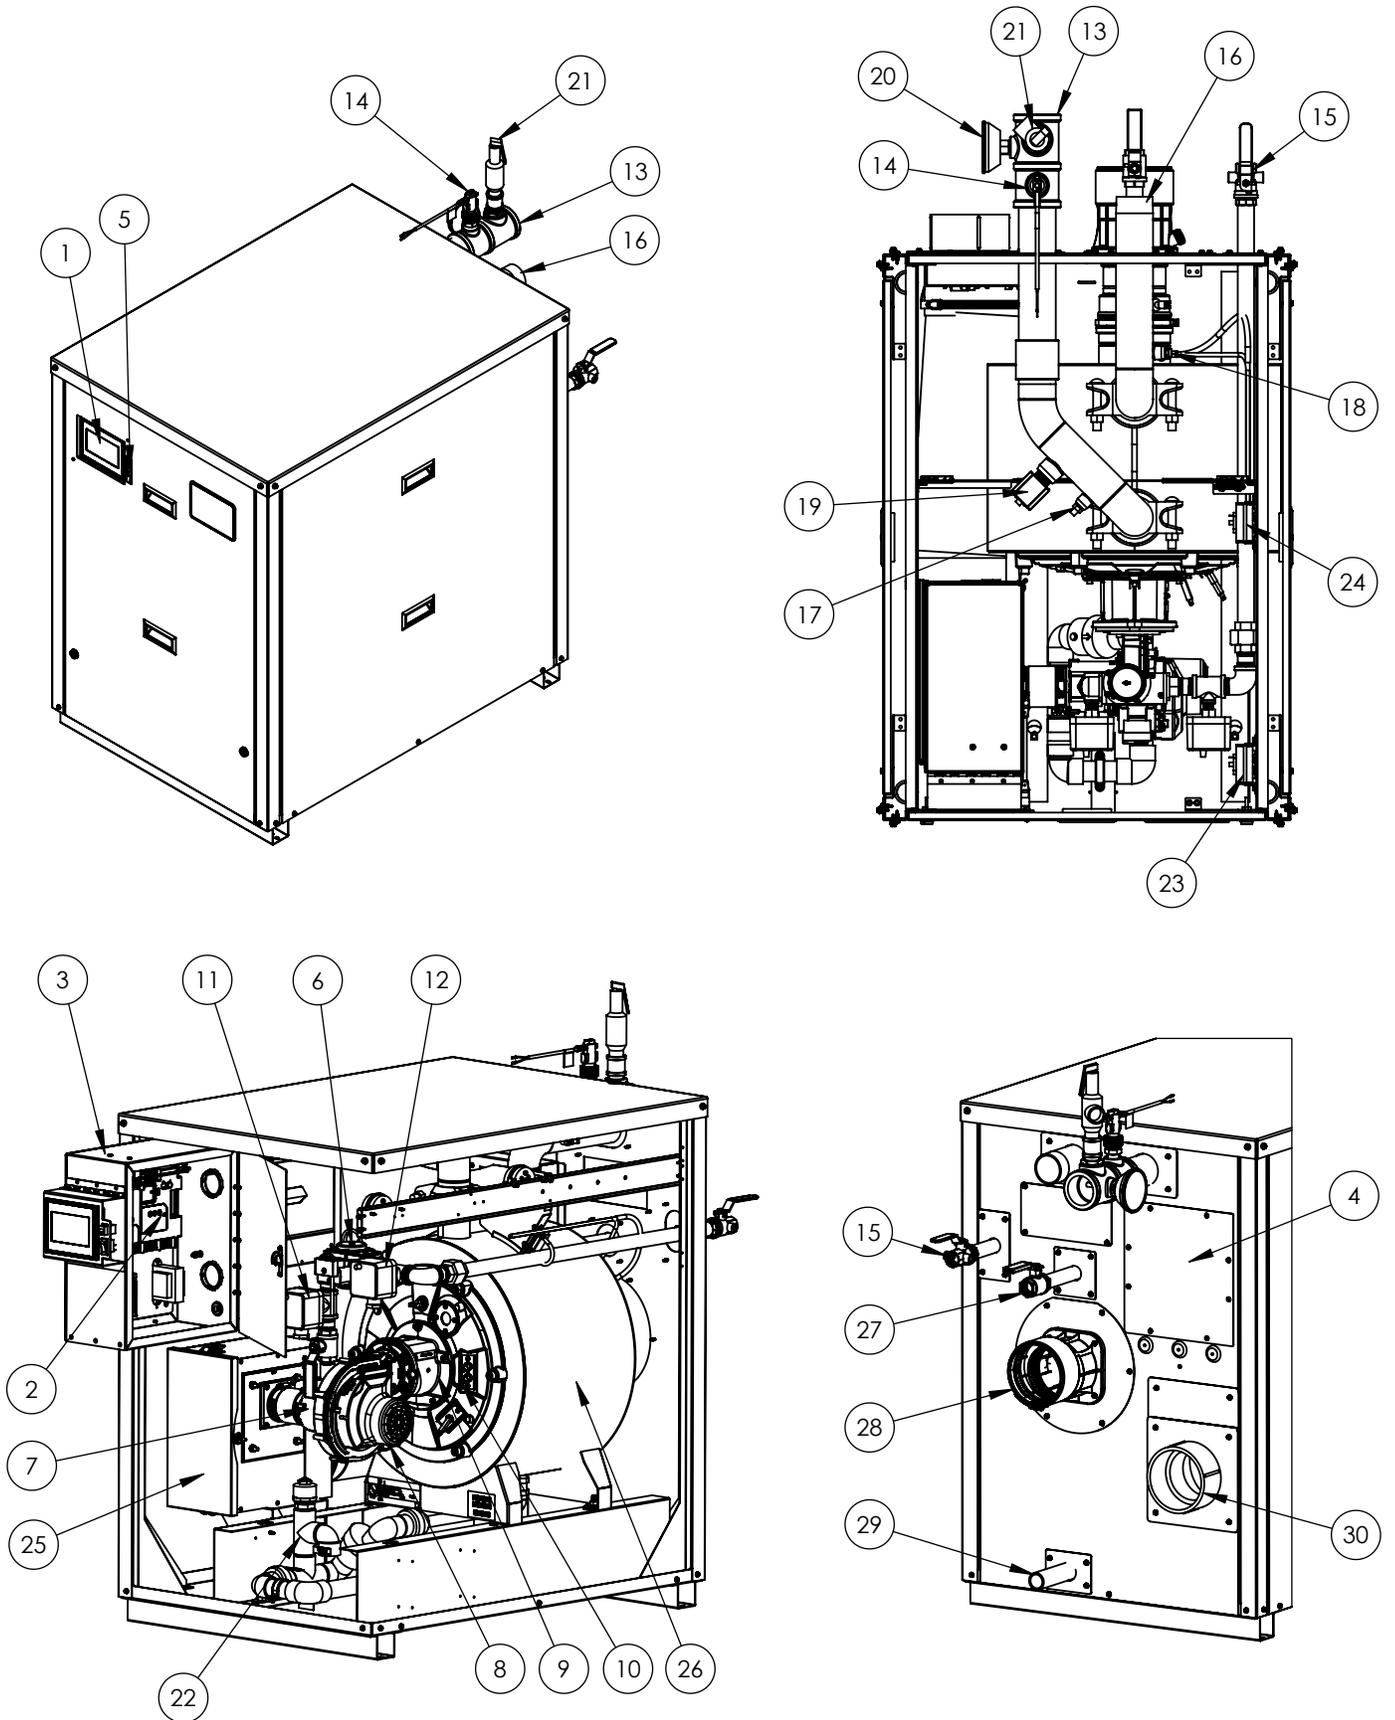


Figure 5: Component Identification

VI. Pre-Installation and Mounting

A. General

1. Installation must conform to the requirements of the authority having jurisdiction or, in the absence of such requirements, to the *National Fuel Gas Code, ANSI Z223.1/NFPA 54, and/or Natural Gas and Propane Installation Code, CAN/CSA B149.1*. Where required by the authority having jurisdiction, the installation must conform to the *Standard for Controls and Safety Devices for Automatically Fired Boilers, ANSI/ASME CSD-1*.
2. Provide clearance between appliance jacket panels and combustible material in accordance with local fire ordinance. Refer to Table 5 for recommended service clearances. Recommended service clearances may be reduced but should not be less than the clearance to combustibles.
3. Protect gas ignition system components from water (dripping, spraying, rain, etc.) during operation and service (circulator replacement, condensate trap, control replacement, etc.).
4. Provide combustion and ventilation air in accordance with applicable provisions of local building codes, or: USA - National Fuel Gas Code, ANSI Z223.1/NFPA 54, Air for Combustion and Ventilation; Canada - Natural Gas and Propane Installation Code, CAN/CSA-B149.1, Venting Systems and Air Supply for Appliances.
5. The appliance should be located so as to minimize the length of the vent system. Ensure air intake pipe termination is away from areas that may contaminate the combustion air (see Table 4). In particular, avoid areas near chemical products containing chlorines, chlorofluorocarbons, paint removers, cleaning solvents, and detergents. Avoid areas containing saw dust, loose insulation fibers, dry wall dust etc.
6. This appliance must not be installed in a room under negative pressure. An equipment room under negative pressure conditions could deplete the combustion air supply to the appliance and cause leakage of flue gas from the venting system.

⚠ WARNING

Apply supplied silicone lubricant to the gasket inside the vent connector. Failure to apply lubricant could result in flue gas leaks or gasket deterioration.

Adequate combustion and ventilation air must be provided to assure proper combustion. Install combustion air intake using the methods in this manual.

Installation of this appliance should be undertaken only by trained and skilled personnel from a qualified service agency. Follow these instructions exactly. Improper installation, adjustment, service, or maintenance can cause personal injury, death, or substantial property damage.

Do not change or modify any accessories or parts or jump-out any safety limit devices.

⚠ DANGER

This appliance includes a combustion air filter. Ensure filter is installed at all times of operation. Inspect and clean filter according to the maintenance section of this manual.

Avoid operating this appliance in an environment where sawdust, loose insulation fibers, dry wall dust, etc. are present. If operated under these conditions, The burner must be inspected for clogged ports, and replaced if needed.

The installer must verify that at least one carbon monoxide alarm has been installed within a residential living space or home following the alarm manufacturer's instructions and applicable local codes before putting the appliance into operation.

NOTICE:

Due to the low water content of the appliance, mis-sizing with regard to the heating or hot water system load will result in excessive cycling and accelerated component failure.

The manufacturer DOES NOT warrant failures caused by mis-sized appliance applications. DO NOT oversize the appliance to the system. Multiple unit installations greatly reduce the likelihood of oversizing.

Ensure all labels on the product are fully visible at all times for the purpose of maintenance and inspections.

VI. Pre-Installation and Mounting (continued)

Table 4: Corrosive Combustion Air Contaminants

| |
|---|
| Contaminants to Avoid: |
| Spray cans containing chlorofluorocarbons (CFC's) |
| Permanent wave solutions |
| Chlorinated waxes/cleaners |
| Chlorine-based swimming pool chemicals |
| Calcium chloride used for thawing |
| Sodium chloride used for water softening |
| Refrigerant leaks |
| Paint or varnish removers |
| Hydrochloric acid/muriatic acid |
| Cements and glues |
| Anti-static fabric softeners used in clothes dryers |
| Chlorine-type bleaches, detergents, and cleaning solvents found in household laundry rooms. |
| Adhesives used to fasten building products and other similar products |
| Excessive dust and dirt |
| Areas likely to have contaminants: |
| Dry cleaning/laundry areas and establishments |
| Swimming pools |
| Metal fabrication plants |
| Beauty shops |
| Refrigeration repair shops |
| Photo processing plants |
| Auto body shops |
| Plastic manufacturing plants |
| Furniture refinishing areas and establishments |
| New building construction |
| Remodeling areas |
| Garages with workshops |

B. Appliance Mounting

1. Intended for installation in an area with a floor drain, or in a suitable drain pan to prevent any leaks or temperature and pressure relief valve discharge resulting in property damage.
2. This appliance is not intended to support external piping or venting. All external piping and venting must be supported independently of the appliance.
3. This appliance must be installed on a level surface to prevent condensate from backing up inside the heat exchanger.
4. Provide adequate space for condensate piping, condensate pump, or neutralizer kit.

5. An elevated base/pad is required when the floor is not level or in areas where water could accumulate around the appliance. The base must be able to support the weight of the appliance, water, and all additional system components.
 - a. This appliance is listed for installation on combustible flooring. Acceptable flooring includes a level metal or wooden base capable of holding the weight of the appliance, water, and additional components. The base shall extend beyond the edges of the appliance by at least 3 inches (76.2 mm) in any direction. Never install directly on carpeted flooring.
 - b. For closet or alcove installation, the base shall cover the entire floor of the closet/alcove.
6. Secure the appliance to its location using the 5/8" anchoring holes on the feet of the base

⚠ CAUTION

For installation and operation only in climates where the ambient temperature will not be less than 32 °F (0 °C). Do not install in climates where condensate can freeze.

Appliance must be protected from standing water. Install on a level platform.

Never install directly on carpeted flooring.

Areas subject to earthquakes may have special requirements that take precedence over requirements in these instructions.

VI. Pre-Installation and Mounting (continued)

C. Outdoor Conversion and Installation

1. Outdoor installations of this appliance is intended for warm climates only.
2. Install on a level permanent platform that keeps the appliance free from standing water.
3. Three sides around the appliance must be open.
4. When installing under an overhang, conform to local codes.
5. All parts required to convert the appliance for outdoor installation are included.
 - a. Outdoor intake panel and hood come in a box inside the shipping crate.
6. Instructions for converting for outdoor installation.
 - a. Remove left side panel for access to flexible air duct.
 - b. Remove flexible air duct by loosening hose clamps on both ends.
 - c. Remove Intake connection assembly. (4 hex head screws on the rear panel)
 - d. Replace intake connection with outdoor mesh panel and hood.
 - e. Re-install left side panel.
 - f. Fill out outdoor conversion label and affix to a conspicuous location.
7. Ensure to leave display cover mounted to front panel for outdoor installation

D. Display Cover and Ergonomic Control

1. When installing indoors, the display cover can be removed for access to the control without taking off front panel.
 - a. Display cover is mounted with two screws and adhesive. Remove screws and pry off using plastic trim tool.
2. Hinged display bracket is for ergonomic operation of the controls.
 - a. Display bracket screw secures display during shipping and can be removed upon installation.

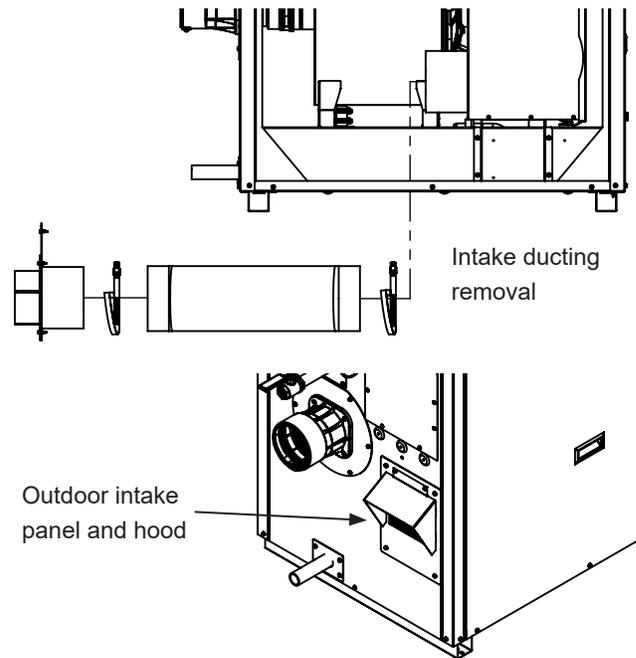


Figure 6: Outdoor Conversion Parts

⚠ CAUTION

For installation and operation only in climates where the ambient temperature will not be less than 32 °F (0 °C). Do not install in climates where condensate can freeze. Appliance must be protected from standing water. Install on a level platform. Do not install this appliance under an overhang less than 3 feet from its top. The area under the overhang must be open on 3 sides.

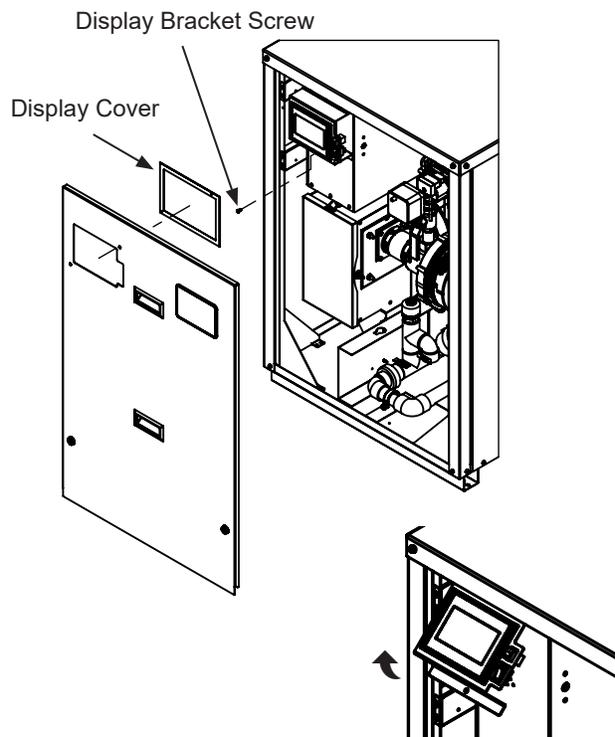


Figure 7: Display Cover and Bracket

VI. Pre-Installation and Mounting (continued)

E. Appliance Stacking

1. The 400-1500 models may be installed in a stacked configuration. Stack common jacket sizes only.

⚠ WARNING

Stack common jacket sizes only.

- a. One 400 or 500 model can be mounted on top of another 400 or 500.
 - b. One 650, 800, or 1000 model can be mounted on top of another 650, 800, or 1000.
 - c. One 1250 or 1500 model can be mounted on top of another 1250 or 1500.
2. Lifting the appliance for stacking.
 - a. Lifting with a forklift: Place forks center of the base from the side.

⚠ WARNING

Failure to center the lifting forks under the base of the appliance could result in personal injury, death, or substantial property damage.

- b. Lifting with a crane: Remove top panel to access the lifting lugs of the heat exchanger.

3. Each appliance is shipped with a brace and screws for stacking. If needed, order stacking brace kit (PN: 111405-01)
 - a. Follow all previous instructions for mounting the bottom appliance.
 - b. Use the included screws to secure the brace as shown in Figure 8.
4. Optional outdoor venting kit will not work in a stacked configuration. It is the installers responsibility to provide adequate venting for stacked outdoor models.

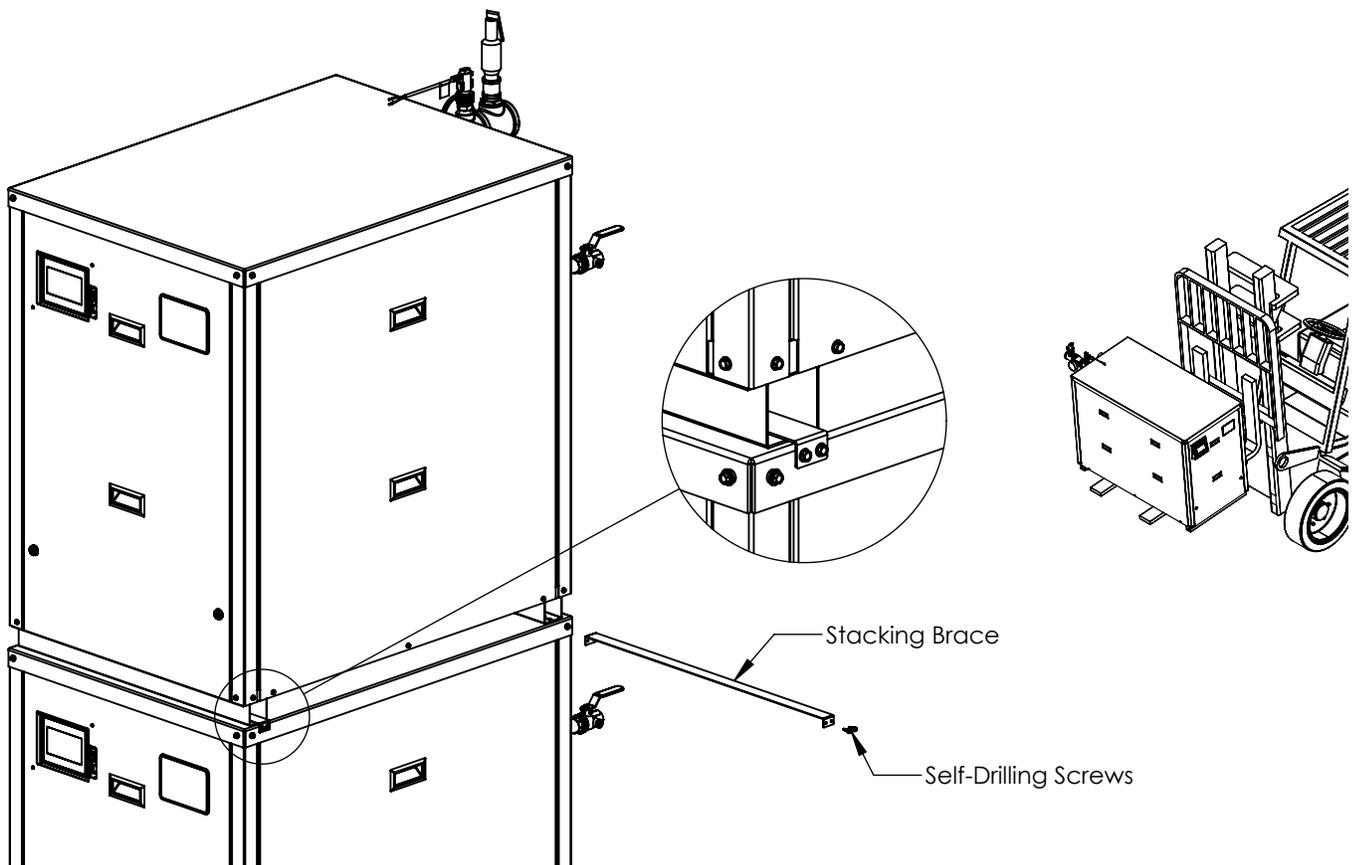


Figure 8: Lifting and Stacked Mounting

VI. Pre-Installation and Mounting (continued)

F. Clearances

1. This appliance is listed for 0" clearance to combustible materials. The clearances for serviceability are found in Table 5.
2. Minimum clearances from combustible or noncombustible construction, 0" sides, 0" back, 0" top.
3. It is the installers responsibility to provide enough clearance for servicing the appliance in the installed location.

G. Clearances (French)

1. Dégagements minimaux à assurer entre les parois de l'appareil et les constructions combustibles ou incombustibles : 0 po (côtés), 0 po (arrière) et 0 po (dessus).
2. Installation dans une garde-robe : assurer un dégagement de 24 po devant l'appareil.

H. Closet and Alcove Installation

1. Include ventilation air openings in closet installations.
2. Provide a 1" minimum clearance around water pipes.
3. Follow vent material manufacturer for vent clearances.
4. Clearances for closet or alcove installation:
 - Front - 24"
 - Sides - 24"
 - Rear - 22"
 - Top - 20"

Table 5: 400-1000 Clearances

| Minimum Clearance | Front (In.) | Rear (In.) | Right (In.) | Left (In.) | Top (In.) |
|---------------------------------------|-------------|------------|-------------|------------|-----------|
| Serviceability (Indoor Installation) | 24 | 24 | 0* | 0* | 0 |
| Serviceability (Outdoor Installation) | 24 | 36 | 0* | 0* | 0** |
| To Combustible Construction | 0 | 0 | 0 | 0 | 0 |

* Leave 24" clearance on at least one side.

** When installing under an overhang, conform to local codes.

NOTICE:

This appliance is listed for zero inch clearance to combustible or noncombustible material, but installing the appliance with smaller than the clearances for serviceability will limit access for maintenance.

Consult local codes and inspectors before installing multiple appliances adjacent to each other with zero clearance.

⚠ WARNING

Closet and alcove installation can cause elevated temperatures. Follow the required clearances and use only stainless steel, CPVC, or polypropylene vent material.

Include ventilation air openings in closet installations.

Do not install directly on carpeted flooring.

I. Side by Side and 0" Clearance Installation

1. It is recommended to Install multiple units in pairs with at least 24 inches between to maintain full access for servicing.

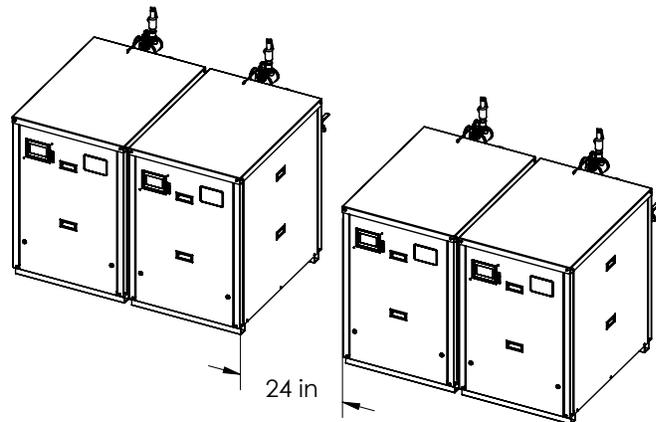


Figure 9: Side by Side installation

⚠ WARNING

Installing one appliance between two others with 0" clearance may require disconnection from the system when servicing.

Outdoor appliances can only be installed side by side in pairs. Ensure louvered panels are installed on outer sides of the pair.

VII. Venting

A. General Venting Guidelines

1. Install vent system in accordance with *National Fuel Gas Code, ANSI Z223.1/NFPA 54* or *Natural Gas and Propane Installation Code, CAN/CSA B149.1 Installation Code for Canada*, or, applicable provisions of local building codes.
2. This is a direct vent appliance but can also be used with indoor air for combustion.
 - a. Venting kits are available for outdoor installation.
3. Vent/combustion system materials that are approved for use with this appliance are listed in Table 9. Venting manufacturers not listed in this manual may be acceptable. It is the responsibility of the installer or vent supplier to use compatible adapters and materials.
 - a. It is recommended to consult with venting professionals and designers when determining the vent system for this appliance.
4. Enclose vent passing through occupied or unoccupied spaces above the appliance with material having a fire resistance rating at least equal to the rating of adjoining floor or ceiling.
5. For flue gas venting, have horizontal runs sloping upwards not less than ¼ inch per foot (21 mm/m) from the appliance to the vent terminal.
6. This appliance operates under conditions that permit condensation in the heat exchanger and the flue gas venting. This appliance shall be installed so as to prevent accumulation of condensate, and where necessary, have means provided for drainage of condensate.
7. If possible, slope horizontal combustion air pipe minimum 1/4 in/ft (21 mm/m) downward towards terminal. If not, slope towards the appliance.
8. It is recommended that a Carbon Monoxide detector be installed and interlocked to the appliance. Consult your local jurisdiction for additional requirements.

B. Venting Design Requirements

At the discretion of the installing contractor, the venting system can be designed by consulting with approved venting engineers or by using the equivalent length method in this manual. This appliance uses category II or IV venting.

1. Engineered Venting Method

Using the operating characteristics and required conditions, an individual or common venting system can be designed to ensure the reliability of the appliance(s).

⚠ WARNING

This appliance must not be installed in a room under negative pressure. These direct vent gas fired appliances are allowed a maximum leakage of 2% from the venting/combustion chamber and 8% from the air inlet portion when pressurized to operating conditions in a neutral pressure room. An equipment room under negative pressure could deplete the combustion air supply to the appliance and cause leakage of flue gas from the venting system.

Exhaust fans installed in equipment rooms can create negative pressure conditions strong enough to cause nuisance shutdowns of the appliance.

Improper Installation of a Category II vent system resulting in positive pressure in the vent system can result in flue gas spillage and carbon monoxide emissions, causing personal injury, death or substantial property damage.

NOTICE:

Common venting with other manufacturers' appliances or different models from the same manufacturer is prohibited.

It is the Responsibility of the installing contractor or venting designers to comply with national and local codes and follow best industry practices for installing vent support, drainage, and pitch.

Do not exceed maximum vent/combustion air system length.

- a. Flue gas temperatures and flow rates can be found in Table 12.
- b. The combustion CO₂ and O₂ ranges are shown in Table 26.
- c. The pressure at the flue outlet of the appliance at any given firing rate must be within the range of negative 0.25" W.C. to positive 0.5" W.C.
- d. The pressure at the intake of the appliance at any given firing rate must be within the range of negative 0.3" WC to positive 0.1" WC.
- e. **Manifolded venting** without backflow prevention can allow flue gas from one appliance to interact with the other appliances in the system. Common venting systems must be designed with backflow protection.

2. **Equivalent length method:** Do not exceed maximum vent/combustion air lengths listed in Table 6. Equivalent lengths of fittings are given in Table 7.

VII. Venting (continued)

C. Field Installation

1. A factory installed 4" PVC slip or 6" cast aluminum collar provides a means for air intake connection.
2. A factory installed Polypropylene vent adapter provides a means for vent connection.
3. Vent and combustion air intake pipe must be supported to allow uniform flow of combustion air and flue gas.
4. Plan venting system to avoid possible contact with plumbing or electrical wires. Start at the vent connector and work towards the vent termination.
5. Design the air intake system to allow 3/8" (9.5mm) of thermal expansion per 10 ft. (3m) of CPVC/PVC pipe. Runs of 20 ft. (6.1m) or longer that are restrained at both ends must have an offset.
6. Size and cut wall opening such that a minimal clearance is obtained and to allow easy insertion of vent pipe.

Table 6: Vent and Combustion Air Pipe Diameters and Maximum Lengths

| Model | Combustion Air Length | | | Vent Length | | | Derate with Max Venting |
|--|-----------------------|---------------------|---------------------|--------------------|---------------------|---------------------|-------------------------|
| | Pipe Dia. in. (mm) | Minimum eq. ft. (m) | Maximum eq. ft. (m) | Pipe Dia. in. (mm) | Minimum eq. ft. (m) | Maximum eq. ft. (m) | |
| 400, 500 | 4 (100) | 0 | 100 (30) | 4 (100) | 5 (1.5) | 100 (30) | 4.8% |
| 650, 800, 1000 | 6 (150) | 0 | 100 (30) | 6 (150) | 5 (1.5) | 100 (30) | |
| 1250, 1500 Standard | 6 (150) | 0 | 85 (26) | 8 (200) | 5 (1.5) | 150 (46) | |
| 1250, 1500 Alternate | 8 (200) | 0 | 150 (46) | 6 (150) | 5 (1.5) | 85 (26) | |
| NOTE: Contact factory for assistance on maximum vent length applications. This table applies to all listed vent/combustion air system options. Max vent derate should be applied after altitude derate. | | | | | | | |

Table 7: Equivalent lengths of Vent and Combustion Air Components

| Diameter | 4 in. (100 mm) | 6 in. (150 mm) | 8 in. (200 mm) |
|---------------------------------|----------------|----------------|----------------|
| 90° Elbow (short radius, R/D<1) | 12 ft. (3.7 m) | 17 ft. (5.2 m) | 23 ft. (7 m) |
| 90° Elbow (long sweep, R/D>1) | 5 ft. (1.5 m) | 8 ft. (2.4 m) | 10 ft. (3 m) |
| 45° Elbow | 2 ft. (0.6 m) | 3 ft. (1 m) | 6 ft. (1.8 m) |

Table 8: Vent and Combustion Air Equivalent Length Calculation Worksheet

| Component | Combustion Air | | | | | Vent | | | | |
|---|--|---|----------|---|----------------------------|------------------------------|---|----------|---|----------------------------|
| | Equivalent Length Per Piece | x | Quantity | = | Subtotal Equivalent Length | Equivalent Length Per Piece | x | Quantity | = | Subtotal Equivalent Length |
| Straight Pipe | | x | | = | A | | x | | = | D |
| 90° Elbow | | x | | = | B | | x | | = | E |
| 45° Elbow | | x | | = | C | | x | | = | F |
| | Combustion Air Total Equivalent Length | | | = | | Vent Total Equivalent Length | | | = | |
| Notes: 1. Total equivalent length cannot exceed maximum equivalent length shown in Table 6. 2. Combustion air and vent terminations do not count towards total equivalent length. | | | | | | | | | | |

VII. Venting (continued)

Table 9: Listed Vent Manufacturers and Materials

| Make | Stainless Steel Brand | Polypropylene Brand |
|--------------------------|-----------------------|---------------------|
| DuraVent | FasNSeal | PolyPro |
| Heat Fab | Saf-T Vent EZ Seal* | - |
| Z-Flex (Nova Flex Group) | Z-Vent | Z-DENS |
| Centrotherm | - | InnoFlue SW Rigid |
| Jeremias | SWGv | |

| ⚠ WARNING |
|--|
| Use of cellular core PVC (ASTM F891), cellular core CPVC, or Radel® (polyphenylsulfone) in non-metallic venting systems is prohibited. Covering non-metallic vent pipe and fittings with thermal insulation is prohibited. |

Note: Included appliance connection is a 3-in-1 adapter that permits Stainless Steel, Polypropylene, or CPVC. Adapting to Z-DENS requires 4" increaser 2ZDI44 or 6" adapter 2ZDCPVC6. Adapting to InnoFlue requires 4" adapter ISAALE0404 or 6" adapter ISAALE0606 or 8" adapter ISSA0808 with clamp ISHC08. Adapting to Jeremias SWGV requires 4" adapter SWGV4-RCIS or 6" adapter SWGV6-RCIS or 8" adapter SWGV8RCIS. For 1250-1500: Adapting to Z-Flex Z-Vent Requires 2SVSHF08. Adapting to Duravent FasNSeal requires FSA-HFA8a

Table 10: Stainless Steel Vent Terminations

| Style | 4" Vent Diameter | | 6" Vent Diameter | | 8" Vent Diameter | |
|-----------|----------------------------|--------------------------|----------------------------|--------------------------|----------------------------|----------------------|
| | Heat Fab Part # Saf-T Vent | DuraVent Part # FasNSeal | Heat Fab Part # Saf-T Vent | DuraVent Part # FasNSeal | Heat Fab Part # Saf-T Vent | Z-Flex Part # Z-Vent |
| Tee | 9490TEE | FSTT4 | 9690TEE | FSTT6 | 9890TEE | 2SVST08 |
| 90° Elbow | 9414TERM | - | 9614TERM | - | 9814TERM | 2SVEE0890 |
| Straight | 9492 | - | 9692 | - | 9892 | 2SVSTPX08 |
| 23° Elbow | - | FSBS4 | - | FSBS6 | - | - |

Table 11: Polypropylene Vent Terminations

| Model | Vent Diameter (in.) | Style | DuraVent Part # PolyPro | Centrotherm Part # InnoFlue | Z-Flex Part # Z-DENS |
|--------------------|---------------------|----------|-------------------------|-----------------------------|----------------------|
| 400 500 | 4 | Tee | 4PPS-TTBL | ISTT0420 | 2ZDTT4 |
| | | Elbow | 4PPS-E90BC | - | 2ZDE487UV |
| | | Straight | 4PPS-12BC | ISEP04 | 2ZDES4 |
| | | Screen | 4PPS-BG | IASPP04 | 2ZDES4 |
| 650 800 1000 | 6 | Tee | 6PPS-TTBC | ISTT0620 | 2ZDTT6 |
| | | Elbow | 6PPS-E90BC | - | 2ZDE687 |
| | | Straight | 6PPS-12BC | - | 2ZDES6 |
| | | Screen | 6PPS-BG | IASPP06 | 2ZDES6 |
| 1250 1500 | 8 | Tee | - | ISTT0820 | 2ZDTT8 |
| | | Elbow | - | - | - |
| | | Straight | - | ISEP086 | - |

Table 12: Combustion Air and Flue Gas Flow Rates

| Model | At Maximum Input Rate | | At Minimum Input Rate | |
|-------|--|--|--|--|
| | Flue Gas Flow, ACFM @ 35% Excess Air, 180 °F | Combustion Air, SCFM @ 35% Excess Air, 60 °F | Flue Gas Flow, ACFM @ 35% Excess Air, 180 °F | Combustion Air, SCFM @ 35% Excess Air, 60 °F |
| 400 | 113 | 85 | 11 | 9 |
| 500 | 141 | 106 | 14 | 11 |
| 650 | 183 | 138 | 18 | 14 |
| 800 | 226 | 170 | 23 | 17 |
| 1000 | 282 | 212 | 28 | 21 |
| 1250 | 352 | 265 | 35 | 27 |
| 1500 | 424 | 319 | 42 | 32 |

Note: Flow rates are based on the combustion of natural gas.

VII. Venting (continued)

D. Room Air for Combustion

1. If using room air for combustion (intake), install the included screen to the intake opening of the appliance.
 - a. Sizes 400-500: The included circular rodent screen can be pushed into the 4 in. PVC slip on the rear panel.
 - b. Sizes 650-1500: Remove the 6 screws holding the 6 in. aluminum collar and gasket to the rear panel. Use the same screws to install the included mesh screen covering the intake opening.

E. CPVC/PVC Venting Systems

1. When venting with PVC material, the CPVC vent kit must be connected to the vent adapter of the appliance. PVC can be installed downstream all the CPVC vent kit material. The CPVC vent kit includes a 30 in. long Sch. 40 pipe and a 90° Sch. 80 elbow.
 - a. 4 in. CPVC vent kit, sizes 400-500: 111569-01
 - b. 6 in. CPVC vent kit, sizes 650-1000: 111569-02
 - c. 8 in. CPVC vent kit, sizes 1250-1500: 113404-01
2. Apply supplied silicone lubricant to gasket inside vent connector to prevent damage or deterioration from condensate exposure.
3. The 30 in. long CPVC straight pipe may be cut to accommodate desired vent configuration provided both pieces are used in conjunction with the CPVC 90° Elbow before any PVC components are used. Ensure that the CPVC 90° Elbow is the first elbow used in the vent system as it exits the appliance.
4. Apply appropriate primer to all CPVC and PVC components before cementing. Cement the vent system together, starting at the boiler and following the instructions provided on the cans of cement and primer. Use a field supplied cement and primer that is listed for use with the materials being joined (CPVC and/or PVC). The following, or its equivalent, may be used to join CPVC to PVC:
 - a. Oatey Purple Primer and Oatey Medium Orange CPVC Cement
5. Always use primer on both the pipe and fitting before applying the cement. Assemble the pipe in accordance with the instructions on the cans of primer and cement.

F. Venting for Outdoor Installation

1. Recommended venting configuration for outdoor installation is shown in Figure 10
 - a. Install minimum of 3 ft straight venting with one elbow and termination tee.

⚠ CAUTION

Use all CPVC vent kit components for vent piping near the appliance before transitioning to Schedule 40 PVC pipe (ASTM D2665 or ASTM D1785) components for remainder of vent system.

⚠ WARNING

Asphyxiation Hazard. All CPVC/PVC vent joints must be glued. Failure to comply could cause products of combustion and/or carbon monoxide to enter the building, resulting in severe personal injury, death or substantial property damage.

2. Optional outdoor vent kit can be ordered.
 - a. 4" outdoor vent kit: 110644-01
 - b. 6" outdoor vent kit: 110645-01
 - c. 8" outdoor vent kit: 113442-01
3. Keep intake panel clear from obstructions.
4. Condensate from the drain cap should be routed with the condensate drain of the appliance.

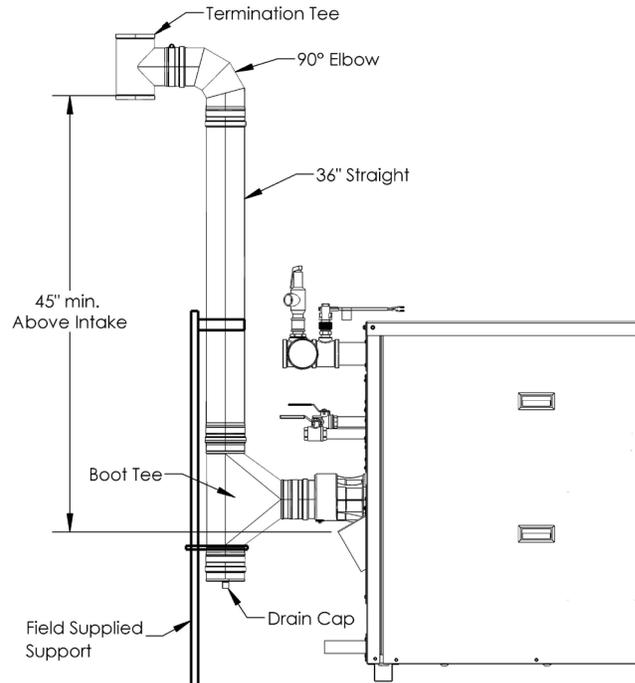


Figure 10: Outdoor Venting Installation

NOTICE:

Outdoor vent system requires field installed support. Do not rely on the vent adapter of the appliance to hold the vent material. Vent termination shall be minimum of 45" above combustion air intake.

VII. Venting (continued)

G. General Termination

1. Use only listed vent/combustion air terminals.
2. Follow the termination configurations shown in Table 13, and see Table 16 for acceptable termination components.
3. Maintain correct clearance and orientation between vent and combustion air terminals.
 - a. The required spacing between vent and combustion air terminals is to prevent flue gas recirculation. Recirculation of flue gas products into the combustion air supply can cause damage to property or the appliance.
 - b. When installed on the same wall, locate vent terminal 4 vent pipe diameters above the combustion air terminal. The snorkel configuration can be used when penetrations are at the same height.
4. Locate bottom of vent and combustion air terminals at least 12 in. (300 mm) [18 in. (460 mm) in Canada] above the normal snow line and at least 12 in. (300 mm) above grade level.
5. Do not install vent terminal directly above windows or doors.
6. Locate bottom of vent terminal at least 3 ft. (900 mm) above any forced air inlet located within 10 ft. (3.0 m).

Table 13: Recommended Venting Configurations and Material Options

| Vent & Intake Materials | Vent Option | | Penetration Through Structure | Termination | Parts Table | Reference Figure | |
|--|--|--------|-------------------------------|---------------------|----------------------|------------------|------------------------|
| Two Pipe Stainless Steel vent Galvanized Steel or PVC intake | 1 | Intake | Horizontal Sidewall | 90° elbow | Table 10 | Figure 12 | |
| | | Vent | Horizontal Sidewall | Tee or 45° elbow | | | |
| | 2 | Intake | Horizontal Sidewall | 90° elbow | | Tee or straight | - |
| | | Vent | Vertical Roof | Tee or straight | | | |
| | 3 | Intake | Vertical Roof | Tee or 2 90° elbows | | Tee or straight | Figure 13 Figure 14 |
| | | Vent | Vertical Roof | Tee or straight | | | |
| Two Pipe Polypropylene vent Galvanized Steel or PVC intake | 4 | Intake | Horizontal Sidewall | 90° elbow | Table 11 | Figure 12 | |
| | | Vent | Horizontal Sidewall | Tee or 45° elbow | | | |
| | 5 | Intake | Horizontal Sidewall | 90° elbow | | Tee or straight | - |
| | | Vent | Vertical Roof | Tee or straight | | | |
| | 6 | Intake | Vertical Roof | Tee or 2 90° elbows | | Tee or straight | Figure 13 Figure 14 |
| | | Vent | Vertical Roof | Tee or straight | | | |
| Two Pipe CPVC vent Galvanized Steel or PVC intake | 7 | Intake | Horizontal Sidewall | 90° elbow | - | Figure 12 | |
| | | Vent | Horizontal Sidewall | Tee or 45° elbow | | | |
| | 8 | Intake | Horizontal Sidewall | 90° elbow | | Tee or straight | - |
| | | Vent | Vertical Roof | Tee or straight | | | |
| | 9 | Intake | Vertical Roof | Tee or 2 90° elbows | | Tee or straight | Figure 13 Figure 14 |
| | | Vent | Vertical Roof | Tee or straight | | | |
| SS, PP, or CPVC vent Room air intake | 10 | Vent | Horizontal Sidewall | Tee or 45° Elbow | Table 10 Table 11 | - | |
| | 11 | Vent | Vertical Roof | Tee or straight | | | |
| NOTICE: | <ol style="list-style-type: none"> 1. It is recommended to use tees for both intake and vent terminations in extra windy locations. 2. All terminations shall have bird screens. 3. All non-metallic venting exposed to sunlight shall be UV resistant. | | | | | | |

VII. Venting (continued)

7. If window and/or air inlet is within 4 ft. (1.2 m) of an inside corner, maintain at least 6 ft. (1.8 m) spacing between terminal and adjoining wall of inside corner.
8. Locate bottom of vent terminal at least 7 ft. (2.1 m) above a public walkway.
9. Maintain minimum clearance of at least 4 ft. (1.2 m) [3 ft. (900 mm) in Canada] horizontally between vent terminal and gas meters, electric meters, regulators, and relief equipment. Do not install vent terminal above or below this equipment.
10. Do not locate the vent terminal under decks or similar structures.
11. Top of terminal must be at least 24 in. (600 mm) below ventilated eaves, soffits, and other overhangs. In no case may the overhang exceed 48 in. (1200 mm). Where permitted by the authority having jurisdiction and local experience, the terminal may be located closer to unventilated soffits. The minimum vertical separation depends upon the depth of the soffit.
12. For multiple appliance installations with vertical roof terminals, separate vent pipes may be piped through a common conduit or chase so that one roof penetration may be made. Maintain recommended separations of terminations after penetration.
13. Maintain minimum 24 in. (610 mm) horizontal spacing between vent terminal and a building corner.
14. Under certain conditions, water in the flue gas may condense, and possibly freeze, on objects around the terminal including on the structure itself. If these objects are subject to damage by flue gas condensate, they should be moved or protected.
15. If possible, install the vent and combustion air terminals on a wall away from the prevailing wind. Reliable operation of this product cannot be guaranteed if terminals are subjected to winds in excess of 40 mph (64 km/hr).
16. Do not locate combustion air terminal in areas that might contain combustion air contaminants, such as near swimming pools.

⚠ WARNING

Use of cellular core PVC (ASTM F891), cellular core CPVC, or Radel® (polyphenylsulfone) in non-metallic venting systems is prohibited.

Covering non-metallic vent pipe and fittings with thermal insulation is prohibited.

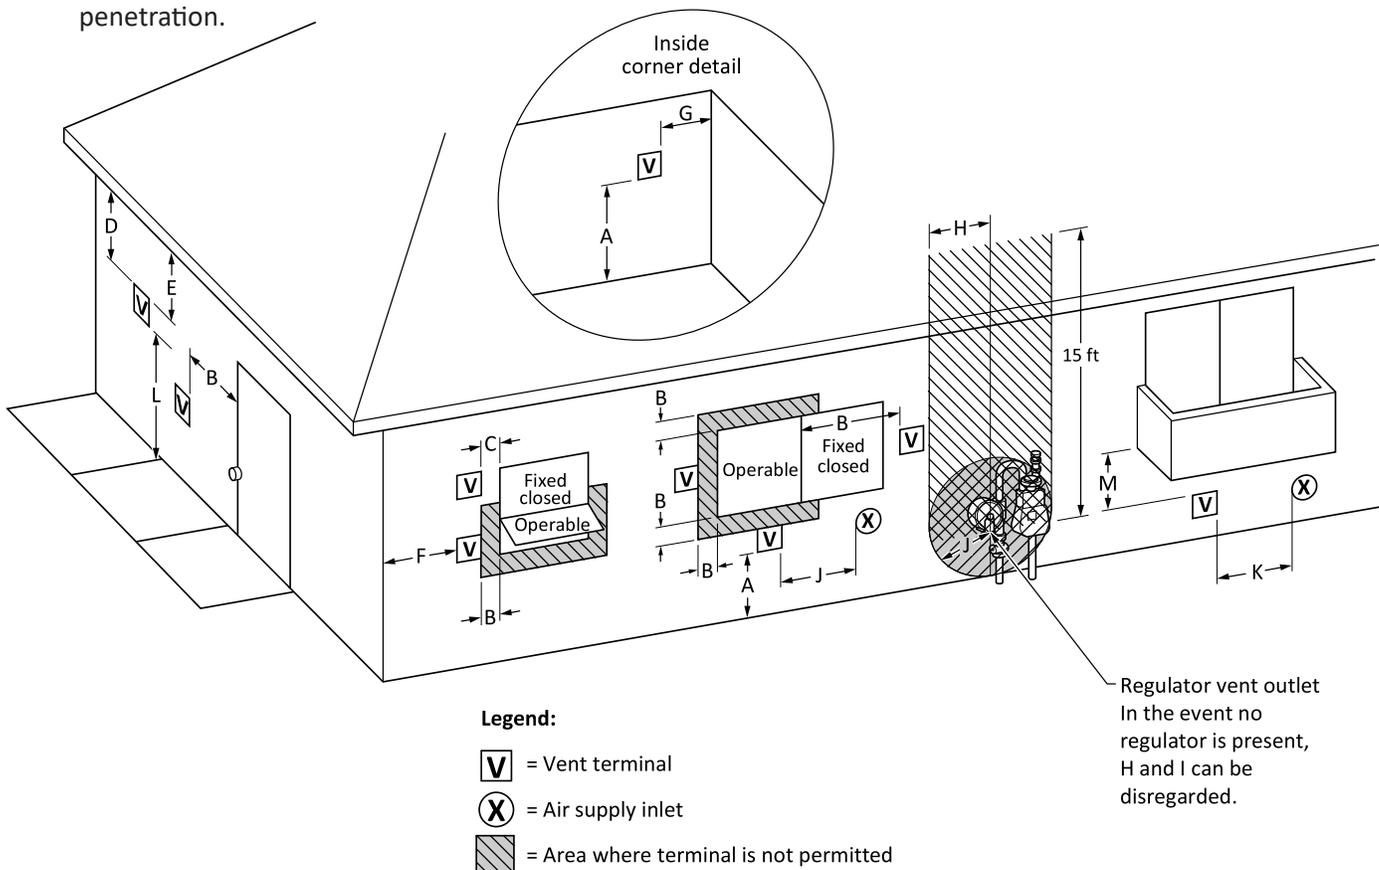


Figure 11: Vent Terminal Clearances

VII. Venting (continued)

Table 14: Direct Vent Terminal Clearances

| | | Canadian Installations ¹ | US Installations ² |
|---|---|--|--|
| A | Clearance above grade, veranda, porch, deck, or balcony | 18 in. (46 cm) | 12 in (30 cm) |
| B | Clearance to window or door that may be opened | 6 in (15 cm) for appliances ≤ 10,000 Btuh (3 kW), 12 in (30 cm) for appliances > 10,000 Btuh (3 kW) and ≤ 100,000 Btuh (30 kW), 36 in (91 cm) for appliances >100,000 Btuh (30 kW) | 6 in (15 cm) for appliances ≤ 10,000 Btuh (3 kW), 9 in (23 cm) for appliances > 10,000 Btuh (3 kW) and ≤ 50,000 Btuh (15 kW), 12 in (30 cm) for appliances > 50,000 Btuh (15 kW) |
| C | Clearance to permanently closed window | * | * |
| D | Vertical clearance to ventilated soffit located above the terminal within a horizontal distance of 2 ft (61 cm) from the center line of the terminal. | * | * |
| E | Clearance to unventilated soffit | * | * |
| F | Clearance to outside corner | * | * |
| G | Clearance to inside corner | * | * |
| H | Clearance to each side of center line extended above meter/regulator assembly | 3 ft (91 cm) within a height of 15 ft (4.6 m) | * |
| I | Clearance to service regulator vent outlet | 3 ft (91 cm) | * |
| J | Clearance to non-mechanical air supply inlet to building or the combustion air inlet to any other appliance | 6 in (15 cm) for appliances ≤ 10,000 Btuh (3 kW), 12 in (30 cm) for appliances > 10,000 Btuh (3 kW) and ≤ 100,000 Btuh (30 kW), 36 in (91 cm) for appliances >100,000 Btuh (30 kW) | 6 in (15 cm) for appliances ≤ 10,000 Btuh (3 kW), 9 in (23 cm) for appliances > 10,000 Btuh (3 kW) and ≤ 50,000 Btuh (15 kW), 12 in (30 cm) for appliances > 50,000 Btuh (15 kW) |
| K | Clearance to a mechanical air supply inlet | 6 ft (1.83 m) | 3 ft (91 cm) above if within 10 ft (3 m) horizontally |
| L | Clearance above paved sidewalk or paved driveway located on public property | 7 ft (2.13 m) † | 7 ft (2.13 m) for mechanical draft systems (Category I appliances). Vents for Category II and IV appliances cannot be located above public walkways or other areas where condensate or vapor can cause a nuisance or hazard* |
| M | Clearance under veranda, porch deck, or balcony | 12 in (30 cm) ‡ | * |

NOTICE:

* Clearance in accordance with local codes and the requirements of the gas supplier.

† A vent shall not terminate directly above a sidewalk or paved driveway that is located between two single family dwellings and serves both dwellings.

‡ Permitted only if veranda, porch, deck, or balcony is fully open on a minimum of two sides beneath the floor.

Notes:

1) In accordance with the current CSA B149.1, Natural Gas and Propane Installation Code

2) In accordance with the current ANSI Z223.1/NFPA 54, National Fuel Gas Code

3) If locally adopted installation codes specify clearances different than those illustrated, then the most stringent clearance shall prevail.

VII. Venting (continued)

Table 15: Other than Direct Vent Terminal Clearances

| | | Canadian Installations ¹ | US Installations ² |
|---|---|--|---|
| A | Clearance above grade, veranda, porch, deck, or balcony | 18 in (46 cm) | 12 in (30 cm) |
| B | Clearance to window or door that may be opened | 6 in (15 cm) for appliances ≤ 10,000 Btuh (3 kW), 12 in (30 cm) for appliances > 10,000 Btuh (3 kW) and ≤ 100,000 Btuh (30 kW), 36 in (91 cm) for appliances >100,000 Btuh (30 kW) | 4 ft (1.2 m) below or to side of opening; 1 ft (300 mm) above opening |
| C | Clearance to permanently closed window | * | * |
| D | Vertical clearance to ventilated soffit located above the terminal within a horizontal distance of 2 ft (61 cm) from the center line of the terminal. | * | * |
| E | Clearance to unventilated soffit | * | * |
| F | Clearance to outside corner | * | * |
| G | Clearance to inside corner | * | * |
| H | Clearance to each side of center line extended above meter/regulator assembly | 3 ft (91 cm) within a height 15 ft (4.6 m) | * |
| I | Clearance to service regulator vent outlet | 3 ft (91 cm) | * |
| J | Clearance to non-mechanical air supply inlet to building or the combustion air inlet to any other appliance | 6 in (15 cm) for appliances ≤ 10,000 Btuh (3 kW), 12 in (30 cm) for appliances > 10,000 Btuh (3 kW) and ≤ 100,000 Btuh (30 kW), 36 in (91 cm) for appliances >100,000 Btuh (30 kW) | 4 ft (1.2 m) below or to side of opening; 1 ft (300 mm) above opening |
| K | Clearance to a mechanical air supply inlet | 6 ft (1.83 m) | 3 ft (91 cm) above if within 10 ft (3 m) horizontally |
| L | Clearance above paved sidewalk or paved driveway located on public property | 7 ft (2.13 m) † | 7 ft (2.13 m) for mechanical draft systems (Category I appliances). Vents for Category II and IV appliances cannot be located above public walkways or other areas where condensate or vapor can cause a nuisance or hazard |
| M | Clearance under veranda, porch deck, or balcony | 12 in (30 cm) ‡ | * |

NOTICE:

* Clearance in accordance with local codes and the requirements of the gas supplier.

† A vent shall not terminate directly above a sidewalk or paved driveway that is located between two single family dwellings and serves both dwellings.

‡ Permitted only if veranda, porch, deck, or balcony is fully open on a minimum of two sides beneath the floor.

Notes:

1) In accordance with the current CSA B149.1, Natural Gas and Propane Installation Code

2) In accordance with the current ANSI Z223.1/NFPA 54, National Fuel Gas Code

3) If locally adopted installation codes specify clearances different than those illustrated, then the most stringent clearance shall prevail.

VII. Venting (continued)

H. Vent and Combustion Air Terminations

1. Vent Piping
 - a. Install fire stops where vent passes through floors, ceilings or framed walls. The fire stop must close the opening between the vent pipe and the structure.
 - b. Whenever possible, install vent straight through the roof.
 - c. Size roof opening to maintain minimum clearance of 1 in. (25 mm) from combustible materials.
 - d. Extend vent pipe to maintain minimum vertical distance for expected snow accumulation. Provide brace as required.
 - e. Install storm collar on vent pipe immediately above flashing. Apply Dow Corning Silastic 732 RTV Sealant or equivalent between vent pipe and storm collar to provide weather-tight seal.
2. Combustion Air Piping
 - a. If possible, locate combustion air termination in the same roof location as the vent termination to prevent nuisance shutdowns. Alternatively, this appliance may be installed with a vertical roof vent terminal and sidewall combustion air terminal.
 - b. Size roof opening to allow easy insertion of combustion air piping and allow proper installation of flashing and storm collar to prevent moisture from entering the structure.
 - c. Use appropriately designed vent flash when passing through roofs. Follow flashing manufacturers' instructions for installation.
 - d. Extend combustion air pipe to maintain minimum vertical and horizontal distance of 12 in (300 mm) from roof surface or from the maximum snow level.

⚠ CAUTION

Intermittent shutdowns can occur when the vent terminals are subject to winds above 40 mph.

The required spacing between vent and combustion air terminals is to prevent flue gas recirculation. Recirculation of flue gas products into the combustion air supply can cause damage to property or the appliance.

⚠ CAUTION

Methods of securing and sealing terminals to the outside wall must not restrain the thermal expansion of the vent pipe.

Exterior run should be included in equivalent vent/combustion air lengths.

Vertical Venting and combustion air roof penetrations (where applicable) require the use of roof flashing and storm collar, which are not supplied with appliance, to prevent moisture from entering the structure.

Examine all components for possible shipping damage prior to installation.

All condensate that forms in vent must be able to drain back to the heat exchanger or a boot tee with a drain.

The venting system must be free to expand and contract and must be supported in accordance with installation instructions included by the original component manufacturers, whenever applicable. Polypropylene pipe sections must not be fully inserted. Leave 1/4 to 5/8 in. (6 mm to 16 mm) per joint to allow for thermal expansion

⚠ WARNING

Failure to vent this appliance in accordance with these instructions could cause products of combustion to enter the building resulting in severe personal injury, death, or substantial property damage.

Do not locate vent termination under a deck, or where exposed to prevailing winds.

Do not locate combustion air termination where volatile vapors or other chemicals are present. Severe corrosion and failure will result.

Do not interchange vent systems or materials unless otherwise specified.


Do not apply thermal insulation to vent pipe or fittings.

Do not use a barometric damper or draft hood with this appliance.


VII. Venting (continued)

Table 16: Table of Acceptable Terminations

Flue Gas Vent Terminations

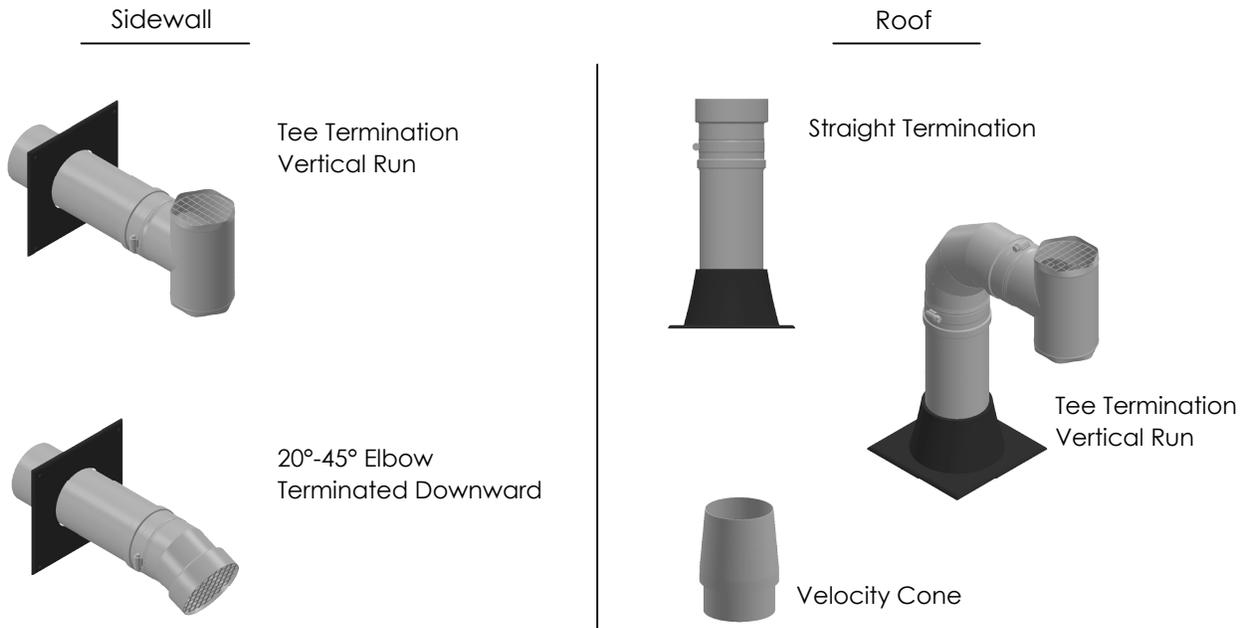

Combustion Air Intake Terminations

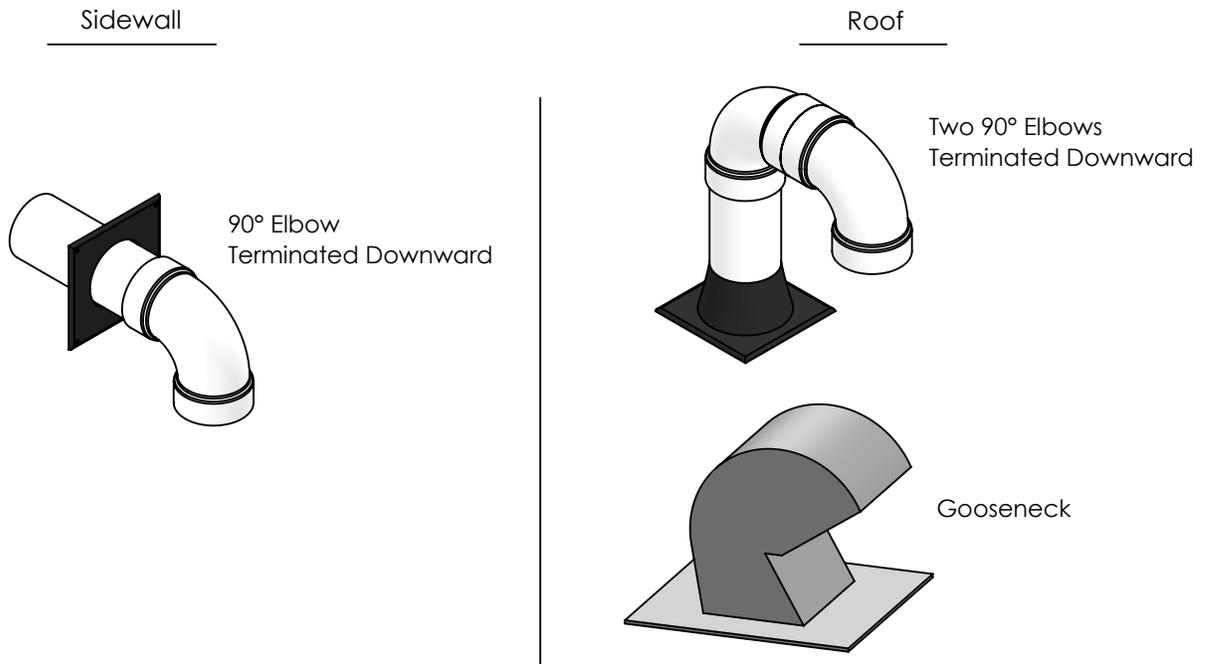

Notes:
 Do not use Louvers for direct vent systems
 One appliance per gooseneck termination
 Vent and intake piping must not share the same gooseneck
 All terminations should have Bird/Rodent Screens
 Do not use rain caps, Rain will drain through boot tee or condensate drain

VII. Venting (continued)

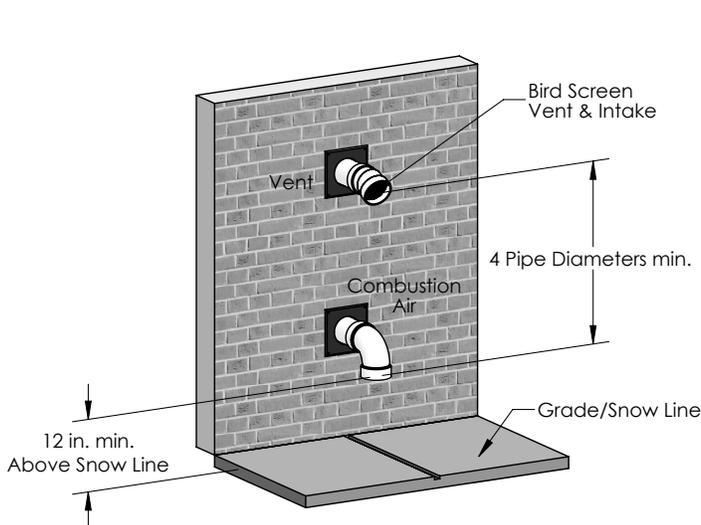


Figure 12: Horizontal Sidewall Termination

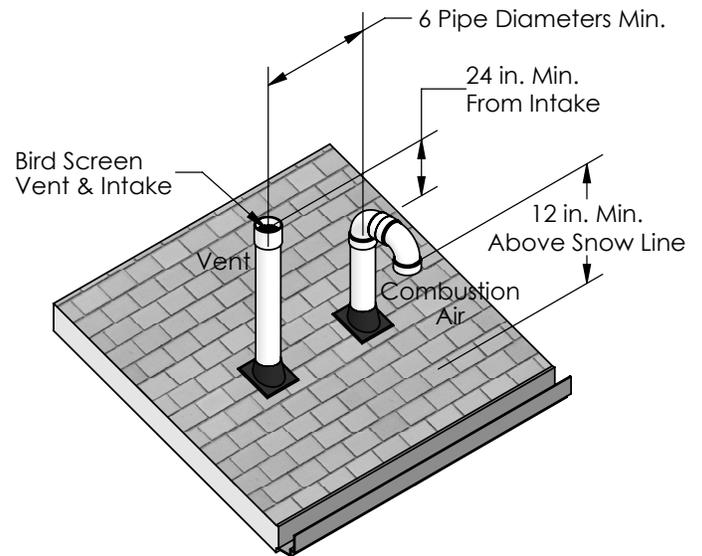


Figure 13: Sloped Roof Termination

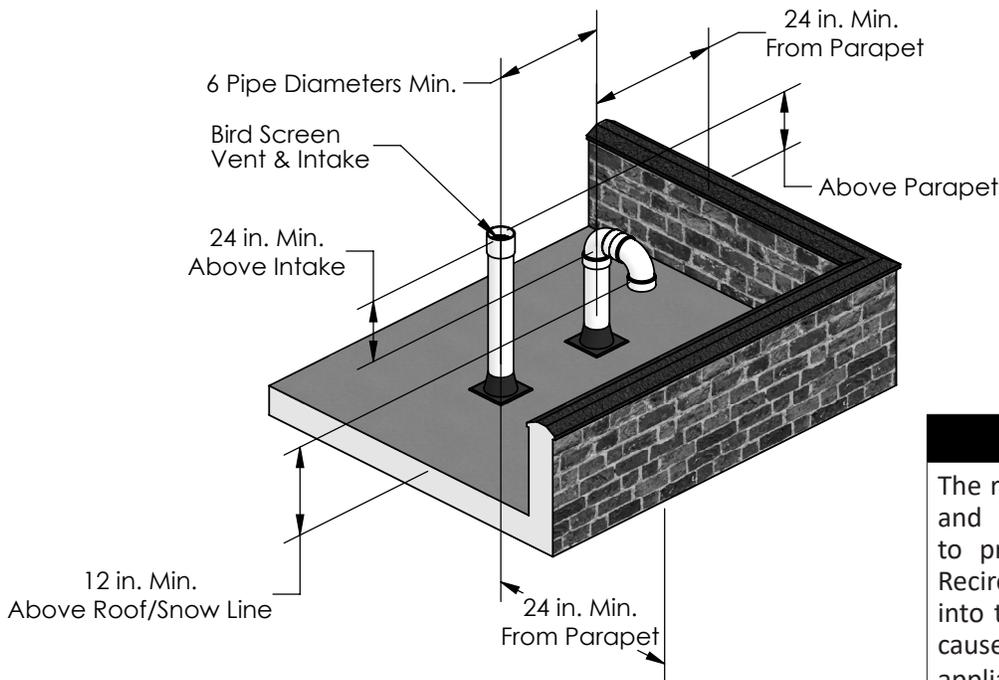


Figure 14: Flat Roof Vent Terminations

⚠ WARNING

The required spacing between vent and combustion air terminals is to prevent flue gas recirculation. Recirculation of flue gas products into the combustion air supply can cause damage to property or the appliance.

Notes:

1. All terminations must have bird/rodent screens.
2. If Possible, Install Sidewall venting on a wall away from prevailing wind.
3. For roof terminations, install vent terminal downstream of prevailing winds relative to intake terminal.
4. It is recommended to use tee terminations with a vertical run in extra windy areas.

⚠ CAUTION

Installing multiple vent terminations too close together may result in combustion product water vapor condensation on building surfaces where vent terminations are placed, causing subsequent frost damage. To avoid/minimize frost damage, extend the distance from building surfaces to vent termination end and increase the horizontal distance between adjacent vent terminations.

VII. Venting (continued)

I. Multiple Appliance Terminations

1. Vent Piping Terminations

- a. Multiple appliance vent terminations are shown in Figure 15.
- b. Each individual appliance must have its own vent pipe and vent terminal unless a common venting system is used following the guidelines of the "Engineered Venting Method" section in this manual.
- c. For horizontal sidewall terminations, maintain at least 6 pipe diameters minimum horizontal distance between any adjacent individual vent terminations. Additional horizontal spacing between any adjacent individual vent terminations as well as extending the distance from building surfaces to vent termination end are recommended to avoid frost damage to building surfaces where vent terminations are placed.
- d. Multiple individual vertical vent pipes may be piped through a common conduit or chase so that one roof penetration may be made.
- e. For vertical roof terminations, maintain at least 6 pipe diameters minimum horizontal distance between adjacent individual appliance vent terminations.

2. Combustion Air Piping

- a. Multiple appliance combustion air terminations are shown in Figure 15.
- b. Each individual appliance must have its own combustion air pipe and terminal when using category IV venting.

⚠ WARNING

Moisture and ice may form on the surface around vent termination.
To prevent deterioration, surface must be in good repair (sealed, painted, etc.).
Do not allow low spots in the vent where condensate may pool.
Use specified vent and combustion air pipe diameters.
All vent and combustion air piping must be sealed and airtight.
Alteration of the appliance vent connection is prohibited.

⚠ WARNING

The joint between the terminal and the last piece of pipe must be outside of the building.

The vent for this appliance shall not terminate:

1. Over public walkways; or
2. Near soffit vents or crawl space vents or other areas where condensate or vapor could create a nuisance or hazard or cause property damage; or
3. Where condensate vapor could cause damage or could be detrimental to the operation of regulators, pressure relief valves, or other equipment.

- c. Individual appliance sidewall terminals must be placed at least 12 in. (300 mm) [18 in. (460 mm) in Canada] above the ground plus the expected snow accumulation.
- d. Do not exceed the maximum combustion air pipe length for an individual appliance as listed in Table 6.
- e. If possible, locate the vent and combustion air terminals for each appliance on the same wall to prevent nuisance shutdowns. If not, each appliance may be installed with a roof vent terminal and sidewall combustion air terminal.

J. Terminal Installation

1. Use the terminal connections supplied by the venting manufacturer. Follow manufacturer's instructions to attach the terminal to the vent system.
2. For PVC/CPVC terminals, apply a heavy bead of silicone to the male end of the terminal before inserting it into the last piece of pipe. Orient the terminal so that the seam in the terminal is at 12:00. Smooth the silicone over the seam between the terminal and the last piece of pipe, applying additional silicone if necessary to ensure a tight seal. Allow the silicone to cure per the silicone manufacturer's instructions before operating the appliance.
3. Install Bird/Rodent screens in the terminals. Use a screen having 1/2 in. x 1/2 in. (13 mm x 13 mm) mesh.
4. Adhere to the minimum and maximum wall thickness specified by the manufacturer of the wall penetration assembly.

VII. Venting (continued)

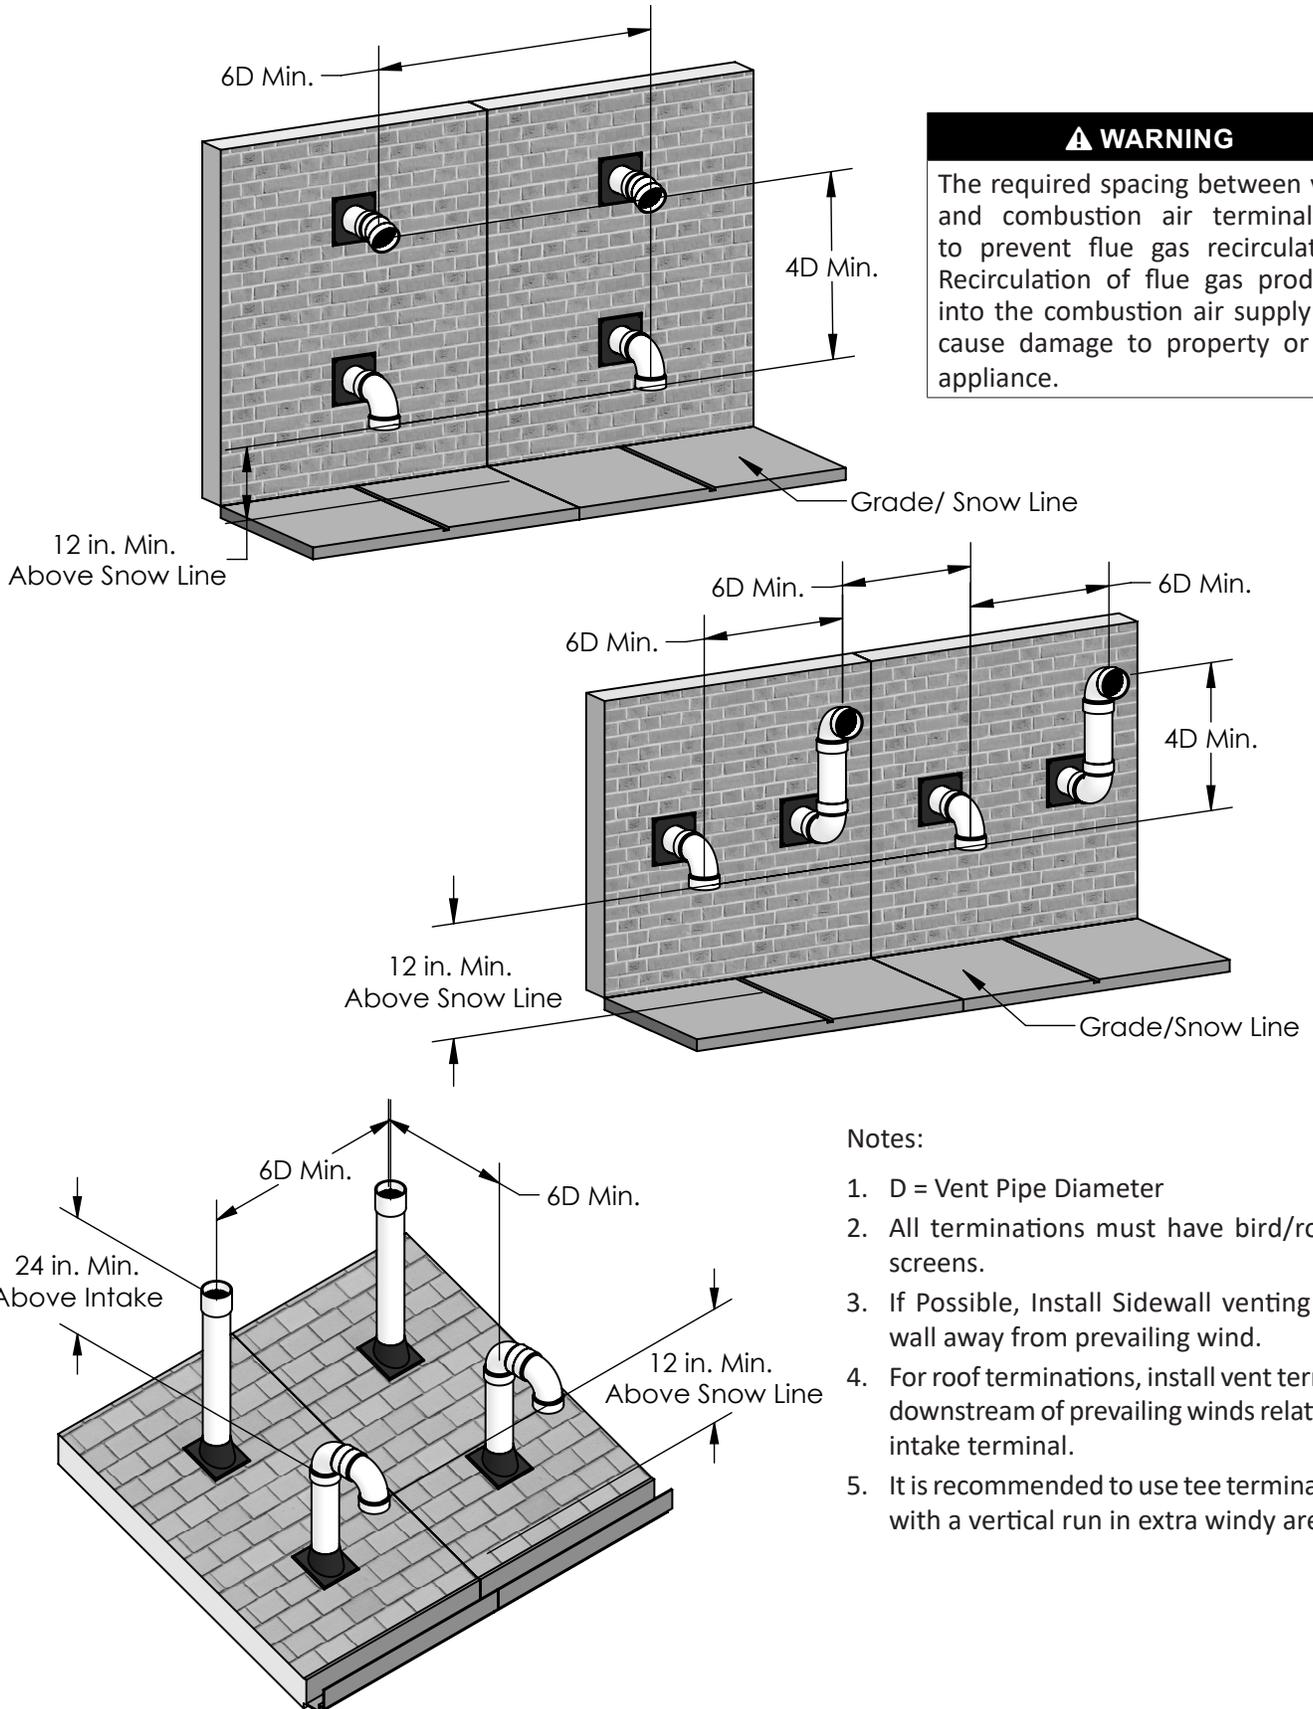


Figure 15: Multiple Appliance Direct Vent Termination

VII. Venting (continued)

K. Polypropylene Venting

1. Running Flexible Polypropylene Vent (Liner) Through Unused Chimney Chase
 - a. It is the responsibility of the installing contractor to procure polypropylene vent system pipe and related components.
 - b. All listed polypropylene vent system manufacturers must comply with the requirements of *ULC-S636-08* 'Standard for Type BH Gas Venting Systems'. For Canadian installation, polypropylene vent must be listed as a *ULC-S636* approved system.
 - c. Flexible polypropylene pipe must be treated carefully and stored at temperatures higher than 41 degrees F.
 - d. When flexible polypropylene pipe (liner) is used for combustion air supply, the pipe (liner) can be installed in a vertical or horizontal position.
 - e. Follow manufacturer instructions regarding application/listing, permits, minimum clearances to combustibles, and installation details (proper joint assembly, pipe support and routing, gasket and fitting installation, optional tooling availability/usage, routing through masonry chimney for combustion product venting or, combination of combustion product venting and combustion air supply).
 - f. When using a masonry chimney as a passageway for flexible polypropylene pipe, the chase must be structurally sound and free of any debris or obstructions.
 - g. To prevent condensate pooling and damage to vent, offsets (bend) cannot exceed 45°. Multiple offsets are allowed in a chase.
2. Pressure drop for flexible polypropylene line is 20 % greater than from rigid pipe. Multiply measured flexible polypropylene liner length by 1.2 to obtain equivalent length.
3. Maximum equivalent vent length of flexible polypropylene liner is 48 ft. (14.6 m).

⚠ WARNING

Asphyxiation Hazard. Vent systems made by listed PP vent system manufacturers rely on gaskets for proper sealing. When this type of vent system is used, take the following precautions:

Make sure that gasket is in position and undamaged in the female end of the pipe.

Make sure that both male and female pipes are free of damage prior to assembly.

Only cut vent pipe as permitted by the vent manufacturer in accordance with their instructions. When pipe is cut, the cut end must be square and carefully deburred prior to assembly.

Use locking band clamps at all vent pipe joints.

Flexible polypropylene vent must be installed only in an unused chimney. A chimney, either single or multiple flue type, is considered unused when one of the flues is being used for any appliance venting, or When one of the multiple flues is being used for appliance venting. The flexible vent installation is not permitted through any of the adjacent flues.

Do not bend or attempt to install flexible pipe if it has been stored at ambient temperature below 41 F. This will cause material to become brittle and will lead to cracks, resulting in flue gas leaks.

Do not install flexible polypropylene pipe at an angle greater than 45 degrees from vertical when used for combustion product venting. Failure to do so will result in improper condensate drainage and possible subsequent vent pipe blockage.

VII. Venting (continued)

NOTICE:

Pressure drop for flexible polypropylene line is 20 % greater than from rigid pipe. Multiply measured flexible polypropylene liner length by 1.2 to obtain equivalent length.

Maximum equivalent vent length of flexible polypropylene liner is 48 ft. (14.6 m).

Installation of a polypropylene vent system should adhere to the vent manufacturer's installation instructions supplied with the vent system.

⚠ WARNING

DO NOT mix vent systems of different types or manufacturers. Failure to comply could result in severe personal injury, death, or substantial property damage.

DO NOT connect venting to a chimney flue that is servicing a separate appliance designed to burn solid fuel.

DO NOT use chimney for Combustion air intake.

DO NOT insulate polypropylene vent pipes. Excessive heat could cause premature vent pipe failure.

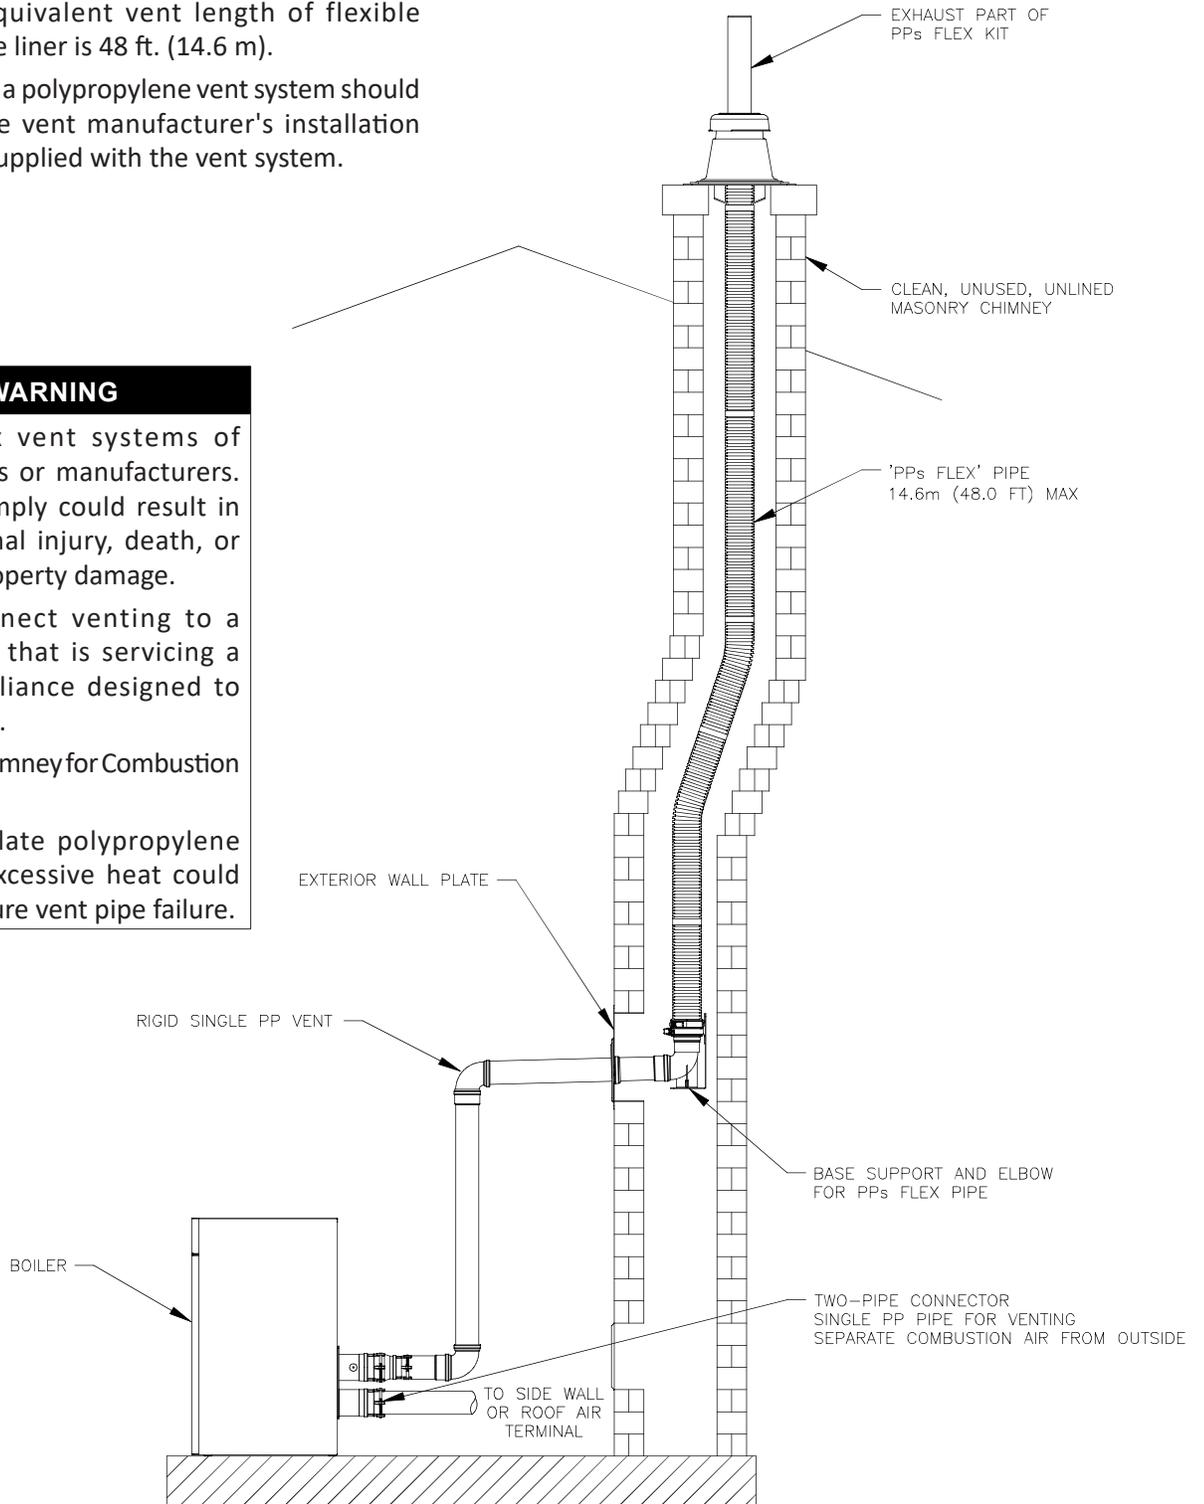


Figure 16: Flexible Vent in Masonry Chimney with Separate Combustion Air Intake

VII. Venting (continued)

L. Optional Room Air for Combustion

1. General Guidelines

- a. Room air is optional for commercial applications. Follow the requirements in this section when air for combustion is supplied from the boiler room.
- b. Avoid combustion air contaminants in the boiler room. Permanently remove any contaminants found in the boiler room. If contaminants cannot be removed, do not use room air for combustion.
- c. Natural gas and propane installation code specifies venting systems and air supply for appliances, air supply shall be provided when either an appliance or a combination of appliances has a total input exceeding 400,000 Btu/h.

⚠ WARNING

This appliance must not be installed in a room under negative pressure. An equipment room under negative pressure could deplete the combustion air supply to the appliance and cause leakage of flue gas from the venting system.

2. Outdoor Openings to Boiler Room

- a. Provide combustion and ventilation air to the boiler room or enclosure. Follow the National Fuel Gas Code, *ANSI Z223.1*, or, in Canada, Installation Code for Gas Burning Appliances and Equipment, *CGA Standard B149 Code* as well as all applicable local codes. Use one of the following methods.
- b. Two Permanent Openings Method: Provide two permanent openings, once within 12 in. (300 mm) of the top of the enclosure and one within 12 in. (300 mm) of the bottom of the enclosure. Openings must communicate directly, or by ducts, with the outdoors or spaces that freely communicate with the outdoors, as follows:
 - i. Direct communication or through vertical ducts: minimum free area of each opening shall be 1 in.²/4,000 Btu/hr (550 mm²/kW) of total input rating of all appliances within the enclosure.
 - ii. Horizontal ducts: minimum free area of each opening shall be 1 in.²/2,000 Btu/hr (1,100 mm²/kW) of total input rating of all appliances within the enclosure.
- c. One Permanent Opening Method: Provide one permanent opening, commencing within 12 in. (300 mm) of the top of the enclosure. The opening shall communicate through a vertical or horizontal duct to the outdoors or spaces that freely communicate with the outdoors and shall have a minimum free area of the following:

- i. 1 in.²/3,000 Btu/hr (700 mm²/kW) of total input rating of all appliances located within the enclosure.

- ii. Not less than the sum of the areas of all vent connectors in the space.

3. Louvers and Dampers

- a. Openings in a fixed louver, grille, or screen shall have no dimension smaller than 1/4" (6mm).
- b. No manually operated damper or manually operated adjustable louvers are permitted.
- c. Motorized louvers or dampers must be interlocked with the boiler to allow ignition and firing of the burner only when louvers are in the fully-open position.

4. Mechanical Combustion Air Supply

- a. When combustion air is supplied by mechanical means, an airflow sensing device shall be installed and wired into the safety limit circuit of the primary safety control to shut off the gas in the event of air supply failure.

⚠ WARNING

Sources of combustion air contaminants, including chlorines, chlorofluorocarbons (CFC's), petroleum distillates, detergents, volatile vapors or other chemicals must not be present in the boiler room. If any of these contaminants are present, severe corrosion and failure will result.

Asphyxiation Hazard. Common manifold venting requires special considerations. Follow the instructions in this manual

The manufacturer takes no responsibility for vent systems that create issues and or affect the performance of the appliance.

A flue gas vent or a vent connector shall not be installed inside either a duct or a shaft used for return air, hot air, ventilating air, or combustion air.

An appliance that operates at a positive vent pressure shall not be connected to a venting system serving any other appliance. This appliance operates at a positive vent pressure.

VII. Venting (continued)

M. Removing Existing Appliance

When an existing appliance is removed from a common venting system, the common venting system is likely to be too large for proper venting of the remaining appliances. At the time of removal of an existing appliance, the following steps should be performed with each appliance remaining connected to the common venting system. Make sure the appliances are not in operation while carrying out these steps.

1. Seal any unused openings in the common venting system.
2. Visually inspect the venting system for proper size and horizontal pitch and ensure there is no blockage or restriction, leakage, corrosion, or other deficiencies which could cause an unsafe condition.
3. Insofar as is practical, close all exterior doors and windows, and all doors between the space where the appliances connect to the common venting system and other spaces of the building. Turn on any exhaust fans, such as range-hoods and bathroom exhausts, so they will operate at maximum speed. Do not operate a summer exhaust fan. Close fireplace dampers.
4. Place in operation the appliance being inspected. Follow the Lighting (or Operating) Instructions. Adjust thermostat so appliance will operate continuously.
5. Test for spillage at the draft hood relief opening after 5 minutes of main burner operation. Use the flame of a match or candle, or smoke from a cigarette, cigar or pipe.
6. After it has been determined that each appliance connected to the common venting system properly vents when tested as outlined above, return doors, windows, exhaust fans, fireplace dampers and any other gas burning appliance to their previous conditions of use.
7. Any improper operation of the common venting system should be corrected so the installation conforms with the *National Fuel Gas Code, ANSI Z223.1/NFPA 54* and/or the *Natural Gas and Propane Installation Code, CAN/CSA B149.1*. Resizing of any portion of the common venting system, should be done in accordance with the *National Fuel Gas Code, ANSI Z223.1/NFPA 54* and/or the *Natural Gas and Propane Installation Code, CAN/CSA B149.1*.

NOTICE:

Please note that the information provided in this manual relative to the Canadian Standard is not meant to be all-inclusive. Reading the entire Standard is strongly suggested. The final approval of all system designs must be acceptable to the authority having jurisdiction.

VII. Venting (continued)

N. Special Installation Requirements for Massachusetts

1. For all sidewall horizontally vented gas fueled equipment installed in every dwelling, building or structure used in whole or in part for residential purposes and where the sidewall exhaust vent termination is less than seven (7) feet above grade, the following requirements shall be satisfied:
 - a. If there is no carbon monoxide detector with an alarm already installed in compliance with the most current edition of NFPA 720, NFPA 70 and the Massachusetts State Building Code in the residential unit served by the sidewall horizontally vented gas fueled equipment, a battery operated carbon monoxide detector with an alarm shall be installed in compliance with the most current edition of NFPA 720, NFPA 70 and the Massachusetts State Building Code.
 - b. In addition to the above requirements, if there is not one already present, a carbon monoxide detector with an alarm and a battery back-up shall be installed and located in accordance with the installation requirements supplied with the detector on the floor level where the gas equipment is installed. The carbon monoxide detector with an alarm shall comply with 527 CMR, ANSI/UL 2034 Standards or CSA 6.19 and the most current edition of NFPA 720. In the event that the requirements of this subdivision can not be met at the time of the completion of the installation of the equipment, the installer shall have a period of thirty (30) days to comply with this requirement; provided, however, that during said thirty (30) day period, a battery operated carbon monoxide detector with an alarm shall be installed in compliance with the most current edition of NFPA 720, NFPA 70 and the Massachusetts State Building Code. In the event that the sidewall horizontally vented gas fueled equipment is installed in a crawl space or an attic, the carbon monoxide detector may be installed on the next adjacent habitable floor level. Such detector may be a battery operated carbon monoxide detector with an alarm and shall be installed in compliance with the most current edition of NFPA 720, NFPA 70 and the Massachusetts State Building Code.
 - c. A metal or plastic identification plate shall be permanently mounted to the exterior of the building at a minimum height of eight (8) feet above grade directly in line with the exhaust vent terminal for the horizontally vented gas fueled heating appliance or equipment. The sign shall read, in print size no less than one-half (1/2) inch in size, "GAS VENT DIRECTLY BELOW. KEEP CLEAR OF ALL OBSTRUCTIONS".
 - d. A final inspection by the state or local gas inspector of the sidewall horizontally vented equipment shall not be performed until proof is provided that the state or local electrical inspector having jurisdiction has granted a permit for installation of carbon monoxide detectors and alarms as required above.
2. EXEMPTIONS: The following equipment is exempt from 248 CMR 5.08(2)(a) 1 through 4:
 - a. The equipment listed in Chapter 10 entitled "Equipment Not Required To Be Vented" in the most current edition of NFPA 54 as adopted by the Board; and
 - b. Product Approved sidewall horizontally vented gas fueled equipment installed in a room or structure separate from the dwelling, building or structure used in whole or in part for residential purposes.
3. When the manufacturer of Product Approved sidewall horizontally vented gas equipment provides a venting system design or venting system components with the equipment, the instructions for installation of the equipment and the venting system shall include:
 - a. A complete parts list for the venting system design or venting system; and
 - b. Detailed instructions for the installation of the venting system design or the venting system components.
4. When the manufacturer of a Product Approved sidewall horizontally vented gas fueled equipment does not provide the parts for venting flue gases, but identifies "special venting systems", the following shall be satisfied:
 - a. The referenced "special venting system" instructions shall be included with the appliance or equipment installation instructions; and
 - b. The "special venting systems" shall be Product Approved by the Board, and the instructions for that system shall include a parts list and detailed installation instructions.
5. A copy of all installation instructions for all Product Approved sidewall horizontally vented gas fueled equipment, all venting instructions, all parts lists for venting instructions, and/or all venting design instructions shall remain with the appliance or equipment at the completion of the installation.

VIII. Condensate Disposal

A. Condensate trap

1. The condensate trap is located inside the appliance jacket.
 - a. The flue gas trap prevents flue gases from escaping into the boiler room.
 - b. The float switch interrupts the limit string in the event the drainage of the condensate is blocked.

NOTICE:

Condensate trap located under heat exchanger for 1250-1500 models.

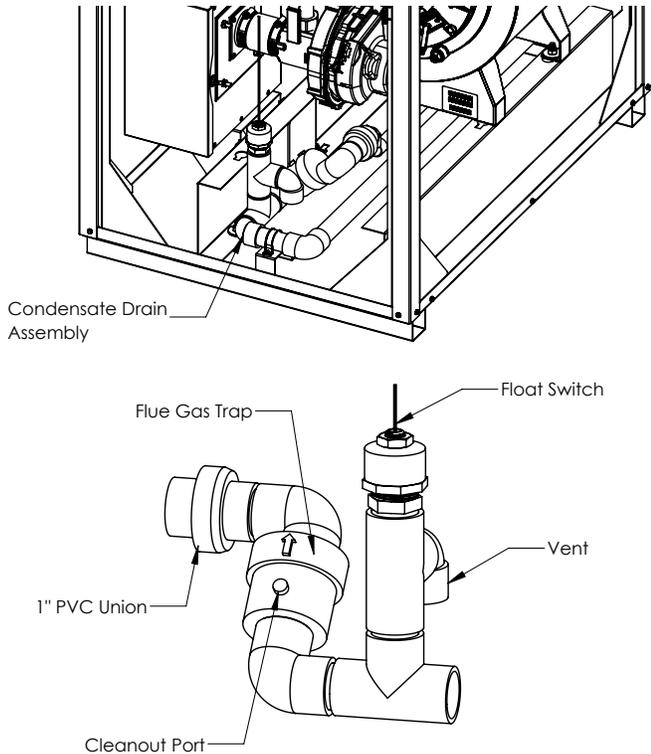


Figure 17: Condensate Drain Assembly

2. The condensate line exits out the back of the appliance through a 1" PVC pipe.
3. Note the following when disposing of the condensate:
 - a. Condensate is slightly acidic, typical pH around 3.5 - 4.5. Do not route the drain line through areas that could be damaged by leaking condensate.
 - b. Do not route or terminate the condensate drain line in areas subject to freezing temperatures.
 - c. If the point of condensate disposal is above the trap, a condensate pump is required to move the condensate to the drain. Select a condensate pump approved for use with condensing appliance—and equipped with an overflow switch.

NOTICE:

Do not crimp condensate drain lines or reduce drain line inner diameter size, unless adapting to a neutralizer kit.

Do not manifold condensate drains and vent drains together.

Consult local authorities regarding disposal of flue gas condensate into the public waste water system.

Do not use metallic pipe or fittings for condensate drain lines.

- d. Do not attempt to substitute another trap for one provided with the appliance.
- e. Slope condensate drain pipe at least 1/8" per foot in the direction of discharge.

B. Condensate Neutralizer Installation

1. Some jurisdictions may require that the condensate be neutralized before being disposed of. Follow local codes pertaining to condensate disposal.
2. A condensate neutralizer kit is available from factory as optional equipment. Refer to Table 17 for size specific part number. Follow local codes and instructions enclosed with the kit for condensate neutralizer installation.
3. Limestone chips will get coated by neutral salts (product of chemical reaction between limestone and acidic condensate) and lose neutralizing effectiveness over time. Therefore, periodic condensate neutralizer maintenance and limestone chip replacement are required for proper neutralization of the condensate.

Table 17: Condensate Neutralizer Kit

| Model | Condensate Neutralizer Kit, PN | Condensate Neutralizer, Refill Kits, PN |
|-------|--------------------------------|---|
| 400 | 107860-08 | 107886-09 |
| 500 | 107860-08 | 107886-09 |
| 650 | 107860-09 | 107886-10 |
| 800 | 107860-09 | 107886-10 |
| 1000 | 107860-06 | 107886-06 |
| 1250 | 107860-02 | 107886-02 |
| 1500 | 107860-07 | 107886-07 |

VIII. Condensate disposal (continued)

C. Common Condensate pump/Sump

1. A common condensate pump/sump may be used. Run separate piping from each condensate drain to the sump. A common drain may be used to discharge condensate from the sump.
2. If a common sump is used, individual drain lines should be constructed, using material listed above, such that one drain cannot back feed into another drain.
3. Do not manifold condensate and vent drains together.

NOTICE:

Flue gas condensate is corrosive. Route condensate drain line in a manner such that any condensate leakage will not cause property damage.

If the condensate line is obstructed in any way, the float switch will prevent the appliance from firing.

Some jurisdictions may require that condensate be neutralized prior to disposal.

The condensate drain trap should be flushed with clean water as part of the appliance maintenance schedule to remove any debris that might have accumulated.

IX. Water Piping

These boilers are designed to operate in a closed loop pressurized system. Minimum pressure in the boiler must be 14.5 psi (100 kpa). Proper operation requires a piping system that can provide sufficient water flow through the boiler and meet the water quality requirements.

A. General Piping Guidelines

Suggested piping configurations are shown in diagram form in section "Water Piping Diagrams". The following steps are general guidelines for installing this boiler in space heating systems. The installer is responsible for complying with local codes.

1. Primary/Secondary piping is the recommended piping configuration. Isolate the appliance from the system using closely spaced tees (12 inches or 4 pipe diameter) and size a circulation pump that ensures sufficient flow is maintained through the boiler.
 - a. The flow rate through the primary loop is maintained by the installer provided circulator.
 - b. Other piping configurations may be used. However, it is the responsibility of the installer to size circulator(s) that could overcome the heat exchanger and system pressure drops.
 - c. Inadequate flow through the boiler can cause high limit shutdowns, hot spots, and localized boiling which could severely damage the heat exchanger.
2. A pressure relief valve is included and installed by factory.
3. When piping the appliance to the system, do not install an elbow closer than 5 pipe diameters from the flow switch.

B. Hot Water Supply Boiler/Water Heater

1. This appliance can be installed as a hot water boiler for space heating or a hot water supply boiler for applications other than space heating.
2. See water heater manual for requirements and piping recommendations when installing as a hot water supply boiler or water heater.

⚠ WARNING

Failure to properly pipe appliance may result in improper operation and damage.

Install the appliance so that the gas ignition system components are protected from water (dripping, spraying, rain, etc.) during appliance operation and service (circulatory replacement, cleaning, etc.).

Contamination of the water by corrosive chemicals will cause corrosion of the steel components, and can lead to appliance failure. The manufacturer's Standard Warranty does not cover problems caused by contamination of supply water.

Failure to maintain the flow through the appliance within the specified limits could result in erratic operation or premature failure.

The circulator shall be sized properly based on the pressure drop of the entire loop and the desired temperature rise.

Maintain 1" (24mm) clearance around all uninsulated hot water pipes.

IX. Water Piping (continued)

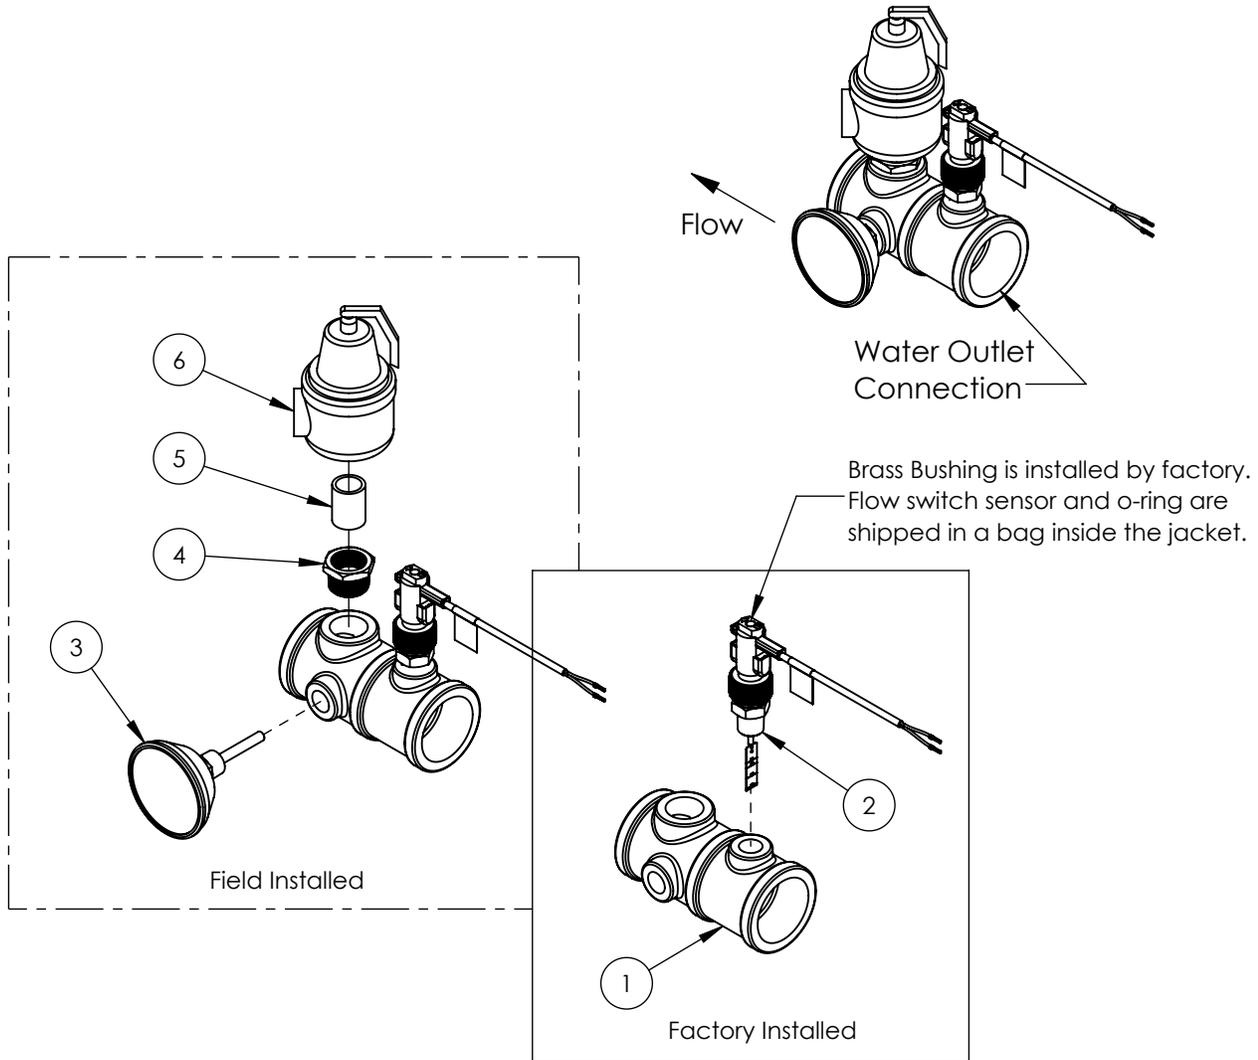


Figure 18: Relief Valve Package Assembly

B. Factory Supplied Relief Valve Package

1. The relief valve, T&P gauge, and required fittings ship loose with the appliance. These parts must be installed to the outlet as shown in Figure 18.
2. When piping the appliance to the system, do not install an elbow closer than 5 pipe diameters from the flow switch.

Table 18: Outlet Piping Parts

| Item no. | Description |
|----------|---------------------------|
| 1 | 2" cast bronze manifold |
| 2 | flow switch assembly |
| 3 | T&P gauge |
| 4 | 1" X 3/4" reducer bushing |
| 5 | 3/4" nipple |
| 6 | pressure relief valve |

IX. Water Piping (continued)

C. Standard Piping Components

1. Pressure relief Valve (Required)

- a. The pressure relief valve must be installed with spindle in vertical position. Installation of the pressure relief valve must comply with ASME Boiler and Pressure Vessel Code, Section IV.
- b. If the pressure relief valve is to be replaced, the replacement valve must have a relief capacity equal or exceeding the minimum relief valve capacity shown on the heat exchanger ASME plate. Also, when replacing the pressure relief valve, verify the temperature and pressure gauge meets ASME requirements for the replacement pressure relief valve.
- c. Pipe the pressure relief valve discharge to a location where hot water or steam will not create hazard or property damage if the valve discharges. The end of the discharge pipe must terminate in an untreated pipe.
- d. If the pressure relief valve is not piped to a drain, it must terminate at least 6 in. (150mm) above the floor. Do not run pressure relief valve discharge pipe through an area prone to freezing. The termination of discharge piping must be in an area where it will not become plugged by debris.

2. Drain Valves

A factory installed 3/4" NPT drain valve and connection is provided.

- a. It is normal for the installed drain piping to be sloped up. Install elbow within 12 in. from drain valve to begin downward slope.

NOTICE:

Factory drain valve will not completely empty the heat exchanger, but freezing water will not cause damage if drained to this level.

3. Flow Switch (Factory Supplied)

This appliance is CSD-1 compliant and equipped with water flow switch and reset low water cut out box. A flow switch is required for forced circulation coil-type water boilers to prevent overheating and the heat exchanger failure in accordance with requirements of ASME Boiler and Pressure Vessel Code, Section IV, and ANSI/ASME CSD-1 "Controls and Safety Devices for Automatically Fired Boilers".

⚠ WARNING

Scald Hazard. Pressure relief valve discharge shall be piped in such a way to prevent or eliminate potential burn risk.

DO NOT pipe in any area where freezing could occur.

DO NOT install any shut-off valves, plugs, caps, or reducers in the discharge piping.

Discharge line shall be installed to allow complete drainage of both the valve and the line.

Consult local codes for proper discharge pipe arrangement.

Observe a minimum of 1/2 inch (12 mm) clearance around all uninsulated hot water piping.

4. Circulator Pump (Required)

Near boiler pump is required to maintain minimum flow requirements for proper operation of the boiler. It is the responsibility of the installer to size and install near boiler pump(s). Refer to Table 19 for boiler specific head losses.

5. Expansion Tank (Required)

If this appliance is replacing an existing appliance with no other changes in the system, the old expansion tank can generally be reused. If the expansion tank must be replaced, consult the expansion tank manufacturer's literature for proper sizing.

6. Fill Valve (Required)

Either manual (recommended) or automatic fill valve may be used.

NOTICE:

If automatic refill is employed, a water meter must be added to evaluate the makeup water volume taken after initial fill and eliminate any water leakage as early as possible.

7. Automatic Air Vent (Required)

At least one automatic air vent is required. Manual vents will usually be required in other parts of the system to remove air during initial fill.

8. Y-strainer (Recommended)

A Y-strainer or equivalent strainer removes heating system debris from the hydronic systems and protects the heat exchanger. Install the strainer in the cold water connection piping between the tank and the appliance.

IX. Water Piping (continued)

9. Isolation Valves (Recommended)

Isolation valves are useful for servicing and stopping water flow in the case of failure. Full port ball valves are required.

D. Water Quality

1. The water directly in contact with the appliance must meet the requirements in this section. Failure to adhere to the water treatment requirements in this manual can cause damage not covered by warranty to the appliance, pumps, or other components in the system.
2. It will be necessary to gain knowledge of the impurities dissolved in the water and consult with a qualified industrial water treatment professional to establish a treatment plan. In addition, a periodic testing/sampling plan should be developed.
3. To minimize corrosion and scale effects, adhere to the water quality requirements in Table B1.
 - a. If the water hardness is higher than 160 ppm (9 gpg), a water softener must be used.
 - b. Water with a hardness of less than 50 ppm (3 gpg) can have a pH level that is corrosive.

⚠ CAUTION

This appliance's heat exchanger is made from stainless steel tubular double coil having relatively narrow waterways. Once filled with water, it will be subject to the effects of corrosion. Failure to take the following precautions to minimize corrosion, and overheating could result in severe product damage.

Before connecting the appliance, insure the system is free of impurities, grease, sediment, construction dust, sand copper dust, and flux. Flush the system thoroughly and repeatedly, if needed.

Scale deposit is made up of lime scale contained in most distributed water and settles over the warmest surfaces of the heat exchanger causing subsequent overheating and eventual failure.

Scale can form from high water hardness and slow water velocities. Failure to maintain the recommended water hardness and flow rate will result in a buildup of scale inside the heat exchanger.

Water temperatures over 140 °F (60 °C) greatly increase the affects of corrosive chemicals.

Chlorine and Chloride have different levels of corrosion effects on stainless steel. It is recommended for chlorine (Cl₂) levels to be below 5ppm and chloride (Cl⁻) levels to be below 150 ppm for 316 stainless steel.

Table B1: Water Quality Requirements

| Quality Parameter | Min. | Max. |
|------------------------------|------|------|
| Water Hardness (gpg) | 3 | 9 |
| Total Dissolved Solids (ppm) | 100 | 450 |
| Chlorine (ppm) | - | 5 |
| Chloride (ppm) | - | 150 |
| pH (cold) | 7.5 | 9.5 |
| pH (systems with aluminum) | 7.5 | 8.5 |

Note: 1 grain per gallon = 17.1 ppm

4. Total Dissolved Solids (TDS) contribute to scale buildup. The TDS or combined water hardness and TDS shall not exceed 450 ppm.
 - a. The TDS (in ppm) is determined by measuring the electrical conductivity (μS/cm) of the water and multiplying by a conversion factor (typically 0.65 for drinking water).
5. Chlorine and Chloride can be very corrosive to stainless steel. Ensure the level of chlorine is less than 5 ppm and the level of chloride is less than 150 ppm.

⚠ CAUTION

This appliance is **not** designed for the heating of swimming pool water.

6. Before connecting the appliance, insure the system is free of impurities, grease, sediment, construction dust, and any other contaminants.
 - a. Flush the system thoroughly and repeatedly, if needed.

IX. Water Piping (continued)

E. Oxygen Contamination

1. Continuous addition of make-up water will constantly add oxygen to the system and lead to corrosion. Black oxide sludge (magnetite, Fe₃O₄) forms as a result of continuous electrolytic corrosion in any system unprotected by an inhibitor.
2. To minimize oxygen presence in the system, all system leaks must be repaired immediately. DO NOT connect the boiler to radiant tubing without an oxygen barrier.
3. There are many possible causes of oxygen contamination such as:
 - a. Addition of excessive make-up water as a result of system leak
 - b. Absorption through open tanks and fittings.
 - c. Oxygen permeable materials in the distribution system.
4. In order to insure long product life, oxygen sources must be eliminated. This could be accomplished by taking the following measures:
 - a. Repairing system leaks to eliminate the need for addition of make-up water.
 - b. Eliminate and/or repair fittings which allow oxygen absorption.
 - c. Use of non-permeable materials in the distribution system.
 - d. Isolating the boiler from the system water using an indirect heat exchanger.
 - e. Using properly designed air elimination devices in water piping.

NOTICE:

The manufacturer's Standard Warranty does not cover boiler failure caused by oxygen contamination of boiler water or scale build-up.

⚠ WARNING

When using Glycol products, all Glycol manufacturers' requirements, including rust inhibitors, must be adhered to. Maximum 50 % Glycol.

Do not use ethylene glycol in systems that can come in contact with domestic hot water, such as indirect water heaters.

Table B2: Corrosion/Scale Inhibitors and Removal Agents

| Producers | Fernox | Sentinel | Sotin | ADEY |
|-------------------|--------------------------|----------------|-----------|------|
| Inhibitors | Protector F1/Alphi 11 | X100, X500 | Sotin 212 | MC1+ |
| Noise reducer | - | X200 | - | - |
| Universal Cleaner | Restorer | X300 | - | - |
| Sludge remover | Protector F1, Cleaner F3 | X400 | Sotin 212 | - |
| Antifreeze | Alphi 11 | X500 | - | - |
| Tightness | - | Leak Sealer F4 | - | - |

Table B3: Water Treatment Types

| Treatment Type | Preventive | Corrective |
|------------------|------------|------------|
| Protector F1 | X | |
| X100 | X | X |
| X200 | X | |
| X300 | | |
| X400 | | X |
| X500 | X | X |
| Alphi 11 | X | |
| Leaker Sealer F4 | X | |
| Sotin 212 | | X |
| MC1+ | X | |

Table B4: Flow Rates for Glycol Systems

| System Glycol Concentration (%) | Increase Flow, (%) |
|---------------------------------|--------------------|
| 50 | 24 |
| 30 | 14 |

Note: Total system water volume includes expansion tank(s) and reservoirs.

IX. Water Piping (continued)

F. Temperature Rise and Heat Exchanger Head Loss

1. This heat exchanger adds pressure drop to the system which must be accounted for in the design of the piping configuration and pump selection.
2. The system should be designed to maintain the operating water flow rate shown in Table 19. Exceeding the maximum water flow rates can cause pipe erosion, component damage, and decreased performance.
 - a. Maintaining sufficient flow through the heat exchanger will help prevent the buildup of scale.

Table 19: Temperature rise, flow rate, and head loss

| Boiler Model | Maximum MBH | | Recommended Range | | | | | | Maximum Flow | | Minimum Flow | |
|--------------|-------------|--------|-------------------|----------------|----------|----------------|----------|----------------|--------------|----------------|--------------|----------------|
| | | | 20 °F ΔT | | 30 °F ΔT | | 40 °F ΔT | | 15 °F ΔT | | 50 °F ΔT | |
| | Input | Output | GPM | Head Loss (ft) | GPM | Head Loss (ft) | GPM | Head Loss (ft) | GPM | Head Loss (ft) | GPM | Head Loss (ft) |
| 400 | 399 | 387 | 39 | 12.4 | 26 | 6.2 | 19 | 3.8 | 52 | 20.3 | 16 | 2.6 |
| 500 | 500 | 485 | 49 | 13.7 | 32 | 6.7 | 24 | 4.1 | 65 | 22.7 | 19 | 2.7 |
| 650 | 650 | 631 | 63 | 11.8 | 42 | 6.1 | 32 | 3.8 | 84 | 18.8 | 25 | 2.6 |
| 800 | 800 | 776 | 78 | 12.8 | 52 | 7.0 | 39 | 4.6 | 103 | 19.7 | 31 | 3.3 |
| 1000 | 999 | 969 | 97 | 14.6 | 65 | 7.2 | 49 | 4.4 | 129 | 24 | 39 | 3.0 |
| 1250 | 1250 | 1212 | 121 | 24.5 | 81 | 11.5 | 61 | 6.7 | 162 | 41.9 | 49 | 3.7 |
| 1500 | 1500 | 1440 | 146 | 34.4 | 97 | 16.2 | 73 | 9.5 | 194 | 58.9 | 58 | 5.2 |

Flow Rate = Output×1000/(500×ΔT), where flow rate is in GPM, output is in MBH, and ΔT is in °F.
 Temperature rise limit is 55 °F
 Temperature rise (delta) limit of 55 °F

Table B5: Pipe size and Total Head Loss for Boiler Pump Sizing

| Model | Nominal Pipe Size (in) ¹ | Temperature Rise (°F) | Flow Rate (GPM) | Heat Ex. loss (ft of head) | Total Loss (ft of head) |
|-------|-------------------------------------|-----------------------|-----------------|----------------------------|-------------------------|
| 400 | 2 | 20 | 39 | 12 | 15 |
| | | 30 | 26 | 6 | 7 |
| 500 | 2 | 20 | 49 | 14 | 17 |
| | | 30 | 32 | 7 | 8 |
| 650 | 2 | 20 | 63 | 12 | 17 |
| | | 30 | 42 | 6 | 9 |
| 800 | 2 | 20 | 78 | 13 | 21 |
| | | 30 | 52 | 7 | 11 |
| 1000 | 2.5 | 20 | 97 | 15 | 21 |
| | | 30 | 65 | 7 | 10 |
| 1250 | 2.5 | 25 | 97 | 16 | 22 |
| | | 30 | 81 | 12 | 16 |
| 1500 | 3 | 25 | 116 | 23 | 26 |
| | | 30 | 97 | 16 | 19 |

NOTE: The total loss includes 20 ft of pipe, 6 elbows, and 2 Valves.
¹ Required minimum pipe size for boiler loop.


NOTICE:

All model sizes come with 2" water connections. Model sizes 1000, 1250, and 1500 require increased diameter for near boiler piping. Increase pipe size immediately at the included connections.

It is the installer's or system designer's responsibility to account for differences in the circulation loop. Length, pipe diameter, elbows, and valves all contribute to the total pressure drop.

X. Water Piping Diagrams

Figure 19: Single Boiler, Primary/Secondary Piping

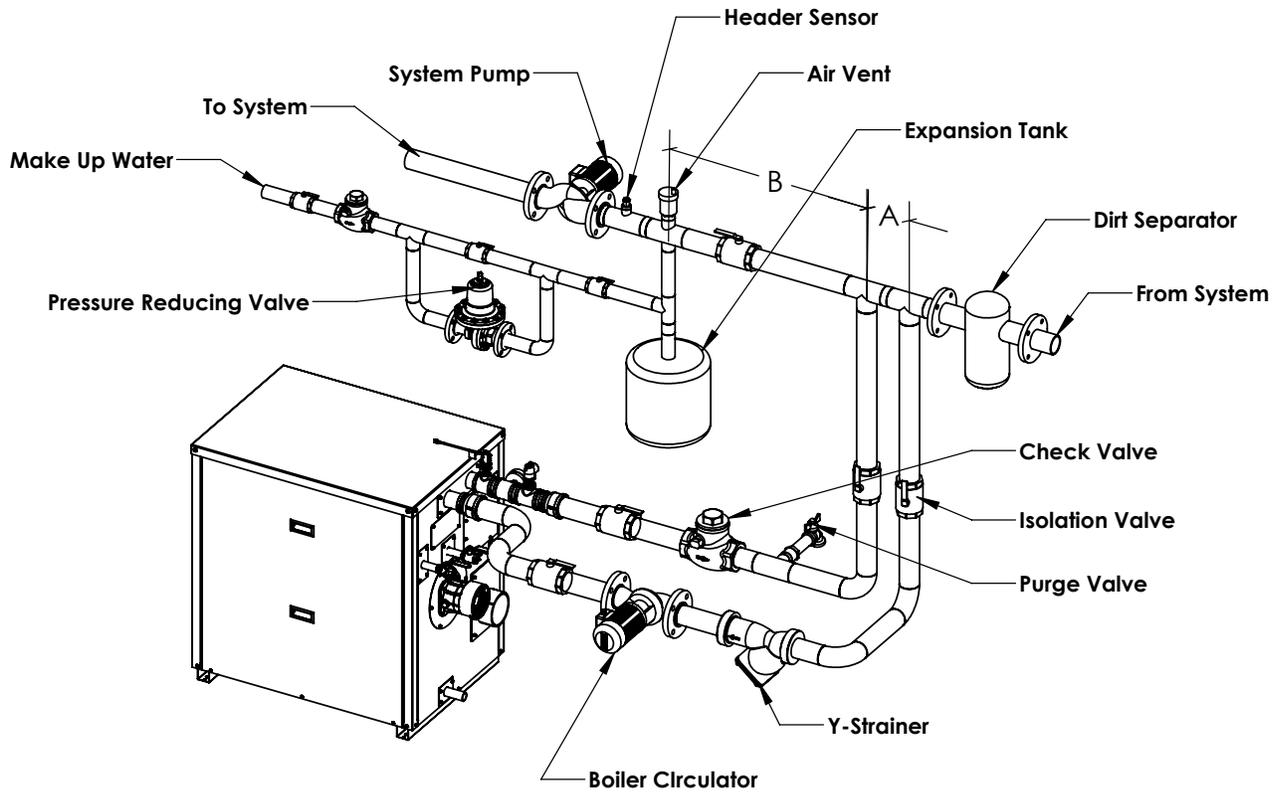


- A. No more than 12 inches or 4 pipe diameters
- B. At least 18" of straight pipe for conventional air scoop

⚠ CAUTION

1. These are suggested piping configurations. It is the installer's responsibility to conform to local codes and ordinances for additional requirements.
2. Pressure relief valve rating shall not exceed pressure rating of any component in the system.
3. Some piping components cannot be supported by the piping. Refer to the manufacturers' installation instructions.
4. It is the installer's responsibility to select piping configurations that provide the proper flow rates and performance.

Figure 20: Single Boiler with Indirect Domestic Water Heater

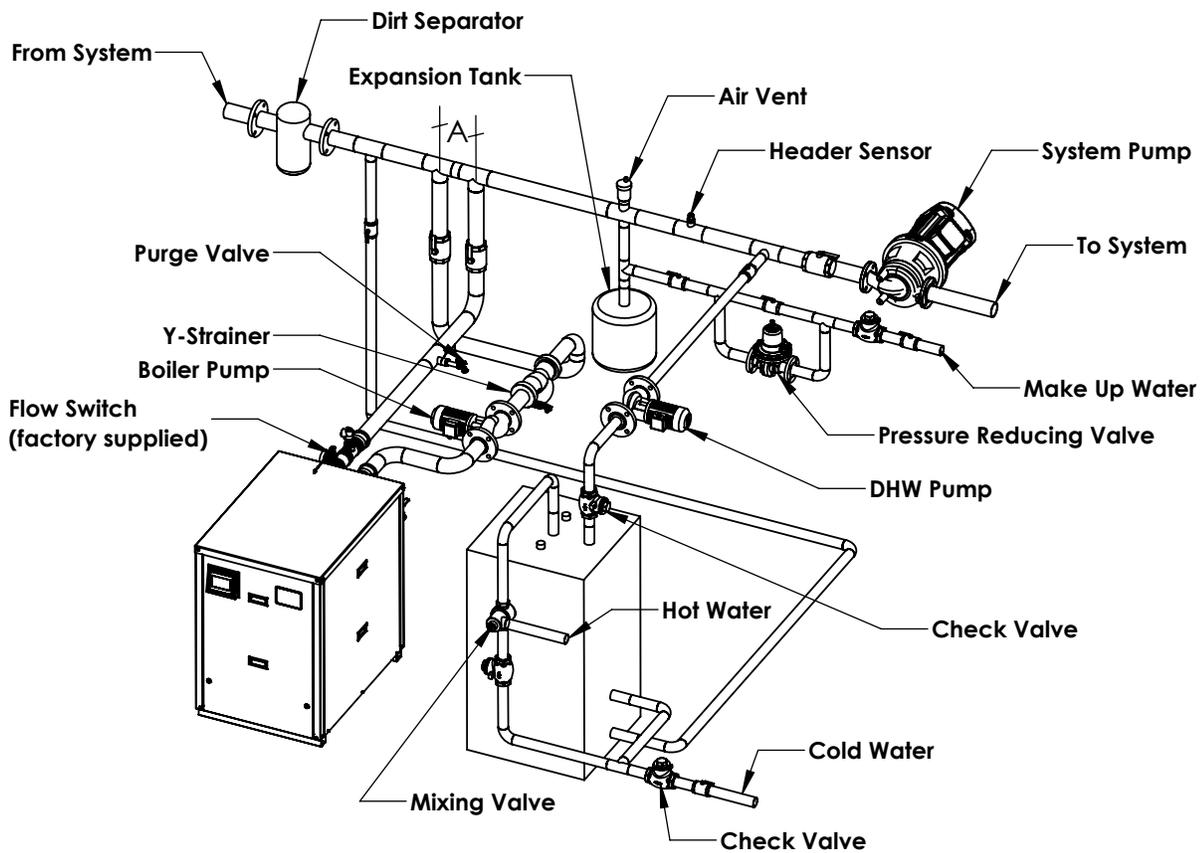


A. No more than 12 inches or 4 pipe diameters

⚠ CAUTION

1. These are suggested piping configurations. It is the installer's responsibility to conform to local codes and ordinances for additional requirements.
2. Pressure relief valve rating shall not exceed pressure rating of any component in the system.
3. Some piping components cannot be supported by the piping. Refer to the manufacturers' installation instructions.
4. It is the installer's responsibility to select piping configurations that provide the proper flow rates and performance.
5. Erosion could occur if common piping is undersized.

X. Water Piping Diagrams (continued)

Figure 21: Multiple Boiler, Primary/Secondary with Common Header Piping

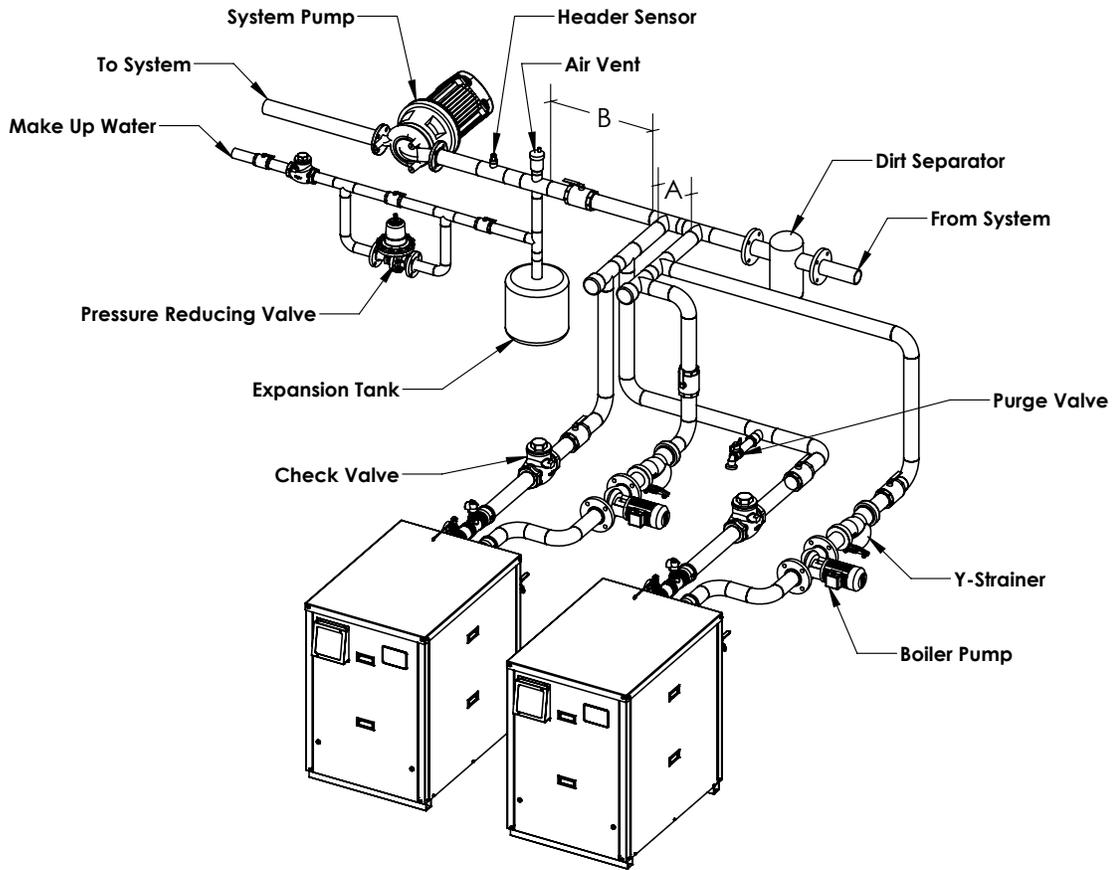

- A. No more than 12 inches or 4 pipe diameters
 B. At least 18" of straight pipe for conventional air scoop

Required Common Piping Sizes for Multiple Appliances

| Model | Number of Appliances | | | | |
|-------|----------------------|---|---|---|----|
| | 2 | 3 | 4 | 5 | 6 |
| 400 | 2.5 | 4 | 4 | 5 | 5 |
| 500 | 3 | 4 | 5 | 5 | 6 |
| 650 | 4 | 5 | 5 | 6 | 6 |
| 800 | 4 | 5 | 6 | 6 | 8 |
| 1000 | 4 | 5 | 6 | 8 | 8 |
| 1250 | 5 | 6 | 8 | 8 | 8 |
| 1500 | 5 | 8 | 8 | 8 | 10 |

Note: Nominal (NPS) pipe sizes are noted. Based on 20°F temperature rise.

⚠ CAUTION

1. These are suggested piping configurations. It is the installer's responsibility to conform to local codes and ordinances for additional requirements.
2. Pressure relief valve rating shall not exceed pressure rating of any component in the system.
3. Some piping components cannot be supported by the piping. Refer to the manufacturers' installation instructions.
4. It is the installer's responsibility to select piping configurations that provide the proper flow rates and performance.
5. Erosion could occur if common piping is undersized.

X. Water Piping Diagrams (continued)

Figure 22: Stacked Boilers Hydraulic separator

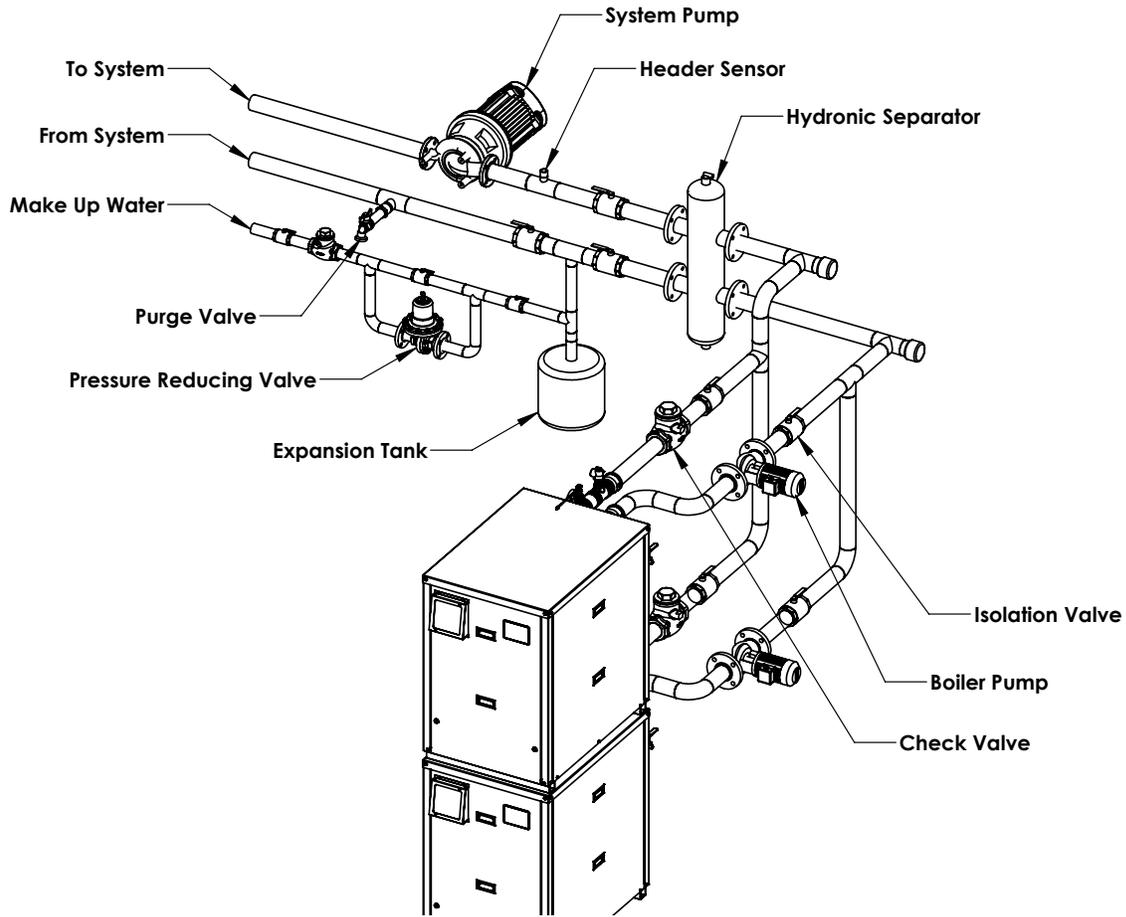


Table 20: Required Common Piping Sizes for Multiple Appliances

| Model | Number of Appliances | | | | |
|-------|----------------------|---|---|---|----|
| | 2 | 3 | 4 | 5 | 6 |
| 400 | 2.5 | 4 | 4 | 5 | 5 |
| 500 | 3 | 4 | 5 | 5 | 6 |
| 650 | 4 | 5 | 5 | 6 | 6 |
| 800 | 4 | 5 | 6 | 6 | 8 |
| 1000 | 4 | 5 | 6 | 8 | 8 |
| 1250 | 5 | 6 | 8 | 8 | 8 |
| 1500 | 5 | 8 | 8 | 8 | 10 |

Note: Nominal (NPS) pipe sizes are noted. Based on 20°F temperature rise.

⚠ CAUTION

1. These are suggested piping configurations. It is the installer's responsibility to conform to local codes and ordinances for additional requirements.
2. Pressure relief valve rating shall not exceed pressure rating of any component in the system.
3. Some piping components cannot be supported by the piping. Refer to the manufacturers' installation instructions.
4. It is the installer's responsibility to select piping configurations that provide the proper flow rates and performance.

XI. Gas Piping

A. Guidelines and Requirements

All installation must conform to the *National Fuel Gas Code ANSI Z223.1/NFPA54*, and/or local codes. In Canada, installation must conform to the latest edition of *CSA B149.1 National Gas and Propane Gas Installation Code*, and/or local codes.

Safe operation of the appliance requires properly sized gas supply piping. Design gas piping system to provide adequate gas supply to the appliance. Account for existing and expected future gas utilization equipments such as boilers and cooking equipment.

1. First verify that the appliance is supplied with the type of gas specified on the rating plate.
2. Account for pressure drop from the point of delivery to the appliance. The maximum allowable system pressure is ½ psig (14 in. wc). Refer to Table 24 for model specific gas pressures and gas connection sizes.
3. If gas supply pressure exceeds 14 in. wc, an additional field supplied lockup type pressure regulator is required. Install regulator minimum of 10 ft. from the appliance.
4. For length of piping and number of fittings refer to and Table 21 for maximum capacity of Schedule 40 pipe. Table 22 lists equivalent pipe length for standard fittings.
 - a. For materials or conditions other than those listed, refer to National Fuel Gas Code, ANSI Z223.1/NFPA 54 or Natural Gas and Propane Installation Code, CAN/CSA B149.1, or size system using standard engineering methods acceptable to authority having jurisdiction.
5. Gas piping systems for gas specific gravity of 0.60 can be sized directly from Table 21 unless authority having jurisdiction specifies a gravity factor be applied. For other specific gravities, apply gravity factor from Table 23. If exact specific gravity is not shown choose next higher value.
6. The appliance and its gas connection must be leak tested before placing it in operation.
7. To protect the gas valve when testing over 1/2 psig (3.4 kPa), the appliance and its individual shutoff valve must be disconnected from gas supply piping. For testing at 1/2 psig (3.4 kPa) or less, isolate the appliance from gas supply piping by closing the manual shutoff valve on the appliance.
8. Locate leaks using approved combustible gas non-corrosive leak detector solution.

9. The incoming gas pressure can be measured at the pressure tapping on the manual ball valve.
10. If the high or low gas pressure switch tripped, it must be manually reset before the appliance can be restarted. (See Figure 24)
11. Gas piping shall be supported by fixed hangers or stands and not by the appliance.
12. Purge all air from gas lines.
13. Install manual shutoff valve in accordance with state and local requirements.
14. All threaded joints should be coated with piping compound resistant to action of liquefied petroleum gas.

B. Field Connecting Gas Supply

1. A manual shutoff valve is shipped loose with the appliance and should be installed as shown in Figure 23 with a sediment trap.
 - a. The manual shutoff valve includes tappings for testing supply gas pressure to the appliance.

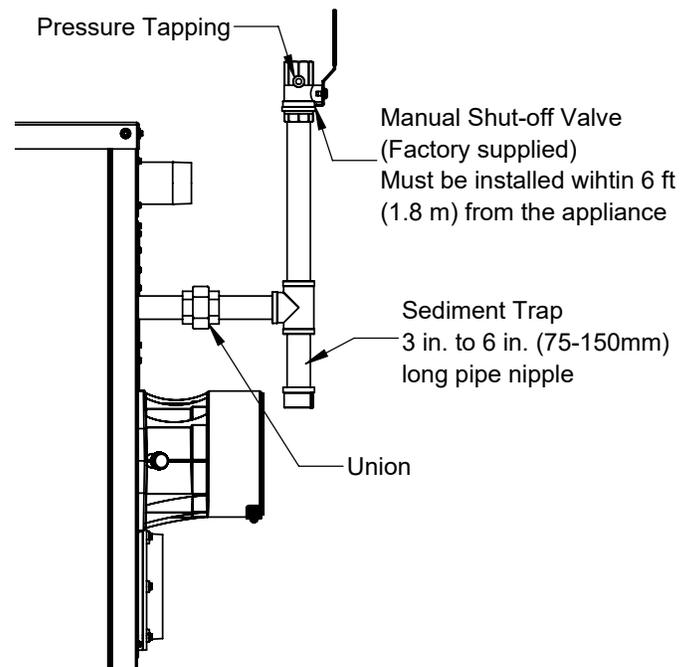


Figure 23: Field Installed Gas Connection

NOTICE:

If gas supply pressure exceeds 14 in. wc, an additional field supplied lockup type pressure regulator is required.

Locate the field supplied gas pressure regulator a minimum of 10 ft. from the appliance with no more than 1 elbow between.

XI. Gas Piping (continued)

Table 21: Maximum capacity of schedule 40 black pipe in CFH*

| Natural Gas, Inlet Pressure 14.0 in wc (3.4 kPa) or less; 0.5 in wc (0.12 kPa) Pressure Drop | | | | | | | | | | | |
|---|-----------------------------|----------------------------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|------------|
| Nominal Pipe Size (In) | Inside Diameter (In) | Length of Pipe (Ft) | | | | | | | | | |
| | | 10 | 20 | 30 | 40 | 50 | 60 | 70 | 80 | 90 | 100 |
| ½ | 0.622 | 172 | 118 | 95 | 81 | 72 | 65 | 60 | 56 | 52 | 50 |
| ¾ | 0.824 | 360 | 247 | 199 | 170 | 151 | 137 | 126 | 117 | 110 | 104 |
| 1 | 1.049 | 678 | 466 | 374 | 320 | 284 | 257 | 237 | 220 | 207 | 195 |
| 1¼ | 1.380 | 1390 | 957 | 768 | 657 | 583 | 528 | 486 | 452 | 424 | 400 |
| 1½ | 1.610 | 2090 | 1430 | 1150 | 985 | 873 | 791 | 728 | 677 | 635 | 600 |
| 2 | 2.067 | 4020 | 2760 | 2220 | 1900 | 1680 | 1520 | 1400 | 1300 | 1220 | 1160 |
| 2½ | 2.469 | 6400 | 4400 | 3530 | 3020 | 2680 | 2430 | 2230 | 2080 | 1950 | 1840 |
| 3 | 3.068 | 11300 | 7780 | 6250 | 5350 | 4740 | 4290 | 3950 | 3674 | 3450 | 3260 |

*1 CFH of Natural Gas is approximately equal to 1 MBH; contact your gas suppliers for the actual heating value of your gas.

| Natural Gas, Inlet Pressure 11.0 in wc (2.7 kPa); 0.5 in wc (0.12 kPa) Pressure Drop | | | | | | | | | | | |
|---|-----------------------------|----------------------------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|------------|
| Nominal Pipe Size (In) | Inside Diameter (In) | Length of Pipe (Ft) | | | | | | | | | |
| | | 10 | 20 | 30 | 40 | 50 | 60 | 70 | 80 | 90 | 100 |
| ½ | 0.622 | 116 | 80 | 64 | 55 | 48 | 44 | 40 | 38 | 35 | 33 |
| ¾ | 0.824 | 242 | 166 | 134 | 114 | 101 | 92 | 85 | 79 | 74 | 70 |
| 1 | 1.049 | 456 | 314 | 252 | 215 | 191 | 173 | 159 | 148 | 139 | 131 |
| 1¼ | 1.380 | 937 | 644 | 517 | 442 | 392 | 355 | 327 | 304 | 285 | 269 |
| 1½ | 1.610 | 1403 | 964 | 775 | 663 | 588 | 532 | 490 | 456 | 427 | 404 |
| 2 | 2.067 | 2703 | 1858 | 1492 | 1277 | 1131 | 1025 | 943 | 877 | 823 | 778 |
| 2½ | 2.469 | 4308 | 2961 | 2377 | 2035 | 1803 | 1634 | 1503 | 1399 | 1312 | 1239 |
| 3 | 3.068 | 7615 | 5234 | 4203 | 3567 | 3188 | 2889 | 2658 | 2472 | 2320 | 2191 |

*1 CFH of LP gas is approximately equal to 2.5 MBH; contact your gas supplier for the actual heating value of your gas.

Table 22: Equivalent Lengths of Standard Pipe Fittings & Valves (ft)

| Nominal Pipe Size | Inside Diameter (in) | Valves (Screwed) - Fully Open | | | | Screwed Fittings | | | | |
|--------------------------|-----------------------------|--------------------------------------|--------------|--------------|--------------------|-------------------------|------------------|------------------------------|--------------------------------|------------------------------------|
| | | Gate | Globe | Angle | Swing Check | 45° Elbow | 90° Elbow | 180 Close Return Bend | 90 Tee Flow Through Run | 90 Tee, Flow Through Branch |
| ½ | 0.622 | 0.4 | 17.3 | 8.7 | 4.3 | 0.7 | 1.6 | 3.5 | 1.6 | 3.1 |
| ¾ | 0.824 | 0.5 | 22.9 | 11.4 | 5.7 | 1.0 | 2.1 | 4.6 | 2.1 | 4.1 |
| 1 | 1.049 | 0.6 | 29.1 | 14.6 | 7.3 | 1.2 | 2.6 | 5.8 | 2.6 | 5.2 |
| 1¼ | 1.38 | 0.8 | 38.3 | 19.1 | 9.6 | 1.6 | 3.5 | 7.7 | 3.5 | 6.9 |
| 1½ | 1.61 | 0.9 | 44.7 | 22.4 | 11.2 | 1.9 | 4.0 | 9.0 | 4.0 | 8.0 |
| 2 | 2.067 | 1.2 | 57.4 | 28.7 | 14.4 | 2.4 | 5.2 | 11.5 | 5.2 | 10.3 |
| 2½ | 2.469 | 1.4 | 68.5 | 34.3 | 17.1 | 2.9 | 6.2 | 13.7 | 6.2 | 12.3 |
| 3 | 3.068 | 1.8 | 85.2 | 42.6 | 21.3 | 3.6 | 7.7 | 17.1 | 7.7 | 15.3 |

XI. Gas Piping (continued)

Table 23: Specific Gravity Correction Factors

| Specific Gravity | Correction Factor | Specific Gravity | Correction Factor |
|------------------|-------------------|------------------|-------------------|
| 0.60 | 1.00 | 0.90 | 0.82 |
| 0.65 | 0.96 | 1.0 | 0.78 |
| 0.70 | 0.93 | 1.10 | 0.74 |
| 0.75 | 0.90 | 1.20 | 0.71 |
| 0.80 | 0.87 | 1.30 | 0.68 |
| 0.85 | 0.81 | 1.40 | 0.66 |

C. Gas Pressure Switches

1. This appliance is equipped with a high and low gas pressure switch to comply with CSD-1 standards.
 - a. The gas pressure switches will trip if the incoming gas pressure passes the switches' set point. A tripped switch is indicated on the appliance display. A Manual reset is required to reset the switch and resume operation.

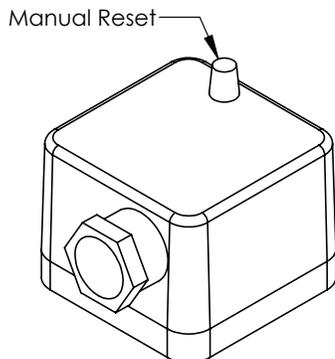


Figure 24: High/Low Gas Pressure Switch

⚠ WARNING

Failure to properly pipe gas supply to appliance may result in improper operation and damage. Always assure gas piping is absolutely leak free and of the proper size and type for the connected load.

An additional gas pressure regulator may be needed. Consult gas supplier.

Failure to use proper thread compounds on all gas connections may result in leaks of flammable gas.

Gas supply to appliance and system must be completely shut off prior to installing or servicing the gas piping.

Do not use matches, candles, or other open flame ignition source to check for leaks.

Use two wrenches when tightening gas piping at the appliance, use one wrench to prevent the gas train from turning.

Failure to support the connection pipe could damage safety components.

Ensure that the high gas pressure regulator is at least 10 feet (3 m) upstream of the appliance.

NOTICE:

The high and low gas pressure switches incorporate a vent limiter as per UL 353 and limits the escape of gas to less than 1.0 CFH at 7 PSI if the internal diaphragm ruptures.

This appliance and all other appliances must be firing at maximum capacity to properly measure inlet gas pressure.

Table 24: Inlet Gas Pressures, Pipe Size, and Pressure Switch

| Model | Inlet Size (In.) | Min. Gas Pres. (In. W.C.) | | Max. Gas Pres. (In. W.C.) | | High Gas Pressure Switch ¹ (In. W.C.) | Low Gas Pressure Switch ¹ (In. W.C.) |
|-------|------------------|---------------------------|---------|---------------------------|---------|--|---|
| | | Natural | Propane | Natural | Propane | | |
| 400 | 3/4 | 4 | 8 | 14 | 14 | 1 | Natural: 3 LP: 7 |
| 500 | 3/4 | | | | | | |
| 650 | 1 | | | | | | |
| 800 | 1 | | | | | | |
| 1000 | 1 | | | | | | |
| 1250 | 1-1/4 | N/A | N/A | N/A | N/A | N/A | Natural: 3 |
| 1500 | 1-1/4 | | | | | | Natural: 3 |

¹ Factory default high and low gas pressure switch setpoint.

XII. Electrical

A. General.

Install wiring and electrically ground the appliance in accordance with authority having jurisdiction or, in the absence of such requirements, follow the *National Electrical Code*, NFPA 70, and/or *Canadian Electrical Code Part 1*, CSA C22.1.

1. A separate electrical circuit must be run from the main electrical service with an over-current device/disconnect in the circuit. A service switch is recommended and may be required by some local jurisdictions. Install the service switch in the line voltage "Hot" leg of the power supply. Locate the service switch such that the appliance can be shut-off without exposing personnel to danger in the event of an emergency.

B. Power Requirements

1. Nominal appliance current draw is provided in Table 25. These values are for planning purposes only and represent the appliance's maximum power consumption.

Table 25: Electrical Ratings

| Model | Voltage | Phase | Hz | Nominal Current (amps) |
|-------|---------|-------|----|------------------------|
| 400 | 120 | 1 | 60 | 7 |
| 500 | | | | 7 |
| 650 | | | | 8 |
| 800 | | | | 8 |
| 1000 | | | | 8 |
| 1250 | | | | 10 |
| 1500 | | | | 10 |

C. Appliance Wiring

1. Connect to the field wiring PCB's inside the rear control box.
 - a. Low voltage PCB has connections for the tank sensor, external limits, Alarm, 4-20 mA, etc. One 24V fuse and spare are provided. See Figure 26.
 - b. 120 VAC PCB (Figure 25) has connections for line voltage and pumps. Do not exceed 5.6A total pump current draw (system + DHW + boiler pumps). One 6.3A slow-blow pump fuse and spare are provided.

⚠ DANGER

Electrical Shock Hazard: Ensure all electrical connections are disconnected before attempting installation or service of electrical components or connections of the appliance or building. Lockout all electrical boxes with padlock once power is turned off.

⚠ WARNING

Electrical Shock Hazard: Failure to properly wire electrical connections on the appliance may result in serious physical harm.

Electrical power may be from more than one source. Make sure all power is off before attempting any electrical work.

Each appliance must be protected with a properly sized over-current device.

Never jump out or make inoperative any safety or operating controls.

The wiring diagrams contained in this manual are for reference purposes only. Each appliance is shipped with a wiring diagram attached to the front door. Refer to this diagram and the wiring diagram of any controls used. Read, understand and follow all wiring instructions supplied with the control.

NOTICE:

All wires, wire nuts, controls etc. are installer supplied unless otherwise noted.

When making low voltage connections, make sure that no external power source is present in the thermostat or limit circuits. If such a power source is present, it could destroy the microprocessor control. One example of an external power source that could be inadvertently connected to the low voltage connections is a transformer with old thermostat wiring.

To obtain total system power consumption add all selected circulator and component current draws. Label all wires prior to servicing controls. Wiring errors can cause improper and dangerous operation. Verify Proper operation after servicing.

XII. Electrical (continued)

D. Routing Field Connections

1. Route all field connections through conduits into the rear control box.
2. Wire the Header Sensor to the terminals labeled "Header Sensor" on the low voltage PCB.
 - a. Avoid placing the sensor near potential sources of electrical noise such as transformers, power lines, and fluorescent lighting. Wire the sensor to the appliance using 22 gauge or larger wire. As with the sensor, the sensor wiring should be routed away from sources of electrical noise. Where it is impossible to avoid such noise sources, wire the sensor using a 2 conductor, *UL Type CM, AWM Style 2092, 300 Volt 60 C* shielded.

E. System and Circulation Pump Wiring


1. Do not exceed 5.6A total pump current draw (system +DHW + boiler pumps). One 6.3A slow-blow pump fuse and spare are provided. Use relays to power pumps and avoid overcurrent on the PCB.

⚠ WARNING

Appliance must be electrically grounded as required by National Electrical Code ANSI/NFPA 70-latest edition.

Caution: Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation.

- a. The system pump (or relay) can be wired to "System Pump" on the 120 VAC PCB.
- b. The boiler/primary pump (or relay) can be wired to "Boiler Pump" on the 120 VAC PCB.

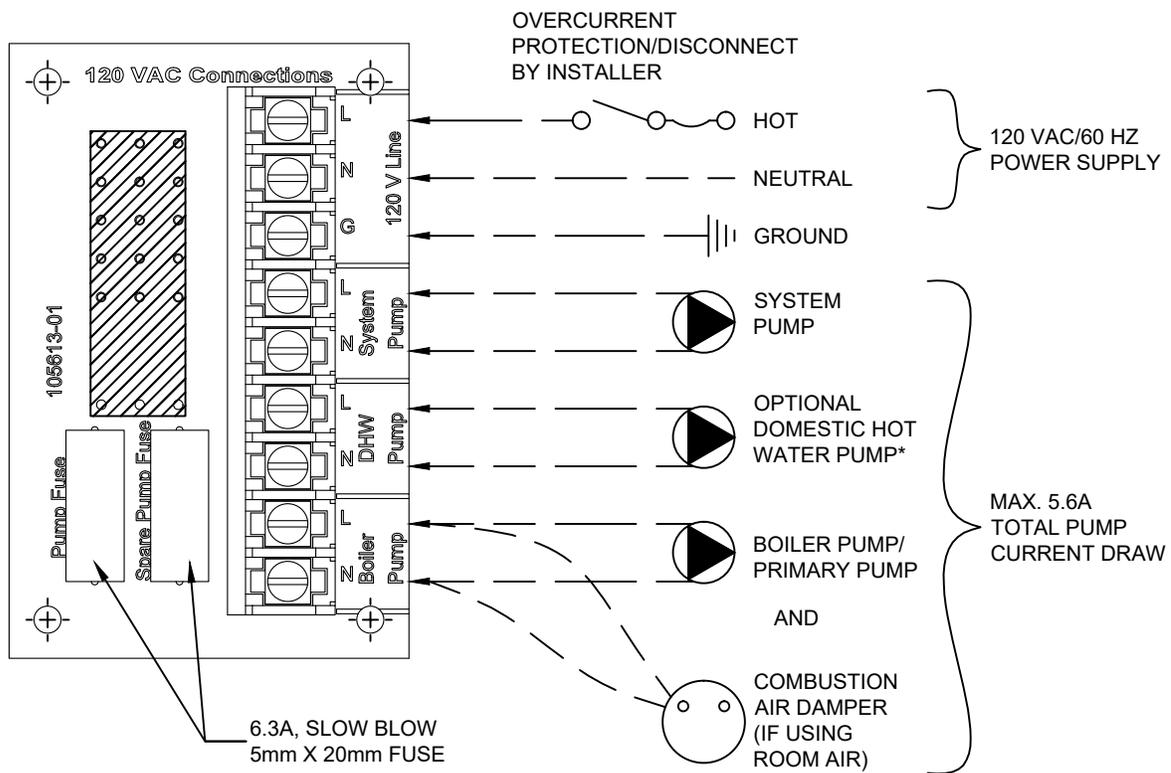

* For indirect water heating with boiler models. Use Primary Pump for direct water heating with water heater models.

Figure 25: 120 VAC Connections PCB

XII. Electrical (continued)

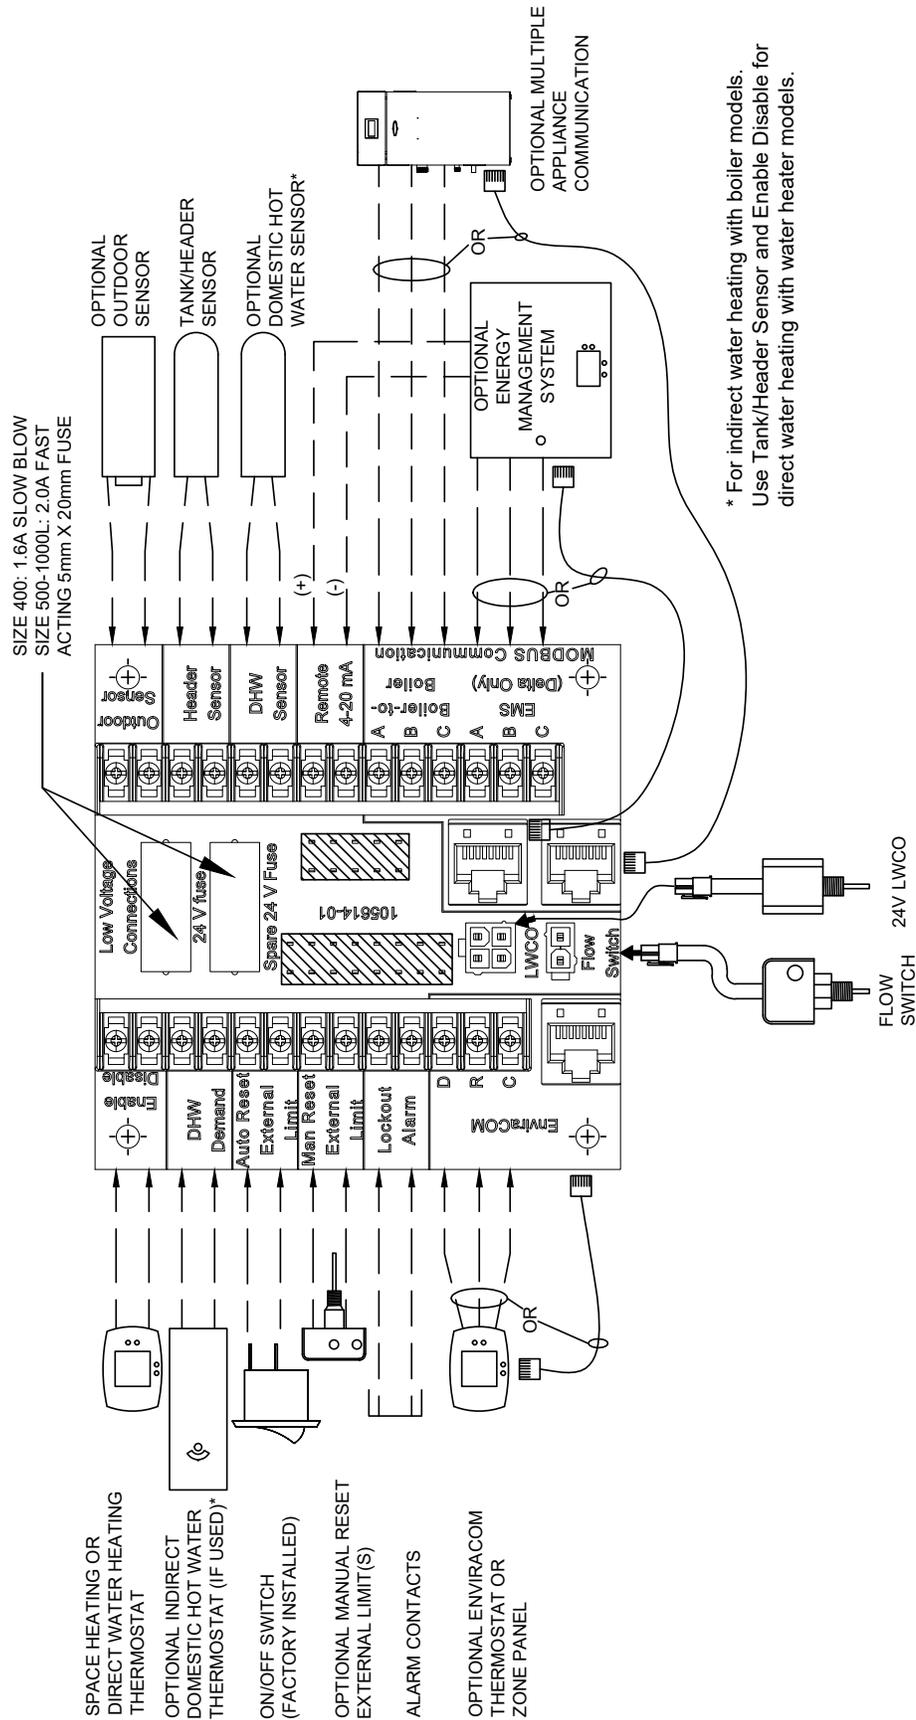


Figure 26: 400-1000 Low Voltage Connections PCB

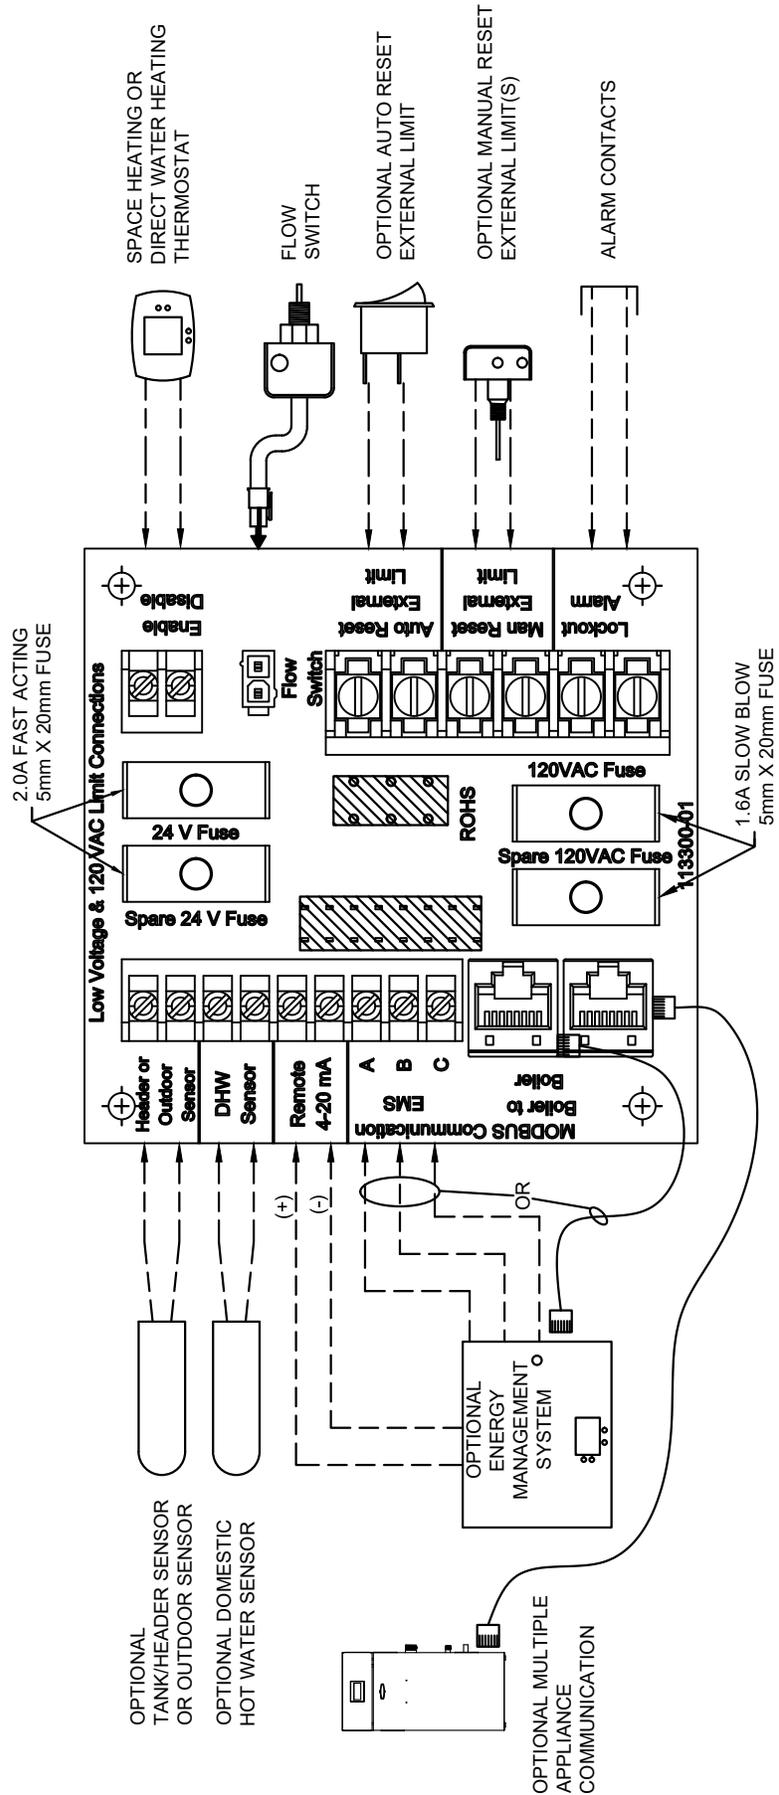


Figure 27: 1250-1500 Low Voltage and Limit Connections PCB

XII. Electrical (continued)



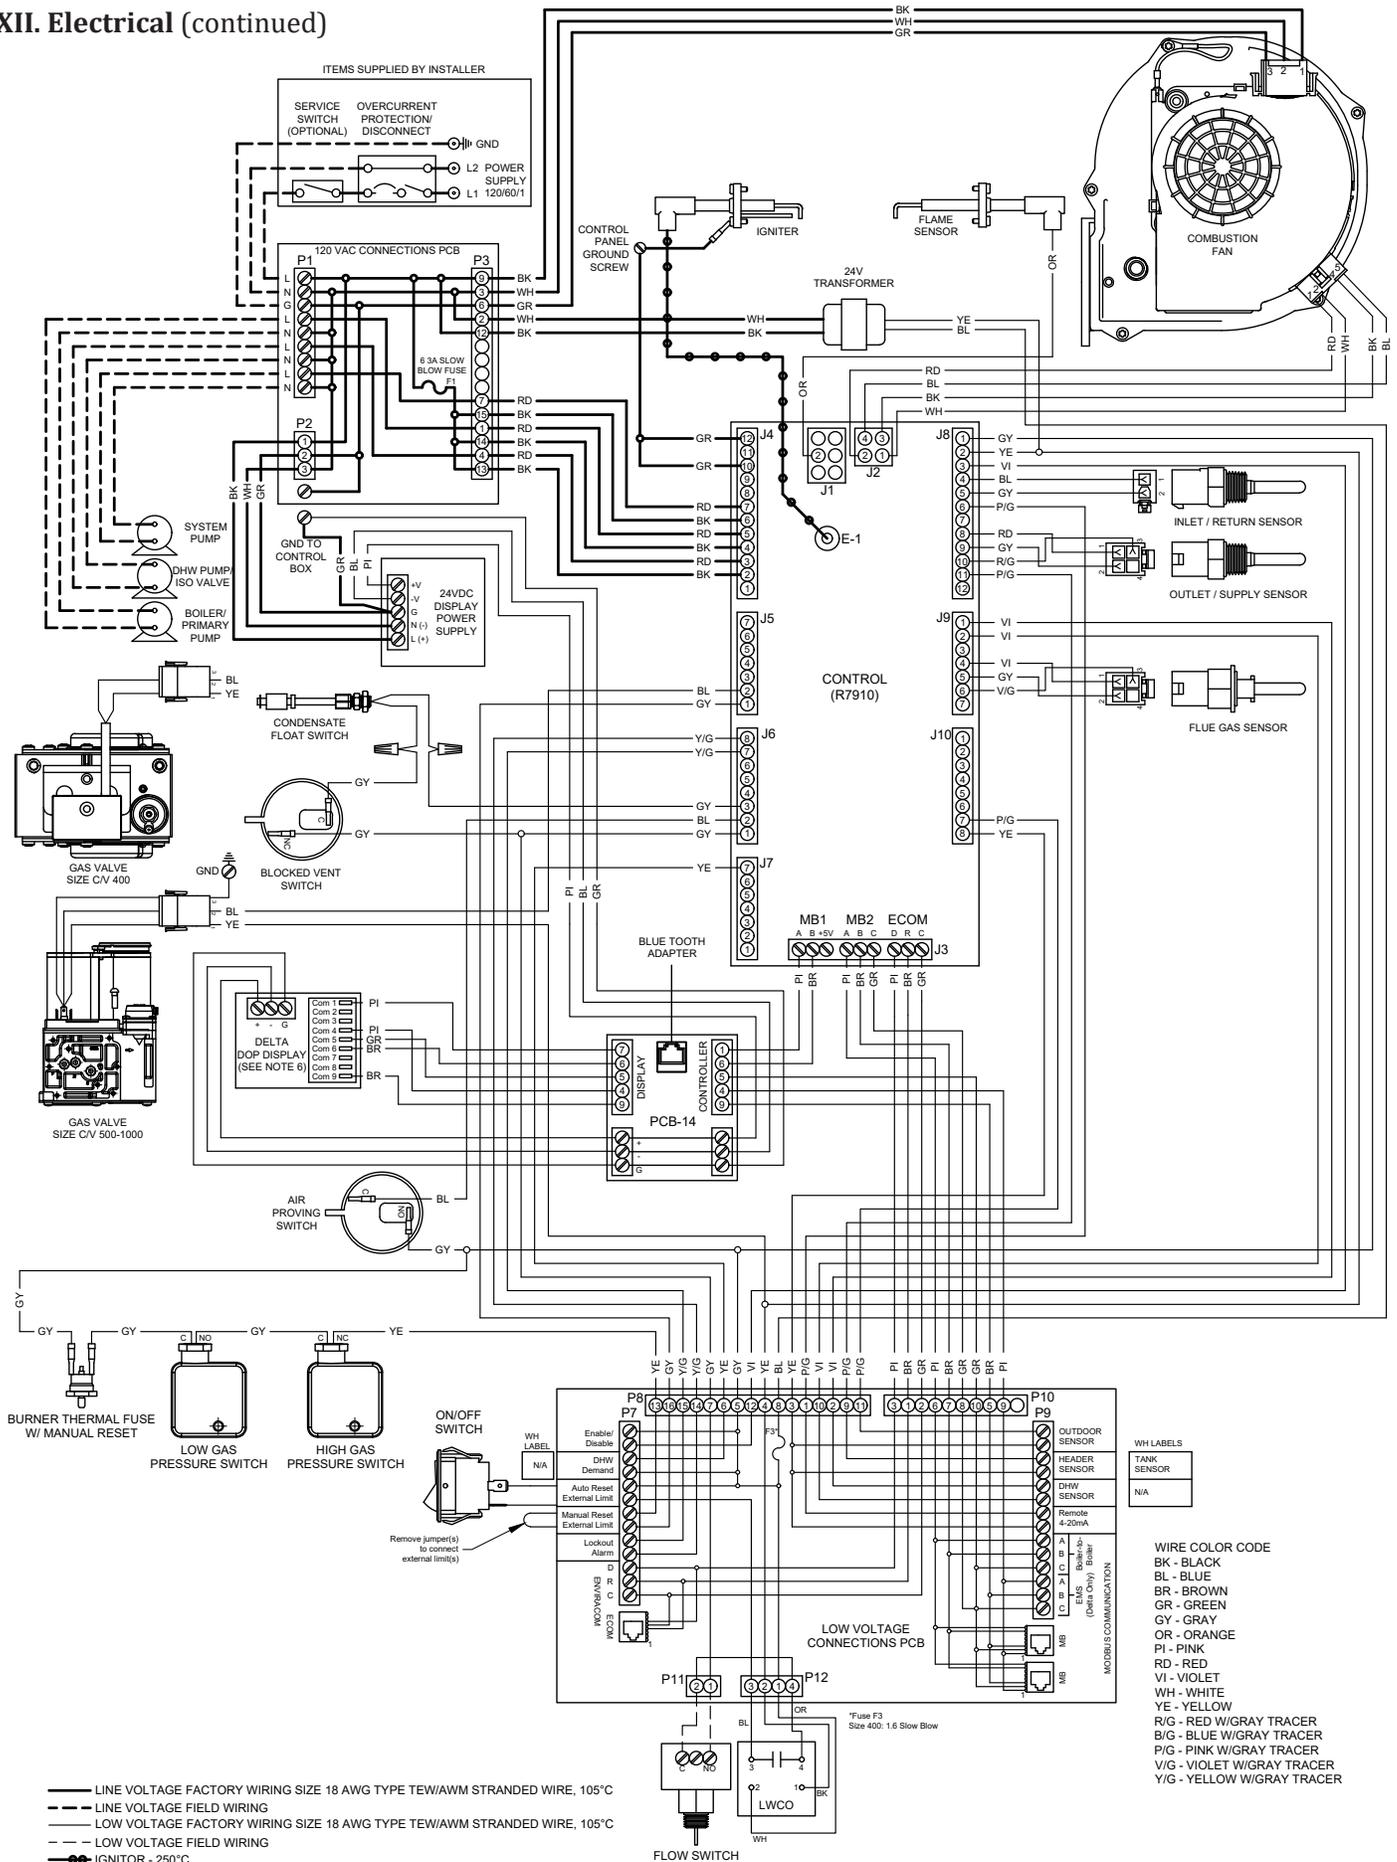


Figure 28: 400-1000 Wire Schematic

XII. Electrical (continued)

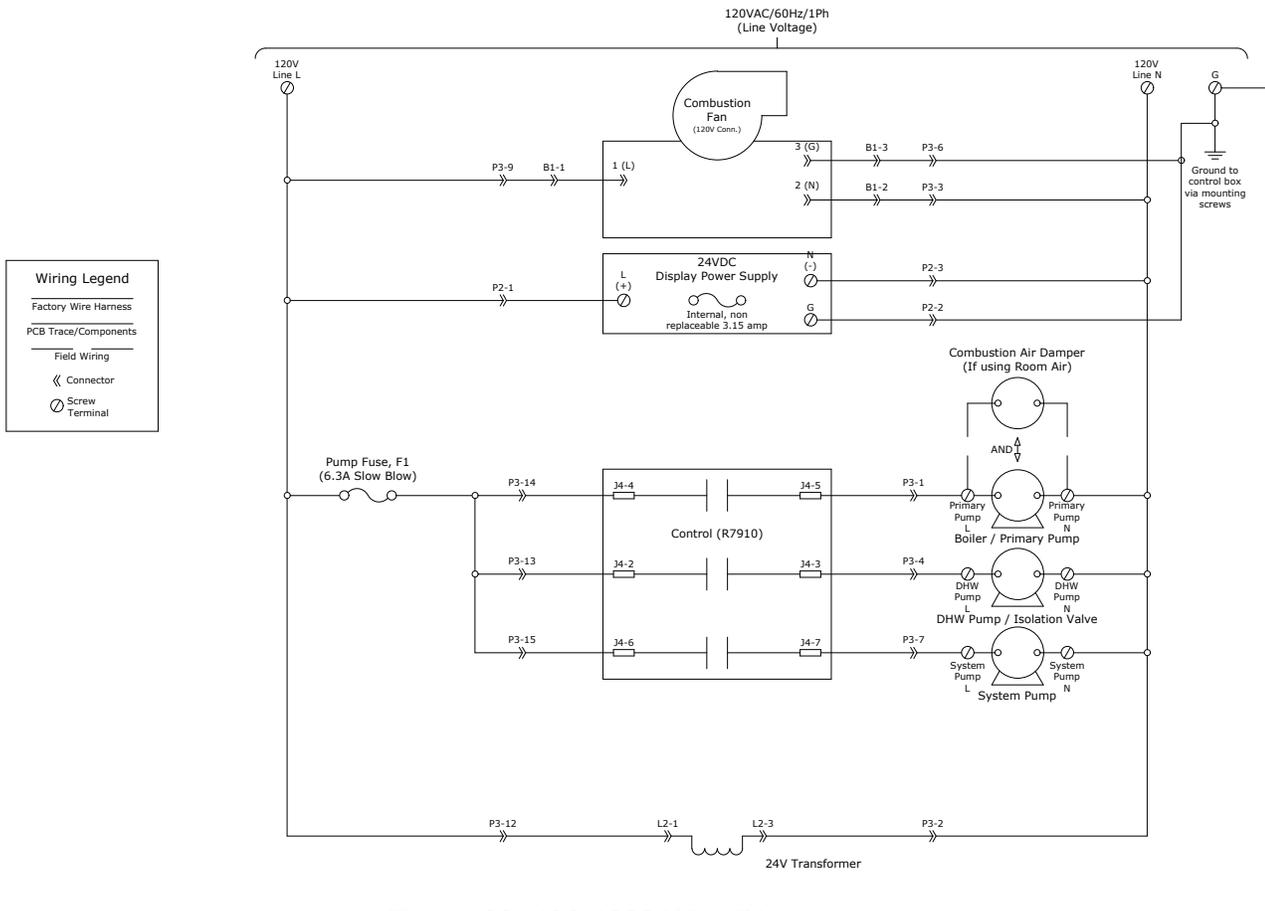

XII. Electrical (continued)

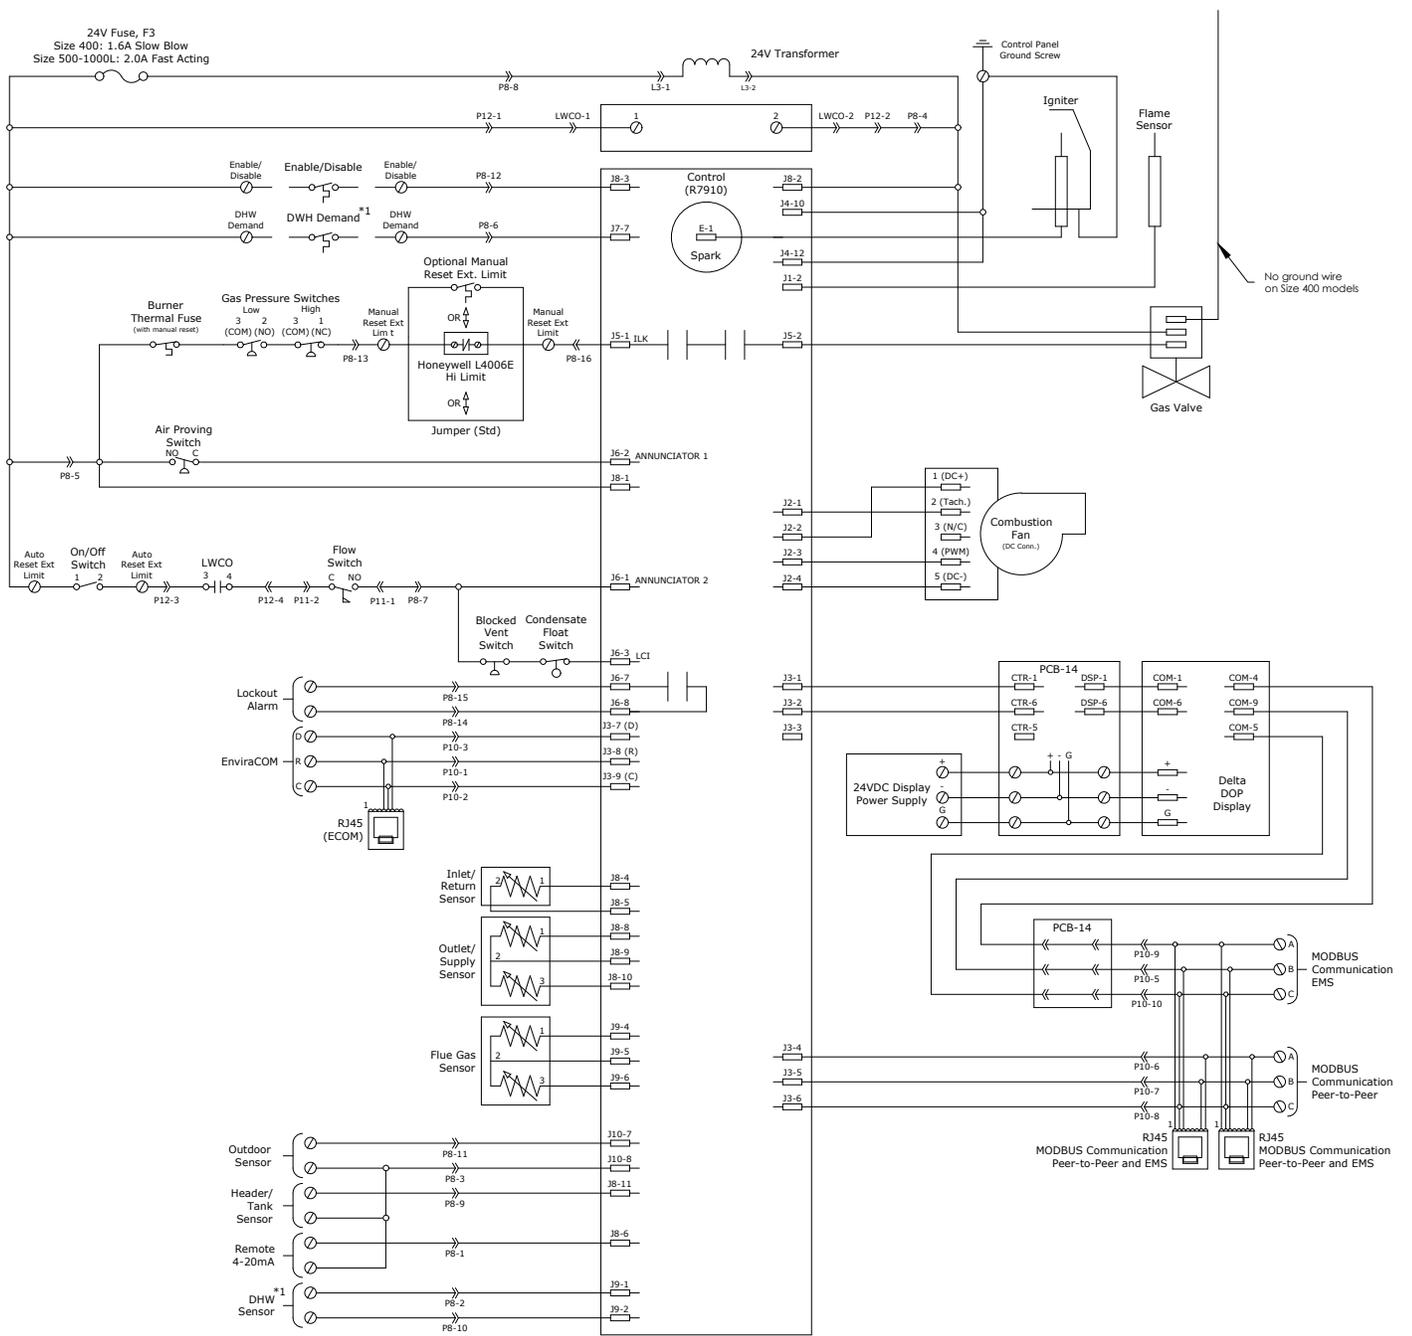

400-1000 Wire Diagram (continued)


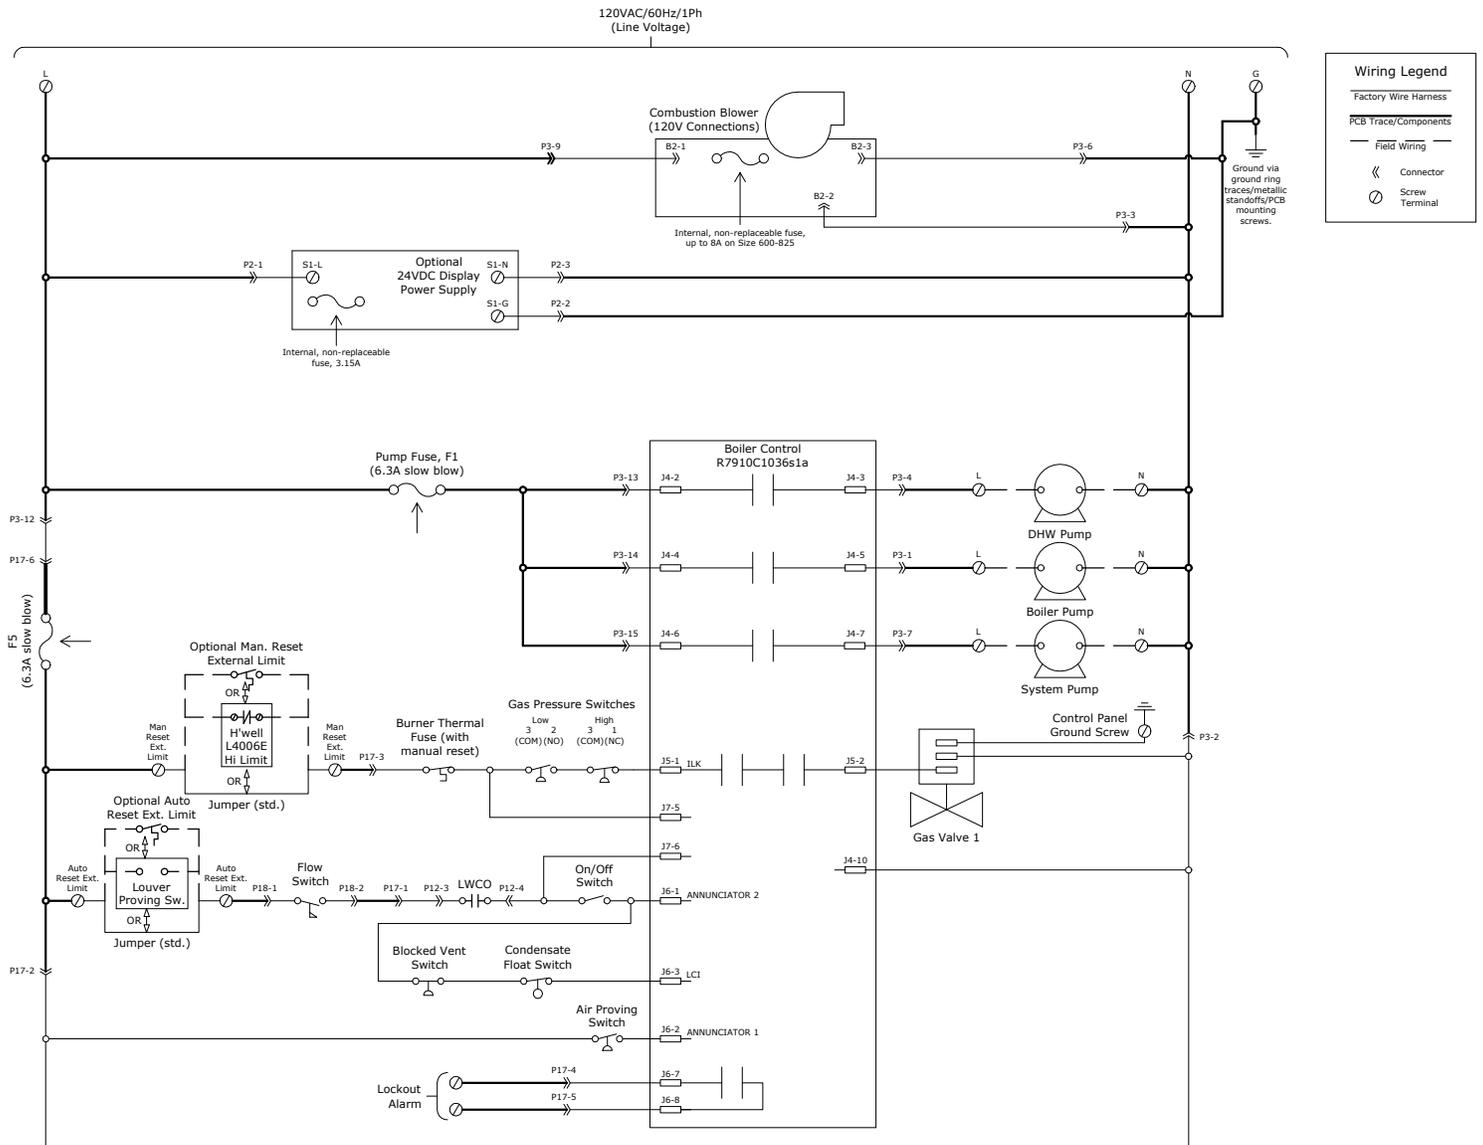


Figure 31: 1250-1500 Wire Diagram

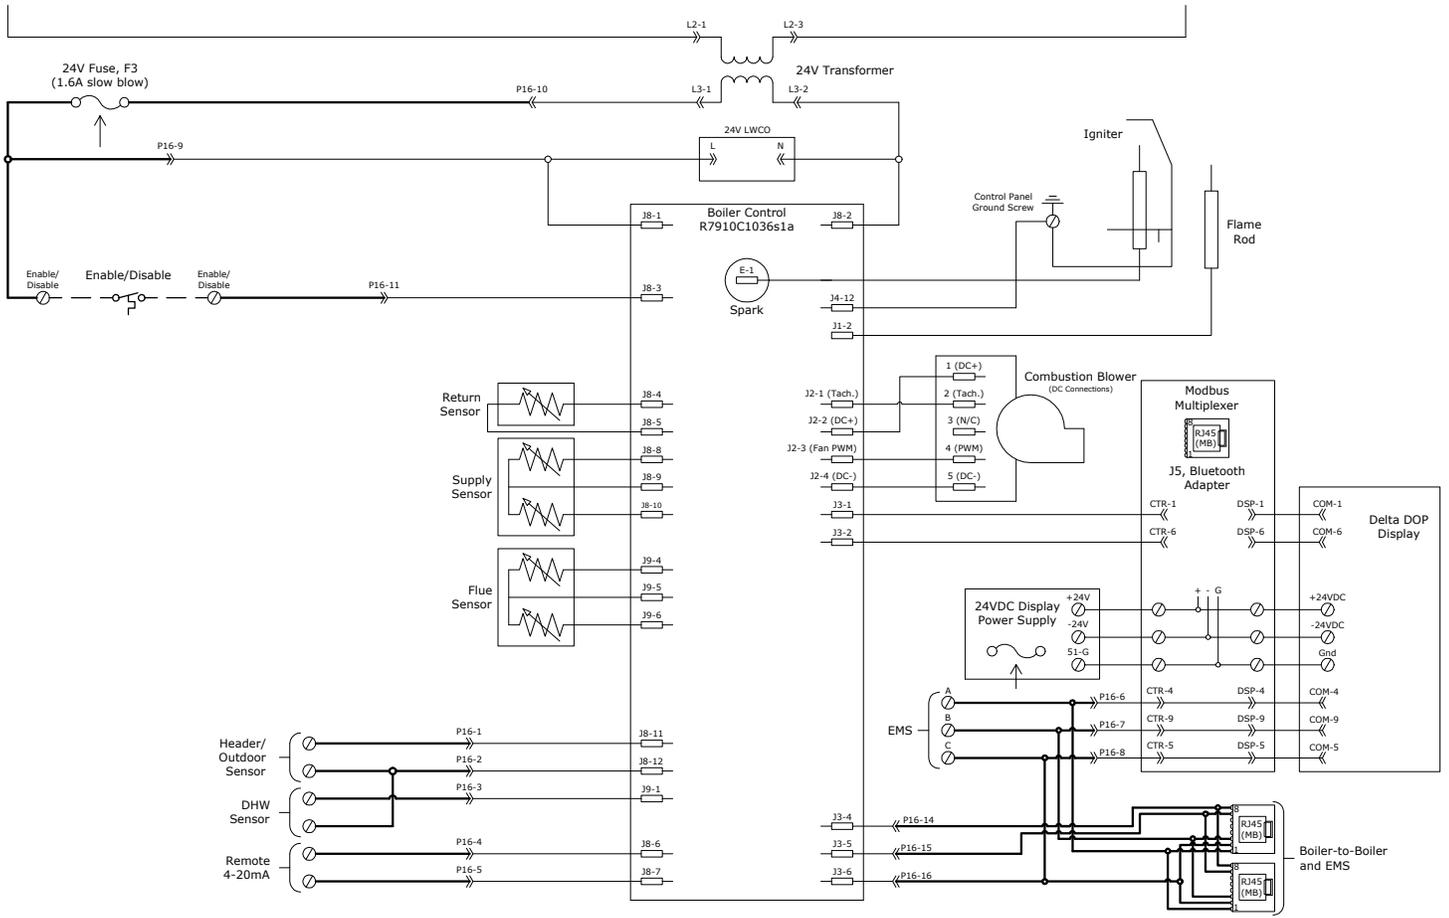

1250-1500 Wire Diagram (continued)

XIII. System Start-up

A. Check System Setup

1. Fill out start-up form.
 - a. Start-up forms for print or digital fill out can be found on factory website.
2. Verify that the venting, water piping, gas piping and electrical system are installed properly. Refer to installation instructions contained in this manual.
3. Confirm all electrical, water, and gas supplies are turned off at the source and that venting is clear of obstructions.
4. Flush the system to remove sediment, flux, and other contaminants. This must be done with the appliance isolated from the system.
5. Fill the hot water system with treated water as specified in the water quality section of this manual.
 - a. Maintain at least 15 psi primary loop pressure.
6. Power the appliance. Turn on the electrical supply to the appliance and circulator at the fuse disconnect switch.
7. Power the circulator(s). Turn system circulator(s) on and purge air from the system.
8. Pressurize the fuel line.
 - a. Open the manual gas shut-off valves located upstream of the field supplied gas regulator.
 - b. Check gas piping for leaks and purge gas line of air.
 - c. Ensure the incoming gas pressure is within the min and max on the rating label. Also, ensure the setting for the high and low gas pressure switches are within the limits given in Table 24.
 - d. Reset high and low gas pressure switches by pressing the reset button.

B. Start-up

Start the appliance using "Operating Instructions" in Figure 32.

1. Allow the appliance to complete its standard startup sequence: prepurge, preignition, and drive light-off.
2. Refer to the Concert Control manual to select the desired control mode.
3. It may take a couple of ignition attempts before a flame is established. After the first ignition failure, the appliance goes into a hard lockout and a manual reset using the Concert Control is required to restart. If ignition is not achieved in three consecutive attempts, contact factory or a qualified heating service technician.

⚠ DANGER

Do not use matches, candles, or other open flame ignition sources to check for leaks.

Make sure that the area around the appliance is clear and free from combustible materials, gasoline and other flammable vapors and liquids.

⚠ WARNING

Start-up of this appliance should be undertaken only by trained and skilled personnel from a qualified service agency. Follow these instructions exactly. Improper installation, adjustment, service or maintenance can cause severe personal injury, death, or substantial property damage.

The maximum operating pressure of this appliance is 150psi (1034 kPa) with the factory installed temperature and pressure relief valve. Never exceed the maximum allowable working pressure on the heat exchanger ASME plate.

The outlet pressure for the gas valve has been factory set and requires no field adjustment. Attempting to adjust the outlet pressure may result in damage to the gas valve and cause severe personal injury, death, or substantial property damage.

Each appliance is tested at the factory and adjustments to the air fuel mixture are normally not necessary. Improper gas valve or mixture adjustments could result in severe personal injury, death, or substantial property damage.

Any gas valve adjustments (throttle and/or offset) specified herein and subsequent combustion data (%O₂, %CO₂, CO air free ppm) collection must be performed using a calibrated combustion analyzer. Failure to use combustion analyzer could result in personal injury, death, or substantial property damage.

⚠ WARNING

Failure to install the condensate drain in accordance with the instructions in this manual could cause flue gas to enter the building, resulting in severe personal injury, death, or substantial property damage.

XIII. System Start-up(continued)

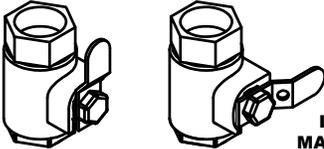
| FOR YOUR SAFETY READ BEFORE OPERATING/P OUR VOTRE SECURITE LISEZ AVANT DE METTRE EN MARCHÉ | |
|--|--|
| <p>WARNING: If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.</p> <p>AVERTISSEMENT: Quiconque ne respecte pas à la lettre les instructions dans la présente noticé risque de déclencher un incendie ou une explosion entraînant des dommages, des blessures ou la mort.</p> | |
| <p>A. This appliance does not have a pilot. It is equipped with an ignition device which automatically lights the burner. Do <u>not</u> try to light the burner by hand.</p> <p>B. BEFORE OPERATING smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.</p> <p>WHAT TO DO IF YOU SMELL GAS:</p> <ul style="list-style-type: none"> - Do not try to light any appliance. - Do not touch any electric switch; do not use any phone in your building. - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions. - If you cannot reach your gas supplier, call the fire department. <p>C. Use only your hand to turn the gas control knob. Never use tools. If the knob will not turn by hand, don't try to repair it, call a qualified service technician. Force or attempted repair may result in a fire or explosion.</p> <p>D. Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.</p> | <p>A. Cet appareil ne comporte pas de veilleuse. Il est muni d'un dispositif d'allumage qui allume automatiquement le brûleur. Ne tentez pas d'allumer le brûleur manuellement.</p> <p>B. AVANT DE FAIRE FONCTIONNER, renifllez tout autour de l'appareil pour déceler une odeur de gaz. Renifllez près du plancher, car certains gaz sont plus lourds que l'air et peuvent s'accumuler au niveau du sol.</p> <p>QUE FAIRE SI VOUS SENTEZ UNE ODEUR DE GAZ:</p> <ul style="list-style-type: none"> - Ne pas tenter d'allumer d'appareil. - Ne touchez à aucun interrupteur ; ne pas vous servir des téléphones se trouvant dans le bâtiment. - Appelez immédiatement votre fournisseur de gaz depuis un voisin. Suivez les instructions du fournisseur. - Si vous ne pouvez rejoindre le fournisseur, appelez le service des incendies. <p>C. Ne poussez ou tournez la manette d'admission du gaz qu'à la main ; ne jamais utiliser d'outil. Si la manette reste coincée, ne pas tenter de la réparer ; appelez un technicien qualifié. Le fait de forcer la manette ou de la réparer peut déclencher une explosion ou un incendie.</p> <p>D. N'utilisez pas cet appareil s'il a été plongé dans l'eau, même partiellement. Faites inspecter l'appareil par un technicien qualifié et remplacez toute partie du système de contrôle et toute commande qui ont été plongés dans l'eau.</p> |
| OPERATING INSTRUCTIONS/ INSTRUCTIONS DE FONCTIONNEMENT | |
| <ol style="list-style-type: none"> 1. STOP! Read safety information above on this label. 2. Set the thermostat to lowest setting. 3. Turn off all electric power to the appliance. 4. This appliance is equipped with an ignition device which automatically lights the burner. Do <u>not</u> try to light the burner by hand. 5. Turn the external boiler manual gas valve handle clockwise ↻ to close the gas supply. 6. Wait five (5) minutes to clear out any gas. Then smell for gas, including near the floor. If you smell gas, STOP! Follow "B" in the safety information above on this label. If you don't smell gas, go to the next step. 7. Turn the external boiler manual gas valve handle counterclockwise ↺ to open the gas supply. 8. Turn on all electric power to the appliance. 9. Set the thermostat to the desired setting. 10. If the appliance will not operate, follow the instructions "To Turn Off Gas To Appliance" and call your service technician or gas supplier. | <ol style="list-style-type: none"> 1. ARRÊTEZ ! Lisez les instructions de sécurité sur la portion supérieure cette étiquette. 2. Réglez le thermostat à la température la plus basse. 3. Coupez l'alimentation électrique de l'appareil. 4. Cet appareil est équipé de l' dispositif d'allumage qui automobile allume maticallyle brûleur. Ne tentez pas d'allumer le brûleur manuellement. 5. Tourner la chaudière externe manuelle poignée ↻ en clapet à gaz dans le sens des aiguilles d'une montre pour fermer l'offre de gaz. 6. Attendre cinq (5) minutes pour laisser échapper tout le gaz. Renifllez tout autour de l'appareil, y compris près du plancher, pour déceler une odeur de gaz. Si vous seutez une odeur de gaz, ARRÊTEZ ! Passez à l'étape B des instructions de sécurité sur la portion supérieure de cette étiquette. S'il n'y a pas d'odeur de gaz, passez à l'étape suivante. 7. Tourner la chaudière externe manuelle compteur de poignée ↺ en clapet à gaz ouvrir dans le sens des aiguilles d'une montre le gaz approvisionnement. 8. Mettez l'appareil sous tension. 9. Réglez le thermostat à la température désirée. 10. Si l'appareil ne se met pas en marche, suivez les instructions intitulées « Comment couper l'admission de gaz de l'appareil » et appelez un technicien qualifié ou le fournisseur de gaz. |
| <p>OPEN/OUVERT CLOSED/FERMÉ</p>  | <p>EXTERNAL BOILER MANUAL GAS VALVE LA CHAUDIÈRE EXTERNE MANUELLE DE CLAPET À GAZ</p> |
| TO TURN OFF GAS TO APPLIANCE/ COMMENT COUPER L'ADMISSION DE GAZ DE L'APPAREIL | |
| <ol style="list-style-type: none"> 1. Set the thermostat to lowest setting. 2. Turn off all electric power to the appliance if service is to be performed. 3. Turn the external boiler manual gas valve handle clockwise ↻ to close gas supply. | <ol style="list-style-type: none"> 1. Réglez le thermostat à la température la plus basse. 2. Coupez l'alimentation électrique de l'appareil s'il faut procéder à l'entretien. 3. Tourner la chaudière externe manuelle poignée ↻ en clapet à gaz dans le sens des aiguilles d'une montre pour fermer l'offre de gaz. |
| 101607-03 | |

Figure 32: Operating Instructions

XIII. System Start-up(continued)

4. Begin commissioning the appliance. Visually inspect flame via sight glass window. On high fire the flame should be stable and mostly blue. Intermittent flecks of yellow and orange in the flame are normal.
5. Test any other external limits or other controls in accordance with the manufacturer's instructions.
6. Verify O_2 (or CO_2) and CO concentration are within limits specified in Table 26. Note: the values in this table are for sea level only. For high altitude installation, above 2000 ft. consult factory.

C. Combustion Air/Fuel Adjustment

1. For high fire adjustment
 - a. Lock the appliance in high fire and allow fan speed and combustion analyzer reading to stabilize before taking combustion readings. To lock in high fire, select MAIN MENU >> OPERATION. Select lock symbol, type password and select ENTER. From the Operation screen, select Automatic / Manual Firing Rate Control >> Manual Modulation. Go back to Operation screen. Then select High Low >> High.
 - b. Once high fire rate is reached, adjust the O_2 level at high fire with all the jackets, including the front cabinet door, closed.
 - c. For appliances specified to be less than 20 ppm NOx adjust O_2 level to approximately 6.0% (Natural gas).
 - d. If high fire O_2 is too high (CO_2 is too low), decrease O_2 (increase CO_2) by turning the throttle screw counter-clockwise in 1/4 turn increments and checking the O_2 (or CO_2) after each adjustment. Refer to Figure 33 or for location of throttle screw. Verify CO air free is less than 200 ppm.

- e. If high fire O_2 is too low (CO_2 is too high), increase O_2 (decrease CO_2) by turning the throttle screw clockwise in 1/4 turn increments and checking the O_2 (or CO_2) after each adjustment. Refer to Figure 33 for location of throttle screw. Verify CO air free is less than 200 ppm.
2. For low fire adjustment
 - a. Lock appliance in low fire and allow fan speed and combustion analyzer reading to stabilize before taking combustion readings. To lock in low fire, select High Low >> Low.
 - b. If low fire O_2 is too low (CO_2 is too high), increase O_2 (decrease CO_2) by turning the offset screw counter-clockwise in less than 1/8 turn increments and checking the O_2 (or CO_2) after each adjustment. Verify CO concentration is less than 200 ppm.
 - c. If low fire O_2 is too high (CO_2 is too low), decrease O_2 (increase CO_2) by turning the offset screw clockwise in 1/4 turn increments and check O_2 (or CO_2) after each adjustment. Verify CO air free is less than 200 ppm.

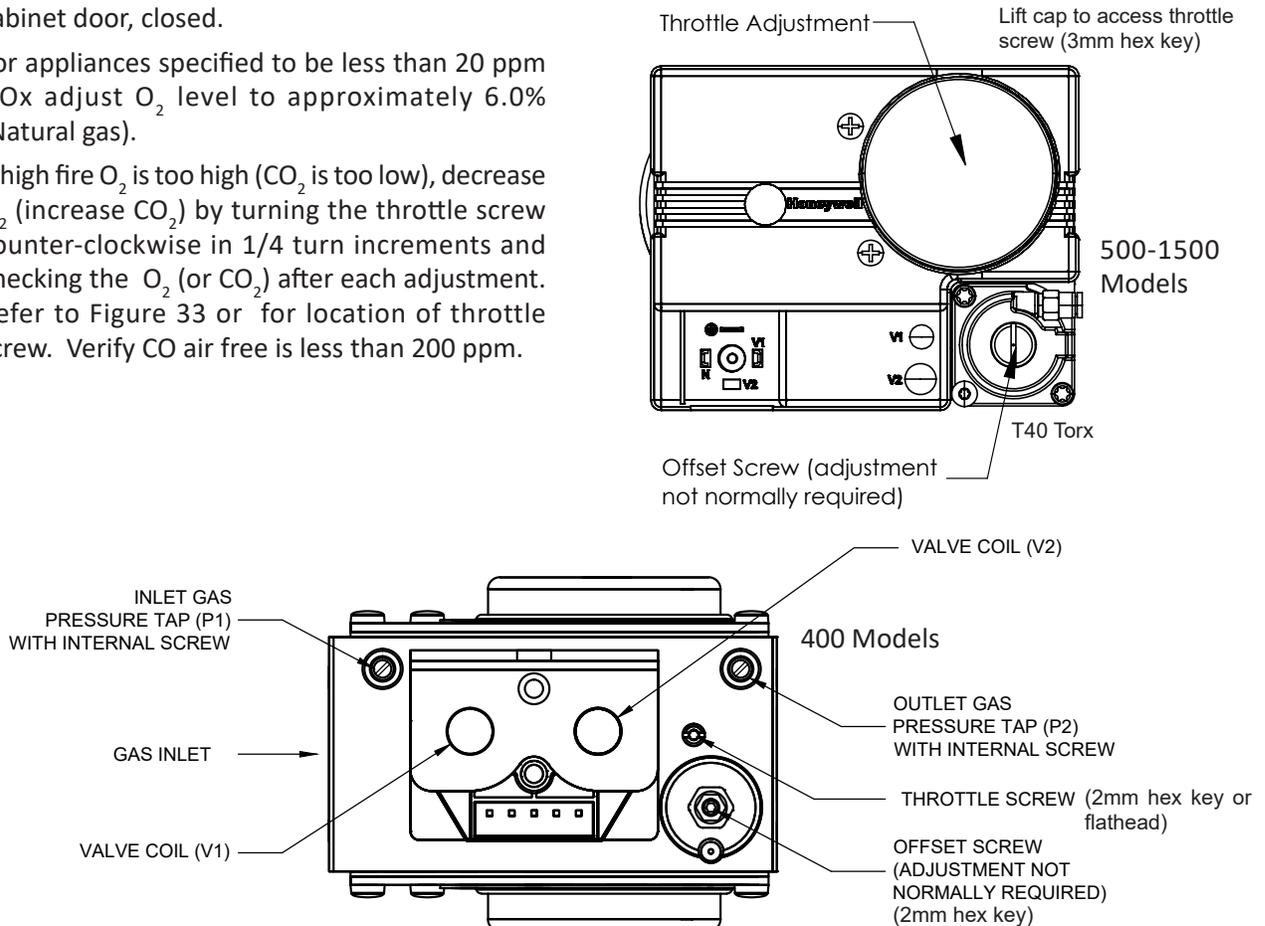


Figure 33: Gas Valve Adjustment

XIII. System Start-up(continued)

- d. Verify O₂ repeatability by modulating to high and low fire three times.
 - e. Once the appliance is operating within the specified high and low fire ranges, record emissions, flue draft, and other important data.
 - f. Compare emission data to the factory emissions report posted on the back of the front jacket panel.
3. Return the appliance to Automatic Mode. From Operation screen, select Automatic / Manual Firing Rate Control >> Automatic Modulation. Select HOME to return to the Home Screen.

⚠ WARNING

Do not operate this appliance without air filter installed and front panel secured with latches and screws. Failure to comply could result in unreliable operation, minor personal injury, or property damage.

E. Field Conversion of Gas Type

This appliance is factory tested and set up for the gas type selected but can be field converted with the following steps.

⚠ WARNING

Changing gas type requires adjustment to the gas valve. Not following these instructions may result in personal injury, death, or substantial property damage.

1. Order a gas conversion kit for the model size being converted.
 - a. Gas conversion kits include a mixer and label. See Table 29 for part numbers.
 - b. Replace the old mixer with the new one.
2. Connect the new gas supply to the appliance, check for leaks, and purge the gas line in accordance with the *National Fuel Gas Code*, ANSI Z223.1/NFPA 54 and/or *Natural Gas and Propane Installation Code*, CAN/CSA B149.1 or the requirements of the authority having jurisdiction.
3. Adjust the throttle screw towards negative (-) (clockwise) all the way to the closed position. Then, open the throttle with the number of turns for the gas type and model as given in Table 28.

4. Start the appliance using the System Start-up section of these instructions. Even if the gas line has been completely purged of air, the burner may fail to ignite. If burner does not light, turn the throttle towards positive (+) counter-clockwise in 1/4 turn increments, allowing at least three tries for ignition at each setting, until ignition is achieved.
5. Use a combustion analyzer and follow the Air/Fuel adjustment instructions to set up high fire and low fire.
6. Fill out the gas conversion labels included with the appliance (Order part number 110301-01 if not included). Follow the instructions included with the label for placement.

⚠ WARNING

Asphyxiation Hazard. These instructions include a procedure for adjusting the air-fuel mixture on this boiler. This procedure requires a combustion analyzer to measure the O₂ (or CO₂) and Carbon Monoxide (CO air free) levels in flue gas. Adjusting the air-fuel mixture without a proper combustion analyzer could result in unreliable boiler operation, personal injury, or death due to carbon monoxide poisoning.

⚠ WARNING

Improper Gas valve adjustment may cause air deficiency. Operating in this condition causes dangerous levels of CO and potentially flashback. Make sure that all adjustments at high fire are made with the throttle, not offset screw. The throttle adjustment values shown are approximate. The final throttle setting must be found using a combustion analyzer

Table 26: Typical Combustion O₂/CO₂ Readings (Sea Level)

| Model | Natural Gas | | LP Gas | |
|-------|-------------------|------------------|-------------------|------------------|
| | CO ₂ % | O ₂ % | CO ₂ % | O ₂ % |
| 400 | 8.8-9.1 | 5.0-5.5 | 10.0-10.3 | 5.3-5.8 |
| 500 | 8.8-9.1 | 5.0-5.5 | 9.8-10.1 | 5.6-6.0 |
| 650 | 8.8-9.1 | 5.0-5.5 | 9.8-10.1 | 5.6-6.0 |
| 800 | 8.8-9.1 | 5.0-5.5 | 9.8-10.1 | 5.6-6.0 |
| 1000 | 8.8-9.1 | 5.0-5.5 | 9.8-10.1 | 5.6-6.0 |
| 1250 | 8.8-9.1 | 5.0-5.5 | N/A | |
| 1500 | 8.8-9.1 | 5.0-5.5 | | |

XIII. System Start-up(continued)

Table 28: Throttle Screw Starting Position

| Model | Number of turns from closed |
|-------|-----------------------------|
| | Natural Gas/Propane Gas |
| 400 | 2 |
| 500 | 2 |
| 650 | 1 |
| 800 | 1 |
| 1000 | 1 |
| 1250 | 1 |
| 1500 | 1 |

Note: Adjust as instructed in the air/fuel commissioning (start-up) section.

Table 29: Gas Conversion Kits

| Model | Part Number | |
|-------|----------------|-----------|
| | To Natural Gas | To LP Gas |
| 400 | 111545-01 | 111544-01 |
| 500 | 111545-02 | 111544-02 |
| 650 | 111545-03 | 111544-03 |
| 800 | 111545-04 | 111544-04 |
| 1000 | 111545-05 | 111544-05 |
| 1250 | N/A | |
| 1500 | | |

F. Pump Control

Ensure the appropriate pump parameters are selected in the Pumps menu of the Concert control. Refer to the Concert Control manual for more information.

G. Check Thermostat Operation

Verify that the appliance starts and stops in response to calls for hot water. Make sure that the appropriate circulator(s) start and stop.

H. Adjust Supply Water Temperature

As shipped, the central heat and DHW setpoint is 180°F (82.2°C). If necessary, adjust this to the appropriate settings for the system to which this appliance is connected. For information on how to adjust the set point, refer to the “Setup and Tuning” section of the Concert™ Control manual.

- For a hot water supply boiler supplying domestic hot water, at the factory setting, a mixing valve is required to control the supply water at a temperature that will not cause scalding.

I. Testing of Controls and Safety Devices

Prior to placing the appliance in operation, the installing contractor or other responsible personnel must perform safety and control device limit tests to ensure proper operation of the appliance. Refer to Table 27 for recommended method(s) of carrying out these safety limit devices tests.

Table 27: Safety Device Test

| Component | Test Method(s) | After Lockout Annunciation | Actual Alarm Message |
|---------------------------|---|--|---|
| High Gas Pressure Switch | Close the manual gas valve between the gas valve and the blower. Cycle the power. | Manually reset the = Control and switch. Adjust the switch to its normal setting. | Hard Lockout. Gas Pressure Switch |
| Low Gas Pressure Switch | Increase the setting of the switch until the switch trips. | Manually reset the Concert Control and switch. Adjust the switch to its normal setting. | Hard Lockout. Gas Pressure Switch |
| Vestibule Thermal Fuse | Disconnect one wire of the thermal fuse. Cycle the power. | Re-connect wiring to the thermal fuse. Reset thermal fuse lockout. | Hard Lockout. Thermal Fuse |
| Blocked Condensate Switch | Disconnect one wire of the blocked condensate switch. Cycle the power. | Re-connect wire to the blocked condensate switch. Reset the blocked condensate switch lockout. | Hard Lockout. Blocked Condensate switch |
| Low Water Cutoff | While the appliance is running push and hold the LWCO test button until the control shuts down the main burner. | Manually reset the Concert Control and reset the LWCO by pressing the reset button. | Hard Lockout. Low Water Level. |
| Water Flow Switch | Reduce the water flow rate with a manual shutoff valve until the appliance shuts down. | Adjust manual valve to normal position. | Low Water Flow |

IMPORTANT PRODUCT SAFETY INFORMATION REFRACTORY CERAMIC FIBER PRODUCT

⚠ WARNING

Some boiler components use materials that contain refractory ceramic fibers (RCF). RCF has been classified as a possible human carcinogen. When exposed to elevated temperatures, RCF may change into crystalline silica, a known carcinogen. When disturbed as a result of servicing or repair, these substances become airborne and, if inhaled, may be hazardous to your health. Avoid breathing RCF particulates and dust.

Precautionary Measures:

- Do not handle RCF parts or attempt any service or repair work involving RCF without wearing the following protective gear:
 1. A properly fitting National Institute for Occupational Safety and Health (NIOSH)-certified air-purifying respirator with a filter efficiency of at least 95%. Respirator should also include a full facepiece when handling used RCF. Other types of respirators may be required depending on site conditions. Current NIOSH recommendations may be found on the NIOSH website <http://www.cdc.gov/niosh/homepage.html>. NIOSH-approved manufacturers, respirators and associated user instructions are listed on the NIOSH website.
 2. Long sleeved, loose fitting clothing that is sufficiently tight around potential entry points for RCF dust.
 3. Gloves
 4. Eye Protection, such as goggles, safety glasses with side shields, or full facepiece.
- Take steps to assure adequate ventilation.
- Handle RCF carefully to minimize airborne dust. Use hand tools whenever possible.
- Dampen used RCF with light water spray prior to removal to prevent airborne dust.
- Do not use compressed air or dry sweeping for clean-up. Frequently clean work area with a vacuum or by wet sweeping to minimize debris accumulation.
- Vacuum work clothes before leaving work area. Wash work clothes separately from other laundry and rinse washing machine after use to avoid contaminating other clothes.
- Wash all exposed body areas gently with soap and water after contact.
- Discard used RCF components by sealing in an airtight plastic bag or container. Refer to local, regional, state or provincial regulations to identify applicable disposal requirements.

First Aid Procedures:

- If contact with eyes: Flush with water for at least 15 minutes. Seek immediate medical attention if irritation persists.
- If contact with skin: Wash affected area gently with soap and water. Seek immediate medical attention if irritation persists.
- If breathing difficulty develops: Leave the area and move to a location with clean fresh air. Seek immediate medical attention if breathing difficulties persist.
- Ingestion: Do NOT induce vomiting. Drink plenty of water. Seek immediate medical attention.

XIV. Service and Maintenance

A. General Maintenance

1. Keep the area around the appliance free from combustible materials. (Gasoline and other flammable vapors and liquids)
2. Keep the area around the combustion air inlet terminal free from contaminants.
3. Keep the boiler room ventilation orifices open and unobstructed.
4. Remove front jacket panel and check minimum and blocked vent switches for cracks and check pressure sensing line connections.
5. Vacuum any sediment and dust from the interior and components.

B. Monthly Inspection

1. Inspect the vent piping and outside air intake piping to verify they are open, unobstructed, and free of leakage or deterioration. Check screens in vent and air intake terminations to verify they are clean and free of debris.
2. Inspect the condensate drain system to verify it is leak proof, open and unobstructed. Call the service technician if the condensate drain system requires maintenance.
3. Inspect water and gas lines to verify they are free of leaks.

C. Annual Inspections and Service

In addition to the inspection listed above the following should be performed by a service technician once every year.

1. Check O₂% or CO₂% and CO using a combustion analyzer and ensure the readings are within the ranges in the System Start-up section of this manual. Adjust if necessary.
2. Water flow switch
 - a. Test the flow switch by disabling the appliance's primary loop circulator. The appliance must not start when there is no flow of water.
 - b. Remove flow switch and visually inspect paddle for deterioration or buildup.
 - c. If replacing flow switch, ensure paddle is cut to correct length. Some paddles have cut locations marked with the model sizes. If not marked, use Table 30.
3. Condensate tubing
 - a. Inspect flexible tubing connecting heat exchanger and PVC condensate line. Check for tears/deterioration of the tubing or corrosion on the clamps. Replace if damaged.

⚠ WARNING

Read and understand the entire manual before attempting installation, start-up, operation, or service. Installation and service must be performed only by an experienced and skilled installer or service agency.

This appliance requires regular maintenance and service to operate safely. Follow the instructions contained in this manual. Improper installation, adjustment, alteration, service, or maintenance can cause personal injury, death, or substantial property damage.

A clean and unobstructed venting system is necessary to allow noxious fumes that could cause injury or loss of life to vent safely, and will contribute toward maintaining the appliance's efficiency.

If damage due to frozen pipes is a possibility, the piping system should be not left unattended in cold weather; or appropriate safeguards and alarms should be installed on the heating system to prevent damage if the appliance is inoperative.

Do not unscrew any pipe fittings nor attempt to disconnect any components on this appliance without positively assuring the water is cool and has no pressure. Always wear protective clothing and equipment when installing, starting up, or servicing this appliance to prevent scald injuries.

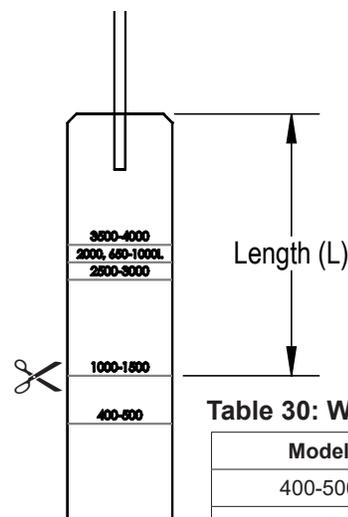


Table 30: Water Flow Switch lengths

| Model | Length (L) |
|----------|-------------------|
| 400-500 | 1-7/16 in. (36mm) |
| 650-1500 | 13/16 in. (20mm) |

XIV. Service and Maintenance (continued)

4. Igniter Electrode
 - a. Disconnect power to the unit and remove ignition electrode from the burner door.
 - b. Visually inspect igniter assembly (ceramic insulators, bracket, and graphite gasket) for damage. Replace igniter assembly if the electrodes are deformed or ceramic insulators are cracked.
 - c. Igniter spark gap should be within 4.0mm - 5.0mm (5/32 in. - 3/16 in.)

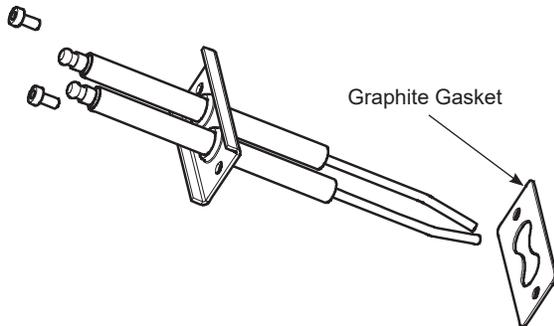


Figure 34: Igniter Electrode Assembly

- d. Remove any excess oxide deposits from the surface of the igniter with steel wool or emery cloth. Do not use sandpaper.
 - e. Install igniter as shown in Figure 34.
5. Ionization Electrode (Flame Rod)
 - a. Disconnect power to the unit and remove flame rod from the burner door.
 - b. Visually inspect electrode assembly (ceramic insulator, bracket, and graphite gasket) for damage. Replace the assembly if the electrode is deformed or the ceramic insulator is cracked.
 - c. Remove any excess oxide deposits from the surface with steel wool or emery cloth. Do not use sandpaper.
 - d. Install flame rod as shown in Figure 35.

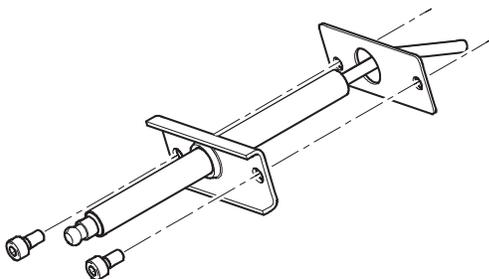


Figure 35: Flame Rod Assembly

⚠ DANGER

This appliance uses flammable gas, high voltage electricity, moving parts, and very hot water under high pressure. Ensure that all gas and electric power supplies are off and that the water temperature is cool before attempting any disassembly or service.

Do not attempt any service work if gas is present in the air around the appliance. Never modify, remove or tamper with any control device.

⚠ WARNING

This appliance contains components that become very hot when the operating. Do not touch any components unless they are cool.

This appliance contains materials of construction, products of combustion and fuel containing alumina, silica, heavy metals, carbon monoxide, nitrogen oxides, aldehydes, and/or other toxic or harmful substances which can cause death or serious injury and which are known to the state of California to cause cancer, birth defects and other reproductive harm. Always use proper safety clothing, respirators, and other safety equipment when servicing or working near the appliance.

All cover plates, enclosures and guards must be in place at all times.

If any controls are replaced, they must be replaced with identical models.

Never jump out or bypass any safety or operating control or component.

Interior of the venting system must be inspected and cleaned before the initial startup and should be inspected periodically for any obstructions.

⚠ CAUTION

Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation.

Verify proper operation after servicing.

XIV. Service and Maintenance (continued)

6. Flue outlet connection
 - a. Visually inspect flue outlet gasket for damage or deterioration, replace if necessary.
 - b. Any accumulation of soot or debris should be thoroughly cleaned out.
7. Flue sensor and blocked vent switch grommets
 - a. Inspect sensor grommets in the vent adapters for cracks or degradation. Replace if needed.
8. Combustion air filter
 - a. Undo the latches on the filter box to lift the lid and access the filter.
 - b. Clean filter of dust and debris using compressed air or water.
 - c. Replace filter if damaged or deteriorated.
 - d. Reinstall filter and lid.
9. Insulations and gaskets
 - a. Visually inspect the following gaskets: flue outlet, blower, burner, and burner door.
10. Burner and Combustion Chamber
 - a. See heat exchanger cleaning instructions included with service kit 112267-01 for more detail on removing burner door.
 - b. To gain access to burner and combustion chamber, first remove front jacket panel and then disconnect the gas train assembly at the union connection and the mixer connection.
 - c. Remove the filter box from the mixer.
 - d. Remove all six M10 bolts connecting burner door to the heat exchanger. Requires 8mm hex bit.
 - e. Slide the control box out.
 - f. The burner door, blower, and mixer assembly can be pulled out of the appliance jacket together.
 - g. Gently blow compressed air over the burner surface and door insulation to remove lint and debris. Replace burner if the surface shows any signs of damage due to improper handling or gas valve combustion settings.
 - i. Minor blue, yellow, and brown coloring is normal for burners recently installed.
 - ii. Some white and/or red residue is normal.
 - iii. Burners with any cracks or dents must be replaced immediately. Inspect weld seams and end cap thoroughly.
 - h. Thoroughly clean between the tubes in the combustion chamber. See heat exchanger cleaning instructions included with service kit 112267-01.

NOTICE:

This appliance has a limited warranty, a copy of which is included in shipping. It is the Responsibility of the installing contractor to see that all controls are correctly installed and are operating properly when the installation is complete.

Warranty does not cover damage or malfunction if the steps mentioned in this manual are not performed at the intervals specified.

Water leaks can cause severe corrosion damage immediately repair any leaks found.

⚠ WARNING

Failure to properly secure the burner/blower/gas valve assembly to the heat exchanger could lead to personal injury, death, or substantial property damage.

Read, understand and follow all the instructions and warnings contained in ALL of the component instruction manuals.

Assure that all limits and operating controls and components are operating properly before placing the appliance back in service.

- i. Do not use or alkali products or metallic brush to clean the heat exchanger coils.
- ii. Remove condensate trap to avoid flushing debris through the trap. Drain Appropriately.
- iii. Spray the heat exchanger coils with cleaning vinegar (acetic acid) and then flush it with clean water after 5 minutes. Repeat as necessary.

⚠ CAUTION

Do not spray burner, combustion chamber divider, or burner door insulation.

- iv. Use thin spatula to clear buildup stuck between the tubes.
- v. When reinstalling burner door, tighten M10 burner door screws in a star pattern to 37 ft-lb (50 nm) using 8mm hex bit.

⚠ WARNING

Operating this appliance with a cracked, dented, or otherwise damaged burner may cause flashback or further damage to the pressure vessel. Replace damaged burners immediately.

XIV. Service and Maintenance (continued)

vi. Perform combustion test to restore operation following System Start-up section in the I&O manual.

11. Refer to Service Parts manual included with the appliance for order numbers of replaceable parts. Most recent revisions of manuals and instructions can be found on factory website.

D. Restarting after Prolong Shutdown

After prolonged shutdown, it is recommended that the steps in "System Start-up" and "Service and Maintenance" in this manual be performed.

E. Troubleshooting

1. Refer to the troubleshooting section in the Concert™ Control manual on how to navigate the Limit String Status screen which shows an active safety limit status and for an in-depth guide to all the possible lockouts as well as recommended corrective actions to restore operation.
2. A service tool app that connects via Bluetooth is available to help with troubleshooting. Contact factory for parts and instructions.

WARNING

Asphyxiation hazard.

Use a combustion analyzer to verify proper operation by checking O₂% or CO₂% levels. Refer to I&O manual for acceptable ranges. Failure to use a combustion analyzer could cause operation of boiler with elevated CO levels resulting in severe personal injury, death or substantial property damage.

- Boiler is equipped with a screw cap in vent adapter. Be sure to replace this cap when combustion testing is complete.
- Measure carbon monoxide (CO) level at both high and low firing rate.
- CO should not exceed 200 ppm air free. (In event of high CO, see Troubleshooting section of boiler manual).

APPENDIX A: Tables

| | |
|---|-----------|
| I. Hazard Definitions | 4 |
| II. Read Before Proceeding | 5 |
| III. Product Rating, Specifications, and Dimensional Data | 7 |
| Table 1: Input and Output Ratings | 7 |
| Table 2: General Specifications | 7 |
| Table 3: Appliance Connection Sizes | 7 |
| IV. Unpacking The Shipping Crate | 11 |
| V. Component Identification | 12 |
| VI. Pre-Installation and Mounting | 14 |
| Table 4: Corrosive Combustion Air Contaminants | 15 |
| Table 5: 400-1000 Clearances | 18 |
| VII. Venting | 19 |
| Table 6: Vent and Combustion Air Pipe Diameters and Maximum Lengths | 20 |
| Table 7: Equivalent lengths of Vent and Combustion Air Components | 20 |
| Table 8: Vent and Combustion Air Equivalent Length Calculation Worksheet | 20 |
| Table 9: Listed Vent Manufacturers and Materials | 21 |
| Table 10: Stainless Steel Vent Terminations | 21 |
| Table 11: Polypropylene Vent Terminations | 21 |
| Table 12: Combustion Air and Flue Gas Flow Rates | 21 |
| Table 13: Recommended Venting Configurations and Material Options | 23 |
| Table 14: Direct Vent Terminal Clearances | 25 |
| Table 15: Other than Direct Vent Terminal Clearances | 26 |
| Table 16: Table of Acceptable Terminations | 28 |
| VIII. Condensate Disposal | 37 |
| Table 17: Condensate Neutralizer Kit | 37 |
| IX. Water Piping | 39 |
| Table 18: Outlet Piping Parts | 40 |
| Table B1: Water Quality Requirements | 42 |
| Table B2: Corrosion/Scale Inhibitors and Removal Agents | 43 |
| Table B3: Water Treatment Types | 43 |
| Table B4: Flow Rates for Glycol Systems | 43 |
| Table 19: Temperature rise, flow rate, and head loss | 44 |
| Table B5: Pipe size and Total Head Loss for Boiler Pump Sizing | 44 |
| X. Water Piping Diagrams | 45 |
| Table 20: Required Common Piping Sizes for Multiple Appliances | 48 |
| XI. Gas Piping | 49 |
| Table 21: Maximum capacity of schedule 40 black pipe in CFH* | 50 |
| Table 22: Equivalent Lengths of Standard Pipe Fittings & Valves (ft) | 50 |
| Table 23: Specific Gravity Correction Factors | 51 |
| Table 24: Inlet Gas Pressures, Pipe Size, and Pressure Switch | 51 |
| XII. Electrical | 52 |
| Table 25: Electrical Ratings | 52 |
| XIII. System Start-up | 62 |
| Table 26: Typical Combustion O ₂ /CO ₂ Readings (Sea Level) | 65 |
| Table 28: Throttle Screw Starting Position | 66 |
| Table 29: Gas Conversion Kits | 66 |
| Table 27: Safety Device Test | 66 |
| XIV. Service and Maintenance | 67 |
| Table 30: Water Flow Switch lengths | 68 |

APPENDIX B: Figures

| | |
|---|-----------|
| I. Hazard Definitions | 4 |
| II. Read Before Proceeding | 5 |
| III. Product Rating, Specifications, and Dimensional Data | 7 |
| Figure 1: 400-500 Dimensions | 8 |
| Figure 2: 650-1000 Dimensions | 9 |
| Figure 3: 1250-1500 Dimensions | 10 |
| IV. Unpacking The Shipping Crate | 11 |
| Figure 4: Loosely shipped parts locations | 11 |
| V. Component Identification | 12 |
| Figure 5: Component Identification | 13 |
| VI. Pre-Installation and Mounting | 14 |
| Figure 7: Display Cover and Bracket | 16 |
| Figure 6: Outdoor Conversion Parts | 16 |
| Figure 8: Lifting and Stacked Mounting | 17 |
| Figure 9: Side by Side installation | 18 |
| VII. Venting | 19 |
| Figure 10: Outdoor Venting Installation | 22 |
| Figure 11: Vent Terminal Clearances | 24 |
| Figure 12: Horizontal Sidewall Termination | 29 |
| Figure 14: Flat Roof Vent Terminations | 29 |
| Figure 13: Slopped Roof Termination | 29 |
| Figure 15: Multiple Appliance Direct Vent Termination | 31 |
| Figure 16: Flexible Vent in Masonry Chimney with Separate Combustion Air Intake | 33 |
| VIII. Condensate Disposal | 37 |
| Figure 17: Condensate Drain Assembly | 37 |
| IX. Water Piping | 39 |
| Figure 18: Relief Valve Package Assembly | 40 |
| X. Water Piping Diagrams | 45 |
| Figure 19: Single Boiler, Primary/Secondary Piping | 45 |
| Figure 20: Single Boiler with Indirect Domestic Water Heater | 46 |
| Figure 21: Multiple Boiler, Primary/Secondary with Common Header Piping | 47 |
| Figure 22: Stacked Boilers Hydraulic separator | 48 |
| XI. Gas Piping | 49 |
| Figure 23: Field Installed Gas Connection | 49 |
| Figure 24: High/Low Gas Pressure Switch | 51 |
| XII. Electrical | 52 |
| Figure 25: 120 VAC Connections PCB | 53 |
| Figure 26: 400-1000 Low Voltage Connections PCB | 54 |
| Figure 27: 1250-1500 Low Voltage and Limit Connections PCB | 55 |
| Figure 28: 400-1000 Wire Schematic | 56 |
| Figure 29: 1250-1500 Wire Schematic | 57 |
| Figure 30: 400-1000 Wire Diagram | 58 |
| Figure 31: 1250-1500 Wire Diagram | 60 |
| XIII. System Start-up | 62 |
| Figure 32: Operating Instructions | 63 |
| Figure 33: Gas Valve Adjustment | 64 |
| XIV. Service and Maintenance | 67 |
| Figure 34: Ignition Electrode Assembly | 69 |
| Figure 35: Flame Rod Assembly | 69 |

APPENDIX C: High Altitude Installations Above 2000 ft

A. Percent Derate For Altitudes Above 2000 ft.

1. Use the derate table below for calculating the approximate input rate at the installation altitude.

Derate per 1,000 ft. of Altitude

| Model | Altitude (ft) | 2,001-6,000 | 6,001-8,000 | 8,001-10,100 |
|-------|---------------|-------------|----------------|--------------|
| 400 | NG | 2.5% | No Application | |
| | LP | 2.5% | | |
| 500 | NG | 2.6% | | |
| | LP | 2.6% | | |
| 650 | NG | 0.0% | 2.0% | 2.1% |
| | LP | 0.0% | 2.0% | 2.7% |
| 800 | NG | 2.7% | 3.4% | 3.4% |
| | LP | 3.1% | 3.8% | 3.5% |
| 1000 | NG | 3.8% | 3.4% | 3.4% |
| | LP | 3.4% | 4.1% | 4.1% |
| 1250 | NG | 0.0% | 0.8% | 2.1% |
| | LP | N/A | | |
| 1500 | NG | 3.3% | 4.0% | 5.0% |
| | LP | N/A | | |

Notes:

1. Percentages are per 1000 ft. above sea level.
2. Venting Derate should be applied after the altitude derate.
3. Installations of 400 and 500 models above 6000 ft is not recommended.

B. Adjusting Parameters Using Display

1. Press Adjust, Modulation, then Lock.
2. Type password 86 and enter.
3. Press Unit Model and select Adjust.
4. Use the up and down arrows to scroll between different unit models. Use table below to determine correct unit model suffix for the application's altitude.

| Unit Model Suffix | Altitude (ft) |
|-------------------|---------------|
| -02 | 0-2000 |
| -26 | 2001-6000 |
| -68 | 6001-8000 |
| -80 | 8001-10100 |

⚠ DANGER

These instructions include a procedure for adjusting the air-fuel mixture on this appliance. This procedure requires a combustion analyzer to measure the CO₂ (or Oxygen) and Carbon Monoxide (CO air free) levels in flue gas. Adjusting the air-fuel mixture without a proper combustion analyzer could result in unreliable operation, personal injury, or death due to carbon monoxide poisoning.

⚠ WARNING

Failure to set up the appliance in accordance with these instructions could result in high amount of Carbon Monoxide to be produced which could result in severe personal injury, death, or substantial property damage.

5. Ensure selected model has the correct fuel type. The model name will contain 'N' after the size for natural gas or 'P' for propane. Some models need no fuel specifications.
6. Confirm selection and return to the home screen. Reference the 'Setup and Tuning' section of the Concert™ Control Manual for more detail.

C. Start-up instructions

1. Follow Instructions in the Start-up section of this manual using Air-Fuel ratio ranges in this appendix.

Air-Fuel Adjustment for High Altitude Installations

| Model | Altitude (ft) | High Fire O2% Range | | | Low Fire O2% Range | | | |
|-------|---------------|---------------------|----------------|--------------|--------------------|----------------|--------------|---------|
| | | 2,001-6,000 | 6,001-8,000 | 8,001-10,100 | 2,001-6,000 | 6,001-8,000 | 8,001-10,100 | |
| 400 | NG | 5.0-5.5 | No Application | | 5.0-5.5 | No Application | | |
| | LP | 5.7-6.1 | | | 5.5-6.0 | | | |
| 500 | NG | 5.0-5.5 | | | 5.0-5.5 | | | 5.5-6.0 |
| | LP | 5.7-6.1 | | | 5.8-6.2 | | | 5.9-6.3 |
| 650 | NG | 5.0-5.5 | 5.0-5.5 | 5.9-6.3 | 5.0-5.5 | 5.0-5.5 | 5.5-6.0 | |
| | LP | 5.8-6.1 | 5.8-6.2 | 5.8-6.1 | 5.7-6.1 | 5.5-6.0 | 5.5-6.0 | |
| 800 | NG | 5.2-5.7 | 5.2-5.7 | 5.2-5.7 | 5.0-5.5 | 5.0-5.5 | 5.0-5.5 | |
| | LP | 5.7-6.1 | 5.6-6.0 | 5.8-6.2 | 5.7-6.1 | 5.5-6.0 | 5.5-6.0 | |
| 1000 | NG | 6.2-6.7 | 6.2-6.7 | 6.0-6.5 | 5.0-5.5 | 5.0-5.5 | 5.0-5.5 | |
| | LP | N/A | | | N/A | | | |
| 1250 | NG | 6.2-6.7 | 6.2-6.7 | 6.0-6.5 | 5.0-5.5 | 5.0-5.5 | 5.0-5.5 | |
| | LP | N/A | | | N/A | | | |
| 1500 | NG | 6.2-6.7 | 6.2-6.7 | 6.0-6.5 | 5.0-5.5 | 5.0-5.5 | 5.0-5.5 | |
| | LP | N/A | | | N/A | | | |

APPENDIX D: Default Light-off and Modulation Rates

| Parameter | Model | | | | | | | | |
|--|-------|------|--------|--------|--------|--------|------|------|------|
| | 400 | 500 | 650 NG | 650 LP | 800 NG | 800 LP | 1000 | 1250 | 1500 |
| Max Power MBH | 399 | 500 | 650 | 650 | 800 | 800 | 999 | 1250 | 1500 |
| CH/DHW Max. Modulation Rate (RPM) ¹ | 8000 | 7800 | 5550 | 5700 | 6400 | 6400 | 6800 | 6100 | 7425 |
| Minimum Modulation Rate (RPM) | 1400 | 1300 | 1050 | 1100 | 1200 | 1200 | 1300 | 1100 | 1275 |
| Light-off (RPM) ¹ | 3400 | 2200 | 2400 | 2000 | 2400 | 1900 | 2400 | 3600 | 3600 |
| Maximum Light-off (RPM) | 3600 | 3600 | 2600 | 2600 | 2600 | 2600 | 2600 | 4000 | 4000 |
| Minimum Light-off (RPM) | 3000 | 1900 | 1700 | 1700 | 1700 | 1700 | 2200 | 3400 | 3400 |

High Altitude Modulation Rates


| Model | Altitude (ft) | Max. Modulation Rate (RPM) | | | Min. Modulation Rate (RPM) | | | | | | | |
|-------|---------------|----------------------------|----------------|--------------|----------------------------|----------------|--------------|------|------|------|------|------|
| | | 2,001-6,000 | 6,001-8,000 | 8,001-10,100 | 2,001-6,000 | 6,001-8,000 | 8,001-10,100 | | | | | |
| 400 | NG | 8250 | No Application | | 1700 | No Application | | | | | | |
| | LP | | | | | | | 1600 | | | | |
| 500 | NG | | | | 8500 | | | | 6400 | 6400 | 1350 | 1400 |
| | LP | | | | | | | 8400 | | | | |
| 650 | NG | 6800 | 6300 | 6300 | 1550 | 1450 | 1600 | | | | | |
| | LP | | | | | | | 6700 | 5100 | 6000 | 1550 | |
| 800 | NG | 6700 | 6500 | 6500 | 1550 | 1550 | 1700 | | | | | |
| | LP | | | | | | | 8000 | 8200 | 8400 | 1325 | 1350 |
| 1000 | NG | N/A | | | N/A | | | | | | | |
| | LP | N/A | | | N/A | | | | | | | |
| 1250 | NG | 8000 | 8200 | 8400 | 1500 | 1600 | 1750 | | | | | |
| | LP | N/A | | | N/A | | | | | | | |
| 1500 | NG | 8000 | 8200 | 8400 | 1500 | 1600 | 1750 | | | | | |
| | LP | N/A | | | N/A | | | | | | | |

APPENDIX E: Gas Valve and Pressure Switch Tubing Schematics

| ITEM | PART NO. | DESCRIPTION |
|------|-----------|--|
| 1 | 111010-01 | TUBE FITTING, BULKHEAD, $\frac{1}{4}$ "NPT \times $\frac{3}{16}$ "TUBE |
| 2 | 108452-01 | $\frac{1}{8}$ "NPT X BARB FITTING, BRASS |
| 3 | 102490-01 | $\frac{5}{32}$ " BARB TEE |
| 4 | 9016007 | $\frac{3}{16}$ " SILICONE TUBING |


500 Models

Remove Compression nut, slip tubing item 4 over brass threads

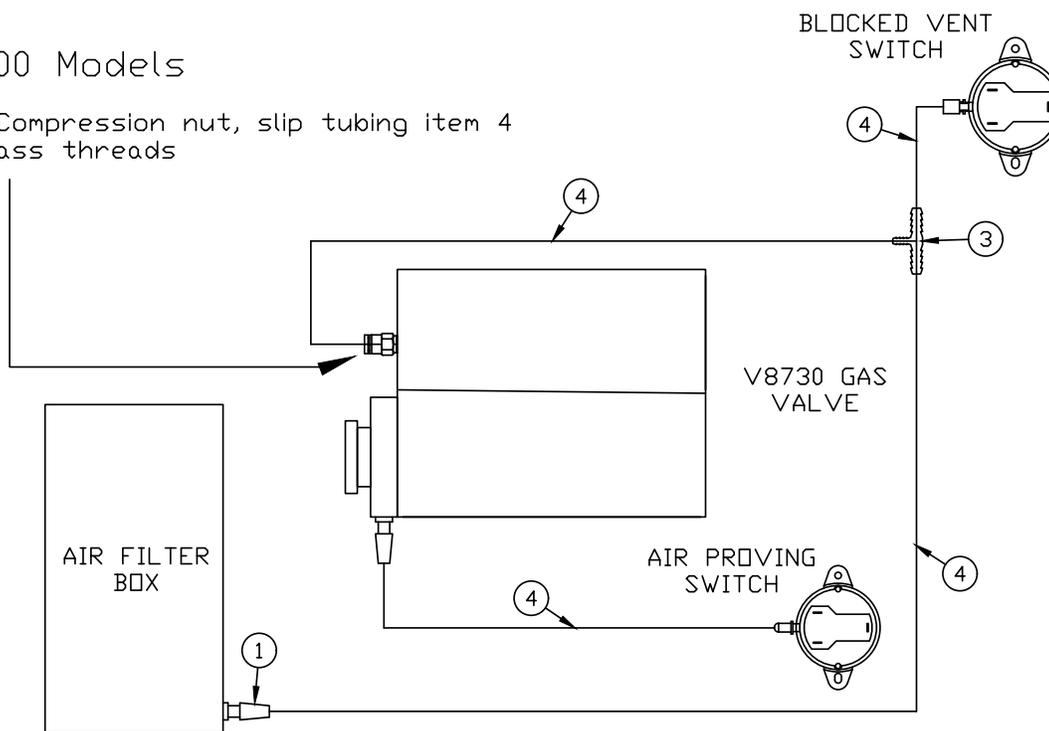

650-1500 Models

Remove Compression nut, slip tubing item 4 over brass threads

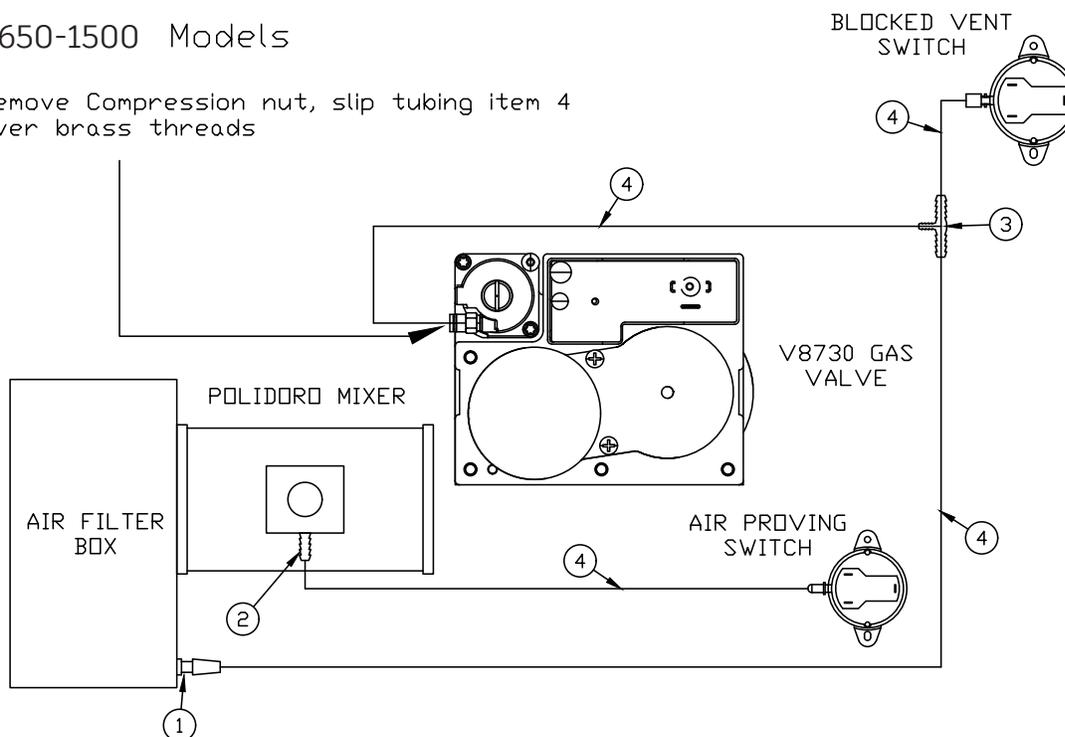

LIMITED WARRANTY FOR BFIT COMMERCIAL CONDENSING BOILERS

Stainless Steel Heat Exchangers and Parts/Accessories

Subject to the terms and conditions set forth below, Bryan Steam, Lancaster, Pennsylvania hereby extends the following limited warranties to the original owner of a commercial grade water boiler or Bryan Steam supplied parts and/or accessories manufactured and shipped on or after June 1, 2019:

One Year Limited Warranty On Commercial Boilers and Parts / Accessories Supplied by Bryan Steam

Bryan Steam warrants to the original owner that its commercial grade stainless steel water boilers and parts/accessories comply at the time of manufacture with recognized hydronic industry standards and requirements then in effect and will be free of defects in material and workmanship under normal usage for a period of one year from the date shipment. If any part of a commercial grade boiler or any part or accessory provided by Bryan Steam is found to be defective in material or workmanship during this one year period, Bryan Steam will, at its option, repair or replace the defective part (not including labor).

Ten Year Heat Exchanger Warranty

Bryan Steam warrants to the original owner that the heat exchanger of its commercial grade stainless steel boilers will remain free from defects in material, workmanship and thermal shock under normal usage per the product's installation and operation manual for the time period specified in the chart below to the original owner at the original place of installation. If a claim is made under this warranty during the "No Charge" period from the date of shipment, Bryan Steam will, at its option, repair or replace the heat exchanger (not including labor). If a claim is made under this warranty after the expiration of the "No Charge" period from the date of shipment, Bryan Steam will, at its option and upon payment of the pro-rated service charge set forth below, repair or replace the heat exchanger. The service charge applicable to a heat exchanger warranty claim is based upon the number of years the heat exchanger has been in service and will be determined as a percentage of the retail price of the heat exchanger model involved at the time the warranty claim is made as follows:

NOTE: If the heat exchanger involved is no longer available due to product obsolescence or redesign, the value used to establish the retail price will be the published price as set forth in Bryan Steam Repair Parts Pricing where the heat exchanger last appeared or the current retail price of the then nearest equivalent heat exchanger, whichever is greater.

Ten Year Pressure Vessel Shell Warranty

Bryan Steam warrants to the original owner that the pressure vessel shell assembly of its commercial grade stainless steel boilers will remain free from defects in material and workmanship under normal usage for the time period specified in the chart below to the original owner at the original place of installation. If a claim is made under this warranty during the "No Charge" period from the date of shipment, Bryan Steam will, at its option, repair or replace the pressure vessel (not including labor). If a claim is made under this warranty after the expiration of the "No Charge" period from the date of shipment, Bryan Steam will, at its option, repair or replace the pressure vessel.

NOTE: If the pressure vessel involved is no longer available due to product obsolescence or redesign, the value used to establish the retail price will be the published price as set forth in Bryan Steam Repair Parts Pricing where the heat exchanger last appeared or the current retail price of the then nearest equivalent heat exchanger, whichever is greater.

| Service Charge as a % of Retail Price | | | | | | | | | | |
|---------------------------------------|-----------|---|---|---|---|----|----|----|----|-----|
| Years of Service | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 |
| Heat Exchanger | NO CHARGE | | | | | 20 | 40 | 60 | 80 | 100 |
| Pressure Vessel Shell | NO CHARGE | | | | | | | | | |

ADDITIONAL TERMS AND CONDITIONS

1. Applicability: The limited warranties set forth above are extended only to the original owner at the original place of installation within the United States and Canada. These warranties are applicable only to boilers, parts, or accessories designated as commercial grade by Bryan Steam and installed and used exclusively for purposes of commercial space heating or domestic hot water generation through a heat exchanger (or a combination for such purposes) and do not apply to residential grade products or industrial uses.
2. Components Manufactured by Others: Upon expiration of the one year limited warranty on commercial grade boilers, all boiler components other than heat exchangers manufactured by others but furnished by Bryan Steam (such as circulator and controls) will be subject only to the manufacturer's warranty, if any.
3. Proper Installation: The warranties extended by Bryan Steam are conditioned upon the installation of the commercial grade boiler, parts, and accessories in strict compliance with Bryan Steam installation instructions. Bryan Steam specifically disclaims liability of any kind caused by or relating to improper installation.
4. Proper Use and Maintenance: The warranties extended by Bryan Steam conditioned upon the use of the commercial grade boiler, parts, and accessories for its intended purposes and its maintenance accordance with Bryan Steam recommendations and hydronics industry standards. For proper installation, use and maintenance, see all applicable sections of the Installation and Operating, and Service Instructions Manual furnished with the unit.
5. This warranty does not cover the following:
 - a. Expenses for removal or re-installation. The owner will be responsible for the cost of removing and reinstalling the alleged defective part or its replacement and all labor and material connected therewith.
 - a. Expenses for shipping and handling. The owner will be responsible for the cost of transportation and handling to and from Bryan Steam. Alleged defective part must be returned to factory for warranty determination unless authorized in writing otherwise.
 - b. Components that are part of the heating system but were not furnished by Bryan Steam as part of the commercial boiler.
 - c. Improper burner set-up or adjustment, control settings, care or maintenance.
 - d. This warranty cannot be considered as a guarantee of workmanship of an installer connected with the installation of the Bryan Steam boiler, or as imposing on Bryan Steam liability of any nature for unsatisfactory performance as a result of faulty workmanship in the installation, which liability is expressly disclaimed.
 - e. Boilers, parts, or accessories installed outside the 48 contiguous United States, the State of Alaska and Canada.
 - f. Damage to the boiler and/or property due to installation or operation of the boiler that is not in accordance with the boiler installation and operating instruction manual.
 - i. Any damage or failure of the boiler resulting from hard water, scale buildup or corrosion the heat exchanger. Any damage caused by improper fuels, fuel additives or contaminated combustion air that may cause fireside corrosion and/or c logging of the burner or heat exchanger.
 - j. Any damage resulting from combustion air contaminated with particulate which cause clogging of the burner or combustion chamber including but not limited to sheetrock or plasterboard particles, dirt, and dust particulate. Any damage, defects or malfunctions resulting from improper operation, maintenance, misuse, abuse, accident, negligence including but not limited to operation with insufficient water flow, improper water level, improper water chemistry, or damage from freezing.
 - k. Any damage caused by water side clogging due to dirty systems, corrosion products from the system, or improperly maintained water conditions.

CONDENSING BOILER START-UP FORM

(REFER TO THE PRODUCT MANUAL FOR QUESTIONS REGARDING THE INSTALLATION AND OPERATION OF THIS PRODUCT)

| | |
|----------------------------------|-----------------|
| JOB NAME: _____ | MODEL #: _____ |
| ADDRESS: _____ | SERIAL #: _____ |
| CITY: _____ ST: _____ ZIP: _____ | DATE: _____ |

GAS SUPPLY: Natural Gas Static Pressure (Unit Off): _____ "wc Gas Pipe Diameter: _____ " (inches)
 LP Gas Dynamic Pressure (100% Fire): _____ "wc

Is there an inlet gas lockup regulator on the supply? Yes No
 If **Yes**, is it ten feet upstream from the appliance? Yes No, explain: _____

| | |
|--------------------------------------|-----------------------------|
| COMBUSTION: <u>High Fire:</u> | <u>Low Fire:</u> |
| O ₂ : _____ % | O ₂ : _____ % |
| CO ₂ : _____ % | CO ₂ : _____ % |
| CO: _____ ppm | CO: _____ ppm |
| Excess Air: _____ % | Excess Air: _____ % |
| Stack Temperature: _____ °F | Stack Temperature: _____ °F |

WATER: Supply Temperature: _____ °F Return Temperature: _____ °F Delta T _____ °F

ELECTRICAL: Supply Voltage: _____ Total Amp Draw: _____

| | |
|--|------------------------|
| VENTING & AIR INTAKE: <i>Refer to O&M Manual</i> | <u>Combustion Air:</u> |
| <u>Vent:</u> | <u>Material:</u> _____ |
| Material: _____ | Material: _____ |
| Diameter: _____ " | Diameter: _____ " |

| | Qty | ft / ea | Sub-Total | | Qty | ft / ea | Sub-Total |
|-------------------------------|------------|------------|-----------|-------------------------------|------------|------------|-----------|
| 90° SR Elbow: | _____ | _____ | _____ ft | 90° SR Elbow: | _____ | _____ | _____ ft |
| 90° LS Elbow: | _____ | _____ | _____ ft | 90° LS Elbow: | _____ | _____ | _____ ft |
| 45° Elbow: | _____ | _____ | _____ ft | 45° Elbow: | _____ | _____ | _____ ft |
| Horizontal Straight: | _____ Lgth | 1 ft / 1ft | _____ ft | Horizontal Straight: | _____ Lgth | 1 ft / 1ft | _____ ft |
| Vertical Straight: | _____ Lgth | 1 ft / 1ft | _____ ft | Vertical Straight: | _____ Lgth | 1 ft / 1ft | _____ ft |
| Total Equiv. Length: _____ ft | | | | Total Equiv. Length: _____ ft | | | |

* SR - Short Radius / LS - Long Sweep/Sanitary Elbow

Notes (Refer to O&M Manual):

1. Make sure total equiv. length does not exceed max equiv. length shown in Manual.
2. Vent and combustion air terminals do not count towards total equivalent length.
3. Pressure drop for flexible polypropylene liner is 20% greater than for rigid pipe. Multiply measured flexible polypropylene line length by 1.2 to obtain equivalent length.
4. Max equivalent length of flexible polypropylene liner is 48 ft.
5. All elbows referenced are short radius.

Vent / Air Termination:

Vertical Vent w/ Room Air Vertical Direct Vent
 Horizontal Vent w/ Room Air Horizontal Direct Vent
 Vertical Vent w/ Sidewall Air

CLEARANCES: Front: _____ Left Side: _____ Top: _____
Refer to O&M Manual Rear: _____ Right Side: _____

NOTES / COMMENTS: _____

| | |
|----------------------------------|----------------------------------|
| START-UP PERFORMED BY: | START-UP APPROVED BY: |
| COMPANY: _____ | COMPANY: _____ |
| ADDRESS: _____ | ADDRESS: _____ |
| CITY: _____ ST: _____ ZIP: _____ | CITY: _____ ST: _____ ZIP: _____ |
| NAME: _____ PHONE: _____ | NAME: _____ PHONE: _____ |



Bryan Steam

Peru, IN 46970

Phone: 765-473-6651

Inquiry@bryansteam.com

www.bryanboilers.com