## **LED Exterior Wall Sconce**



## START FROM HERE


- Make sure POWER is COMPLETELY OFF at the fuse box
- Have your fixture installed by a qualified licensed electrician
- Prepare everything in a clear area
- Wear gloves at all time during this installation
- Read instructions carefully before you start assembly
- Keep this installation sheet for future reference


Technical Support: 1-855-855-8926

- 1. Remove fixture from its original package
- 2. Separate mounting plate (1c) from fixture (2a) by removing fixture screws (2b)
- Attach mounting plate (1c) to electrical junction box (1a) using junction box screws provided (1e) in hardware package
- **4.** Secure mounting plate (1c) to mounting surface with anchors (1f) and screws (1g)
- Make proper electrical connections (black to hot "L", white to neutral "N", ground to "GND") with wire nuts (1b) provided in hardware package
- **6.** Attach fixture (2a) to mounting plate (1c) with fixture screws (2b)

## Please Note:

- This Kuzco LED fixture comes with pre-wired LED module(s)
- Unless instructed, Do Not touch any part of the LED module(s) as any unnecessary contact with the module could cause permanent damage
- For dimming, an ELV (Electronic Low Voltage) type of dimmer is required
- 120V input
- 7. To prevent moisture from entering the electrical junction box (1a) and causing a short, seal around the top and side perimeter between the fixture and the wall surface with weather resistant caulking (See Illustration 1). The space at the bottom should be left un-caulked to prevent moisture build up

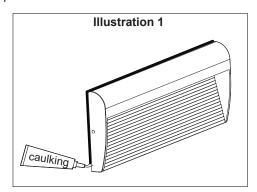

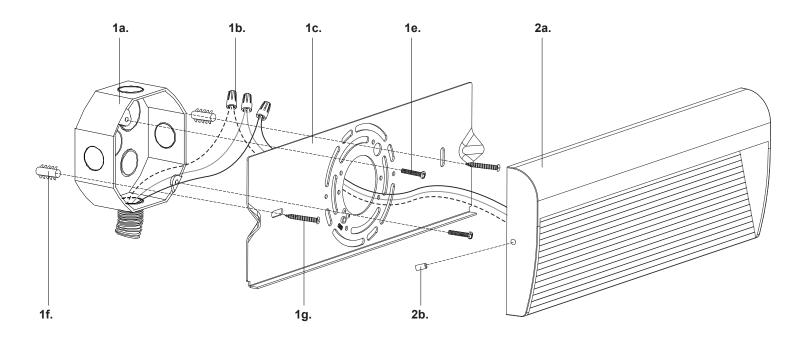

## KUZCO

19054 28th Avenue Surrey, BC Canada V3Z 6M3 T: 604 538 7162 TF: 1-855 85 KUZCO F: 604 538 7196 W: kuzcolighting.com 20240809