


MONAHAN RECHARGEABLE LANTERN

RECHARGING - USB-C

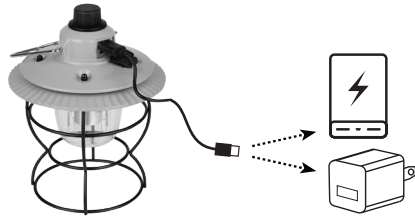

PORTABLE CHARGER AND
WALL ADAPTER NOT INCLUDED.

A USB-A to USB-C charging cable is included with your lantern. This allows the lantern to be charged from a portable charger, wall outlet adapter, or USB port. Plug cable into USB-C slot to charge. Ensure port is covered when not in use to maintain water resistance. The USB-C port is INPUT ONLY and cannot charge external devices.

CHARGING OUTPUT - USB-A



Plug any standard USB-A cable into the USB-A port to charge cell phones and other small accessories. The USB-A port is OUTPUT ONLY and cannot be used to charge the lantern. Charge capacity varies based on charge of lantern. Do not charge external accessories while recharging lantern. Running lantern and USB charging simultaneously may cause light to flicker.

OPERATION



To turn lantern ON, rotate knob on top of lantern until a click sound can be heard and the Warm Light mode turns on.

NOTE: If you hear a click sound but the light does not turn on, your lantern may need to be charged.

Continue to rotate the knob clockwise to adjust brightness and cycle through lighting modes: Warm Light, White Light, Combo.



To turn lantern OFF, rotate knob counter-clockwise until you hear a click sound.

NOTE: Always turn lantern off when not in use and when battery is depleted.



Check the charge of the lantern by looking at the 4 blue LED indicator lights.

Four lights ON indicates full charge. One light ON indicates low charge.

WARNING

Intense light, do not stare directly into light

FCC STATEMENT OF COMPLIANCE

NOTE

WARNING: Changes or modifications not approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to a radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

FCC Compliance Statement (for products subject to Part 15)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION



When the battery is fully discharged, it will take up to 7 hours to fully recharge it, depending on power source. To obtain maximum performance, charge for 7 hours for the first three cycles. Always charge the battery immediately after use whenever possible.

Do not leave the lantern turned on after the battery has stopped, as overdischarging the battery can cause problems in recharging the battery to a full charge. If this does occur, immediately switch the lantern off and recharge for 40 hours. After an extended period of storage (more than 6 months), recharge for the full 7 hours or more.

Please dispose of lantern according to local regulations.

NOTE: Battery is not replaceable.

DISCLAIMER

Cascade Mountain Tech shall not be liable for any damages arising out of or as a result of the use of this product for any purpose other than that for which it is clearly intended. By using this product, you acknowledge and accept the safety instructions and disclaimer provided.

LIMITATION OF LIABILITY & IMPLIED WARRANTIES

By purchasing or using this product, you agree that the sole remedy for damages resulting from the use of this product is the replacement of the item. Cascade Mountain Tech will replace the item within 1 year of the date purchased if the product is returned to the address, postage prepaid, along with the proof of purchase. In no event shall the seller be liable for the incidental or consequential damages. The warranties for merchantability and fitness for a particular use are limited to the use of this product as a lantern. There are no warranties which extend beyond the description of the face hereof.



MONAHAN RECHARGEABLE LANTERN



Cascade Mountain Technologies LLC
www.cascademountaintech.com

For Parts and Customer Service:
customercare@cascademountaintech.com

MADE IN CHINA

INSTRUCTIONS

IMPORTANT, retain for future reference: Read carefully.