



POP UP LANTERN & FLASHLIGHT

READ CAREFULLY, RETAIN FOR FUTURE REFERENCE.

Keep instructions with product.

See reverse for important product safety information.

SETUP

3 x AA batteries



1. To open battery compartment: Unscrew cap in counter-clockwise direction as indicated and separate.



2. Insert batteries into the battery compartment. Insert with correct polarity (+ and -) as shown in the battery compartment.



3. To close battery compartment: Line up slots on cap with receivers on inside of battery compartment. Push down and screw in clockwise direction as indicated.

OPERATION



Lantern: Slide open housing. Lantern will automatically turn on. Close housing to turn off.



Flashlight: Push button to turn on. Push button a second time to turn off.

CONVERTIBLE HANDLE



Convertible handle allows the Pop Up Lantern & Flashlight to be held vertically or horizontally.



Pinch handle connector to release from connection points. Lift over top of lantern, pinch connector again to insert into connection points.

FCC STATEMENT OF COMPLIANCE

WARNING: Changes or modifications not approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to a radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

Supplier's Declaration of Conformity

Unique Identifier: LTG-LRG-1KR

Responsible Party - U.S. Contact Information

Cascade Mountain Technologies, LLC
8304 Bracken PI SE, Suite 100
Snoqualmie, WA 98065
customer@casademountaintech.com

FCC Compliance Statement (for products subject to Part 15)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION



Always purchase the correct size and grade of battery most suitable for the intended use. Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types. Clean the battery contacts and also those of the device prior to battery installation. Ensure the batteries are installed correctly with regard to polarity (+ and -). Remove used batteries promptly. Remove batteries from appliances that will not be used for long periods of time (months or longer). Keep contacts clean, both on the

battery and in the appliance. Please dispose of batteries according to local regulations.

Compatible with alkaline batteries and rechargeable batteries.

WARNING: Intense light, do not stare directly into light.

CAUTION

Keep batteries away from children



CAUTION: Keep batteries away from children. Do not swallow. If swallowed, consult a physician at once. For more information on treatment, call (800) 498-8666 collect. **Ingestion may lead to serious injury or death.** Battery can explode or leak if heated, disassembled, shorted, recharged, exposed to fire or high temperature or inserted incorrectly. Keep in original package until ready to use. Do not carry batteries loose in your pocket or purse.

WARRANTY

Cascade Mountain Tech offers a 1 year limited manufacturer's warranty. This warranty is extended only to the original retail buyer and warrants that our products are free from defects in material and workmanship. We do not warranty for misuse or unintended purposes.

For a quick response, please provide the following information to **customer@casademountaintech.com:**

- 1) Proof of Purchase;
- 2) Images of your product relating to warranty claim;
- 3) Shipping address (US and Canada Only);
- 4) Description of how you were using the product at the time the issue occurred

English Only

MADE IN CHINA