INSTALLATION INSTRUCTIONS

Downflow, Direct Vent (Sealed Combustion) Forced Air Gas Furnaces

Note: These instructions are to be followed along with the proper removal/installation of a compatible coil. Consult the coil installation instructions for more details.

A WARNING / AVERTISSEMENT

FIRE OR EXPLOSION HAZARD

- Failure to follow safety warnings exactly could result in serious injury, death or property damage.
- Installation and service must be performed by a qualified installer, service agency or the gas supplier.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

RISQUE D'INCENDIE OU D'EXPLOSION

- Le non-respect des avertissements de sécurité pourrait entraîner des blessures graves ou des dommages matériels importants.
- L'installation et l'entretien doivent être effectués par un installateur qualifié, un organisme de service ou le fournisseur de gaz.
- N'entreposez pas ni n'utilisez de l'essence ni d'autres vapeurs ou liquides inflammables dans le voisinage de cet appareil, ni de tout autre appareil.

WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Leave the building immediately.
- Immediately call your gas supplier from a neighbors phone. Follow the gas suppliers instructions.
- If you cannot reach your gas supplier, call the fire department.

QUE FAIRE S'IL Y A UNE ODEUR DE GAZ

- N'essayez d'allumer aucun appareil.
- Ne touchez à aucun interrupteur électrique; n'utilisez aucun téléphone dans le bâtiment.
- Évacuez l'immeuble immédiatement.
- Appelez immédiatement le fournisseur de gaz en employant le téléphone d'un voisin. Respectez les instructions du fournisseur de gaz.

DO NOT DESTROY. PLEASE READ CAREFULLY & KEEP IN A SAFE PLACE FOR FUTURE REFERENCE.



MG2R "A" CABINET

ATTENTION INSTALLERS:

It is your responsibility to know this product better than your customer. This includes being able to install the product according to strict safety guidelines and instructing the customer on how to operate and maintain the equipment for the life of the product. Safety should always be the deciding factor when installing this product and using common sense plays an important role as well. Pay attention to all safety warnings and any other special notes highlighted in the manual. Improper installation of the Appliance or failure to follow safety warnings could result in serious injury, death, or property damage.

These instructions are primarily intended to assist qualified individuals experienced in the proper installation of this appliance. Some local codes require licensed installation/service personnel for this type of equipment. Please read all instructions carefully before starting the installation. Return these instructions to the customer's package for future reference.

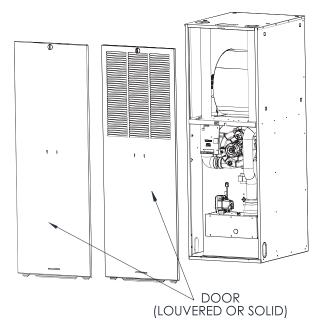


Figure 1. MG2R "A" Cabinet Part List

To make MG2R models built before August 2024 compatible with A2L refrigerant and to be able to use a C85 R454B indoor coil with them, this retrofit kit is provided. Before installing a C85 A2L indoor coil please read the C85 installation instructions carefully.

Please check with NGH service team to ensure the coil box you are using is the right box for C85 A2L indoor coils. If you are using an old coil box, you need to replace it with the new A2L compatible design.

In this kit you have the following parts (Figure 1):

- 1. Door (Louvered or Solid)
- 2. Retrofitted Label

Follow these steps to make the furnace A2L compatible:

- 1. Disconnect all power to the unit.
- 2. Remove the door.

Install New Upper Door (see Figure 7)

- 1. Install the new upper door (solid or louvered).
- 2. Verify that the upper door installed has the vent at the bottom of the door.

Apply Retrofitted Label

- 1. Verify all modifications are complete.
- 2. Apply "retrofitted label" 1049101 to the outside of the door.

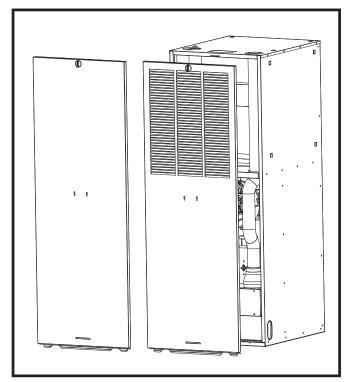


Figure 2. Upper Door

NOTE: After all modifications are complete and verified, reconnect power.

