

**CROSS REFERENCE
REVOLV**

**SINGLE PACKAGED AIR CONDITIONER
RP7RE 018-060 / RP94RD 018-060**

WARREN MODEL NO.	OEM MODEL NO.	NOMINAL KW	VOLTAGE/ PHASE	BREAKER(S) INCLUDED	FITS
W3P0502*	H3HK-005H-01C	5	240/1	NONE	RP7RE 018-060/ RP94RD 018-060
W3P0802*	H3HK-008H-01C	8	240/1	NONE	RP7RE 018-060/ RP94RD 018-060
W3P1002*	H3HK-010H-01C	10	240/1	NONE	RP7RE 018-060/ RP94RD 018-060
W3P1502*	H3HK-015H-01C	15	240/1	NONE	RP7RE 018-060/ RP94RD 018-060
W3P2002*	H3HK-020H-01C	20	240/1	NONE	RP7RE 042-060/ RP94RD 042-060
W3P0502B	N/A	5	240/1	(2)	RP7RE 018-060/ RP94RD 018-060
W3P0802B	N/A	8	240/1	(2)	RP7RE 018-060/ RP94RD 018-060
W3P1002B	N/A	10	240/1	(2)	RP7RE 018-060/ RP94RD 018-060
W3P1502B	H3HK-015H-21C	15	240/1	(2)	RP7RE 018-060/ RP94RD 018-060
W3P1502S	N/A	15	240/1	(2) W/JUMPER BAR	RP7RE 018-060/ RP94RD 018-060
W3P2002B	H3HK-020H-21C	20	240/1	(2)	RP7RE 042-060/ RP94RD 042-060
W3P2002S	N/A	20	240/1	(2) W/ JUMPER BAR	RP7RE 042-060/ RP94RD 042-060

**SINGLE PACKAGED HEAT PUMP
RQ7RE 024-060 / RQ94RD 024-060**

WARREN MODEL NO.	OEM MODEL NO.	NOMINAL KW	VOLTAGE/ PHASE	BREAKER(S) INCLUDED	FITS
W3P0502*	H3HK-005H-01C	5	240/1	NONE	RQ7RE 024-060/ RQ94RD 024-060
W3P0802*	H3HK-008H-01C	8	240/1	NONE	RQ7RE 024-060/ RQ94RD 024-060
W3P1002*	H3HK-010H-01C	10	240/1	NONE	RQ7RE 024-060/ RQ94RD 024-060
W3P1502*	H3HK-015H-01C	15	240/1	NONE	RQ7RE 030-060/ RQ94RD 024-060
W3P2002*	H3HK-020H-01C	20	240/1	NONE	RQ7RE 042-060/ RQ94RD 042-060
W3P0502B	N/A	5	240/1	(2)	RP7RE 018-060/ RP94RD 018-060
W3P0802B	N/A	8	240/1	(2)	RP7RE 018-060/ RP94RD 018-060
W3P1002B	N/A	10	240/1	(2)	RP7RE 018-060/ RP94RD 018-060
W3P1502B	H3HK-015H-21C	15	240/1	(2)	RQ7RE 030-060/ RQ94RD 030-060
W3P1502S	N/A	15	240/1	(2) W/JUMPER BAR	RQ7RE 030-060/ RQ94RD 030-060
W3P1502H	N/A	15	240/1	(3)	RQ7RE 030-060/ RQ94RD 030-060
W3P2002B	H3HK-020H-21C	20	240/1	(2)	RP7RE 042-060/ RP94RD 042-060
W3P2002S*	N/A	20	240/1	(2) W/ JUMPER BAR	RQ7RE 042-060/ RQ94RD 042-060
W3P2002H	N/A	20	240/1	(3)	RQ7RE 042-060/ RQ94RD 042-060

**Note: Circuit breakers installed in the unit are for short-circuit protection and to function as a unit disconnect.
Overcurrent protection must be provided at the branch circuit.**

***= Installation may require breakers and are NOT included with the heater.**

B = Circuit Breakers (heater only on single package air conditioner)

S = Single Point Breaker Connection

H = Heat Pump Version

WARREN TECHNOLOGY

2050 W 73 ST *PO BOX 5347* HIALEAH, FL 33016-9912*TEL. 305-556-6933* FAX 305-557-6157

WEBSITE: www.warrenhvac.com

W3Px-10262023