M825 ChessVolt

User Manual

Charging ChessVolt:

If necessary, disconnect ChessVolt from the chess computer. Connect ChessVolt with the M820 adapter. ChessVolt will now automatically charge.

While the charging process is taking place, ChessVolt is unable to also operate a chess computer.

Ending charging:

Once the LEDs show that ChessVolt is charged, disconnect ChessVolt from the M820 adapter.

Using ChessVolt:

Once ChessVolt has been charged, connect it to one of the following chess computers to operate the chess computer:

M820, M822, M823, M824, M830.

ChessVolt switches on automatically if it recognises the connection.

ChessVolt switches off automatically when it no longer has sufficient charge to power the chess computer.

When ChessVolt is switched off, you can switch it on by pressing the power button once.

When ChessVolt is switched on, you can switch it off by pressing the power button twice.

M825 ChessVolt

LEDs during charging:

	LED1	LED2	LED3	LED4
Full	On	On	On	On
75%	On	On	On	Flashes
50%-75%	On	On	Flashes	Off
25%-50%	On	Flashes	Off	Off
< 25%	Flashes	Off	Off	Off

LEDs while playing with the chess computer:

	LED1	LED2	LED3	LED4
75%	On	On	On	On
50%-75%	On	On	On	Off
25%-50%	On	On	Off	Off
3%-25%	On	Off	Off	Off
< 3%	Flashes	Off	Off	Off

Technical data:

 $3.7\ V\ 12.000\ mAH\ rechargable\ battery$

Input: 9V 1A Output: 9V 0.6A

M825 ChessVolt

Safety instructions:

To be operated in a dry indoor place. Do not open. Do not cover. Do not short-circuit. Check regularly for damage. Stop using if damaged. Do not subject to extreme conditions such as heat (direct sunlight) or moisture. If neccessary, observe the safety instructions of the chess computer which you are operating with the M825. Do not dispose of this product with domestic waste; contact your local authority regarding disposal options.

Imported by
Millennium 2000 GmbH
Heisenbergbogen 1
85609 Aschheim, Germany
www.computerchess.com

If you have any questions, please contact the dealer from which you obtained the product.