

Honda

Accord 2004-2006

Non-Navigation Radios


CD Changer Operation

(Actual radio appearance may differ from representation.)

Press the CD/AUX or AUX button to enter the Bluetooth source.

Press seek down to end a call.
Press seek down to reject an incoming call.
Press seek down to return to the previous track while streaming audio.

Press seek up to answer a call.
Press seek up to advance to the next track while streaming audio.
Press seek up to enter privacy mode while in a phone call.

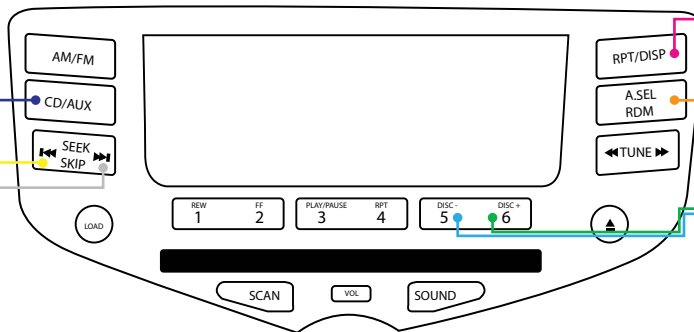

Press Repeat to access the output gain adjustment.
Press Repeat 5 times to initiate pairing mode.

Press Random to connect with the next paired device.
Press Random 5 times to clear all devices.

Press Disc + to initiate the Play/Pause command while streaming audio.

Press Disc - to initiate Voice Recognition.

Example:

Adjusting the output gain

1) Press the Repeat button to access the output gain adjustment.

The track number will change to the current gain level. The level can be adjusted from 1 - 9 with 1 being the lowest level and 9 being the highest.

2) Within 7 seconds press Disc - to lower the gain and Disc + to raise the gain.

The track number on the radios display will change accordingly.

3) 7 seconds after the last button press the level will be stored and the track number will change to the number of the current track.