

Honda

Accord 2008-2011 Non-Navigation Radios CD Changer Operation


Press the CD/AUX or AUX button to enter the Bluetooth source.

Press Scan 5 times to initiate pairing mode.
Press Scan 10 times to clear all devices.

Press Category/Folder down to initiate Voice Recognition.

Press Category/Folder up to initiate the Play/Pause command while streaming audio.

(Actual radio appearance may differ from representation.)

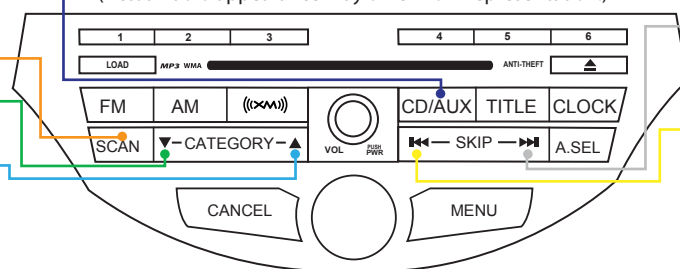

Press skip up to advance to the next track while streaming audio.
Press skip up to answer a call.
Press skip up to enter privacy mode while in a phone call.

Press skip down to return to the previous track while streaming audio.
Press skip down to reject an incoming call.
Press skip down to end a call.

Example:

Adjusting the output gain

1) Press the Repeat button to access the output gain adjustment.

The track number will change to the current gain level. The level can be adjusted from 1 - 9 with 1 being the lowest level and 9 being the highest.



2) Within 7 seconds press Disc - to lower the gain and Disc + to raise the gain.

The track number on the radios display will change accordingly.



3) 7 seconds after the last button press the level will be stored and the track number will change to the number of the current track.