



RPK4-FD2201

Now Including Button Trim Options!




For Trucks With 2 Separate Buttons



For Trucks With 3 Separate Buttons



The following information replaces Step 2 of the assembly section on Page 5 of the RPK4-FD2201 installation instructions.

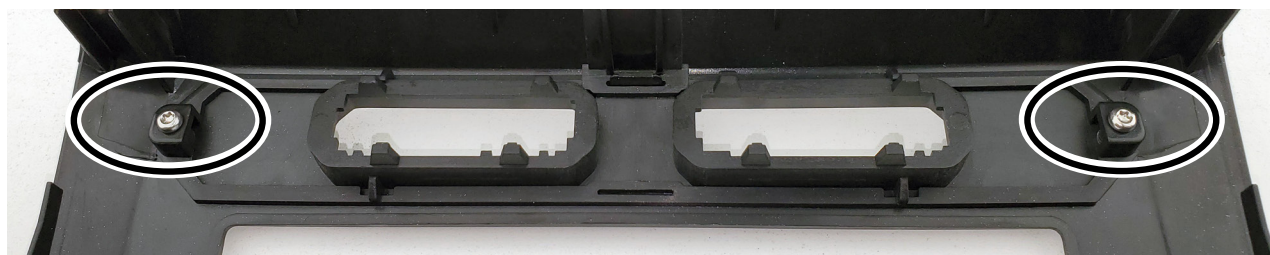

The required upper dash button trim panel will depend on whether the vehicle has two or three separate buttons. Insert the appropriate upper dash button trim bezel into the RPK4-FD2201 kit. Use the (2) supplied T10 6mm screws to secure the bezel into place, and insert the buttons that were removed during disassembly (step 1 page 3 of the RPK4-FD2201 installation instructions).

