


snapmaker

PLA Full Spectrum Filament Bundle

User Guide

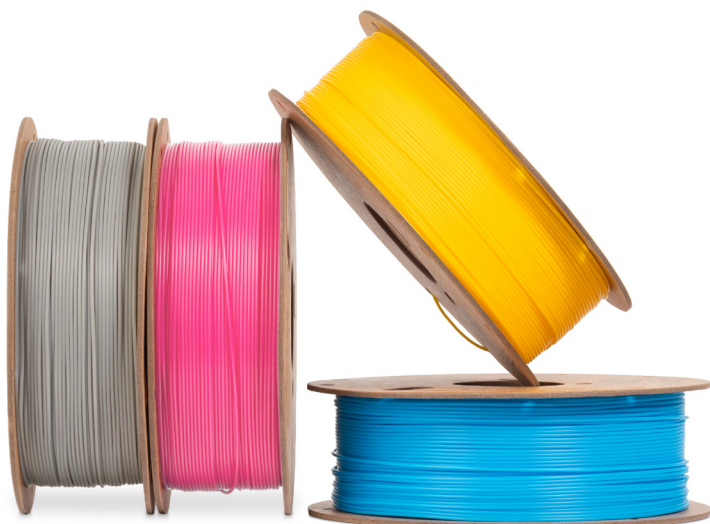


1	Product Overview	3
2	Specifications	4
3	Usage Procedure	8
4	Storage Instructions	18
5	Common Issues and Troubleshooting	19
6	Safety Precautions	20
7	Additional Notes	20
8	After-sales Service	20

Snapmaker PLA Full Spectrum Bundle is a printing filament compatible with the full range of Snapmaker 3D printers and most mainstream FDM (Fused Deposition Modeling) 3D printers on the market. This guide covers the filament's technical specifications, usage procedure, storage instructions, common issues and troubleshooting, and safety precautions.

1 Product Overview

The Snapmaker PLA Full Spectrum Filament Bundle includes Cyan, Magenta, Yellow, and Gray filaments specially designed for layered color mixing with Snapmaker Orca's Full Spectrum feature. By alternating thin layers along the Z-axis, the four filaments visually blend into a broader palette beyond four fixed colors. Carefully tuned for color and Transmission Distance (TD), the bundle delivers more natural blending with fewer visible horizontal stripes—giving you richer color possibilities with fewer spools to store.

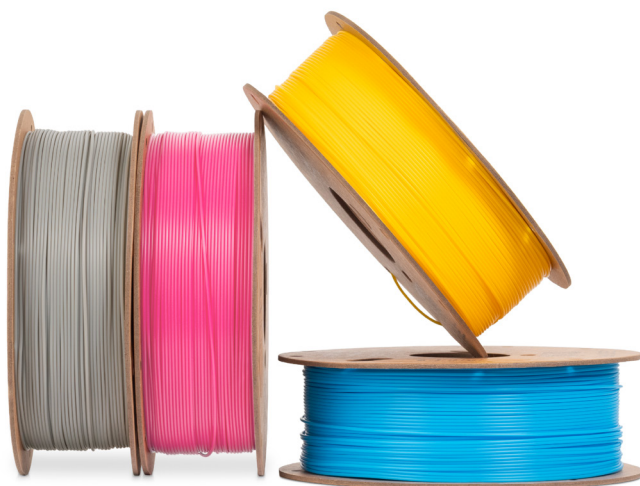

2 Specifications

Subjects	Data
Diameter	1.75 ± 0.02 mm
Net Filament Weight	1 kg
Length	328 m
Spool Material	Cardboard Spool
Spool Size	Diameter: 200 mm; Height: 66 mm

Recommended Printing Settings

Subjects	Data
Drying Settings Before Printing	55°C, 6 h
Printing and Storage Humidity	< 20% RH (Sealed, with Desiccant)
Nozzle Size	0.2, 0.4, 0.6, 0.8 mm
Nozzle Temperature	190–230°C
Bed Type	Textured PEI Plate, Smooth PEI Plate, Graphic Effect Steel Plate (Carbon-Fiber Textured)
Bed Surface Preparation	Glue
Bed Temperature	25–65°C
Cooling Fan	ON
Printing Speed	< 200 mm/s
Retraction Length	1–1.5 mm
Retraction Speed	20–30 mm/s
Chamber Temperature	25–45°C
Max Overhang Angle	60°
Max Bridging Length	≤ 30 mm
Support Material	Support for PLA

Physical Properties

Subjects	Testing Methods	Data
Density	ISO 1183, GB/T 1033	1.17 g/cm ³ at 23°C
Melt Index	210°C, 2.16 kg	7-11 g/10 min
Melting Temperature	DSC, 10°C/min	150°C
Glass Transition Temperature	DSC, 10°C/min	61°C
Decomposition Temperature	TGA, 20°C/min	325°C
Crystallization Temperature	DSC, 10°C/min	114°C
Vicat Softening Temperature	ISO 306, GB/T 1633	63°C
Heat Deflection Temperature	ISO 75, 1.8 MPa	58°C
Heat Deflection Temperature	ISO 75, 0.45 MPa	60°C
Saturated Water Absorption Rate	23°C, 70% RH	0.51%

Mechanical Properties

Subjects	Testing Methods	Data
Young's Modulus (X-Y)	ISO 527, GB/T 1040	3426.9 ± 64.8 MPa
Young's Modulus (Z)	ISO 527, GB/T 1040	3064.9 ± 83.4 MPa
Tensile Strength (X-Y)	ISO 527, GB/T 1040	52.3 ± 0.3 MPa
Tensile Strength (Z)	ISO 527, GB/T 1040	40.5 ± 0.5 MPa
Breaking Elongation Rate (X-Y)	ISO 527, GB/T 1040	6.3 ± 0.6%
Breaking Elongation Rate (Z)	ISO 527, GB/T 1040	1.8 ± 0.1%
Bending Modulus (X-Y)	ISO 178, GB/T 9341	3230.9 ± 55.3 MPa
Bending Modulus (Z)	ISO 178, GB/T 9341	N/A
Bending Strength (X-Y)	ISO 178, GB/T 9341	86.9 ± 1.2 MPa
Bending Strength (Z)	ISO 178, GB/T 9341	N/A
Impact Strength (X-Y)	ISO 179, GB/T 1043	3.3 ± 0.2 kJ/m ²
Impact Strength (Z)	ISO 179, GB/T 1043	N/A

Other Physical and Chemical Properties

Subjects	Data
Odor	Odorless
Composition	Polylactic Acid
Skin Hazards	Non-Hazardous
Chemical Stability	Stable under normal storage and handling conditions
Solubility	Insoluble in Water
Resistance to Acid	Weak Acid Resistance
Resistance to Alkali	Non-Resistant
Resistance to Organic Solvent	Poor
Resistance to Oil and Grease	Fair
Flammability	Flammable
Combustion Products	Water, Carbon Oxides
Odor of Combustion Products	Odorless

Specimen Printing Conditions

Subjects	Data
Nozzle Temperature	230°C
Bed Temperature	50°C
Printing Speed	50 mm/s
Infill Density	100%



Based on 0.4 mm nozzle. Printing conditions may vary with different nozzle diameters.

Disclaimer

The performance and printing parameters of the aforementioned filaments are obtained by Snapmaker through testing filament samples with sample 3D printers. All data provided is for reference and comparison purposes only, and does not constitute design specifications or any warranty of quality. Actual 3D printing quality and final part performance are subject to various factors including, but not limited to, printer equipment, model design, environmental conditions, and printing parameters. Users shall independently evaluate the compliance and safety of printed models and finished parts, including legal compliance, application safety, and structural reliability. Snapmaker shall not be held liable for any direct or indirect losses arising from the use of the aforementioned filaments, including equipment damage, print failure, personal injury, and property damage.



3 Usage Procedure




This section demonstrates the usage procedure using the Snapmaker U1 model.

Filament Unloading


1. On the touchscreen main interface, navigate to the Filament page. Tap **Unloading Mode**. Select all toolheads requiring unloading, then tap **Unload**.

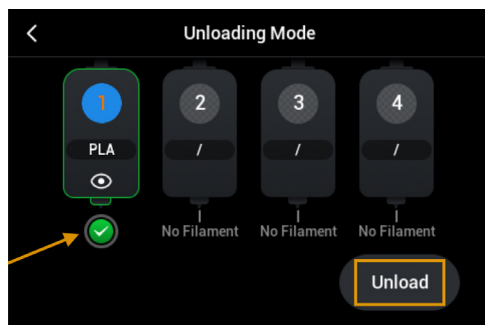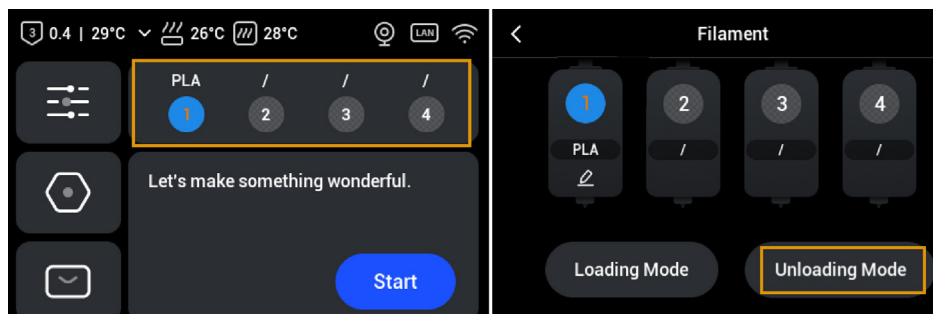

2. The printer will extract the selected toolhead and automatically heat the nozzle. Once the nozzle reaches the target temperature, the extrusion gears will retract the filament upwards, completing the unloading process.

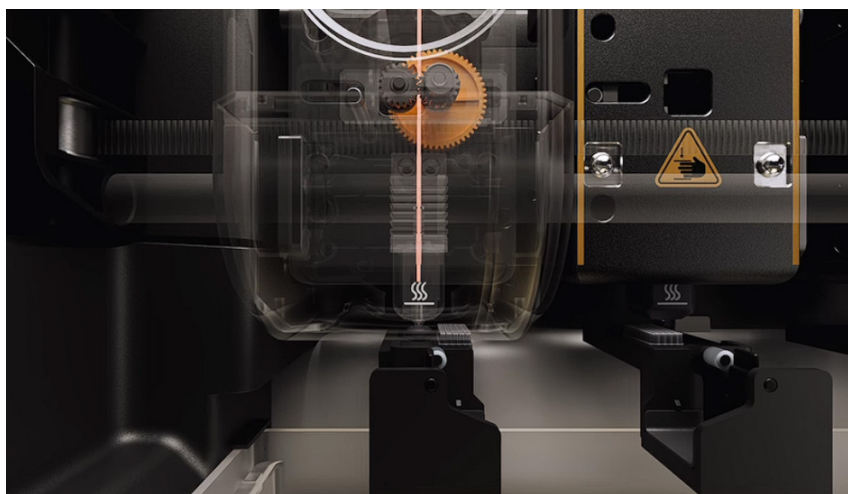

3. The printer will sequentially unload the filament from the other selected toolheads. Once all unloading is complete, tap **OK**.

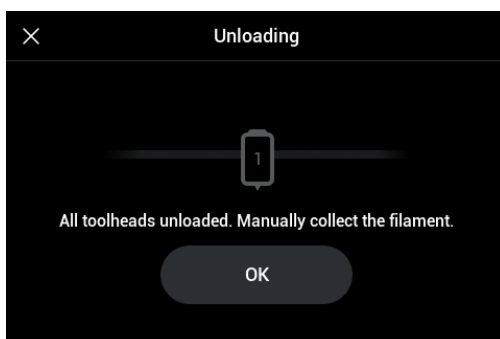

4. Rotate the spool to retract the filament from the tube until it is fully withdrawn. If an automatic filament feeder is used, the corresponding white indicator light on the feeder will turn off once the filament has been completely retracted.



5. Thread the end of the filament through the two locking holes on the spool to prevent loosening or tangling.



6. Remove the spool from the spool holder.




7. Repeat the steps above until all intended filaments have been successfully retrieved.

Automatic Loading



For rigid filament, the default mode Automatic Loading is recommended. For flexible filament, please follow the instructions for Manual Loading.

1. Trim the end of the filament at an approximately 45° angle with diagonal cutters.

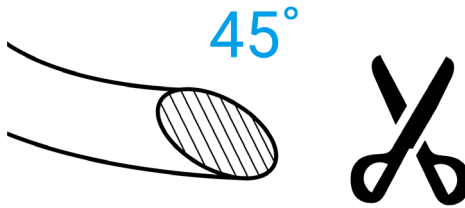

This reduces feeding resistance, thus enhancing the success rate.

2. Mount the filament spool on the spool holder. Make sure the filament can be pulled tangentially from the bottom of the spool.




3. Insert the filament into the feeder until the white indicator light turns on.




If the feeder's white light is blinking, feeding is still in progress.
If the white light remains steady, pre-loading is complete.


4. On the touchscreen main interface, navigate to the Filament page to edit filament information.

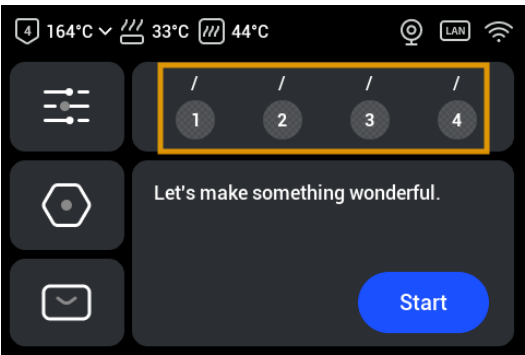


Using RFID-equipped Snapmaker official filament, the device will automatically recognize the filament information; no manual editing is needed.

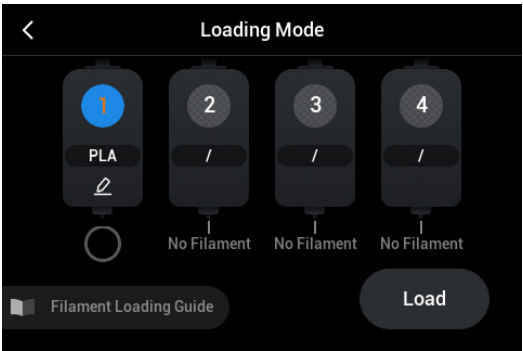


For third-party filament or Snapmaker filament without RFID, manual editing is required. Tap the icon below the corresponding filament, select filament type and color, and tap **Save**.

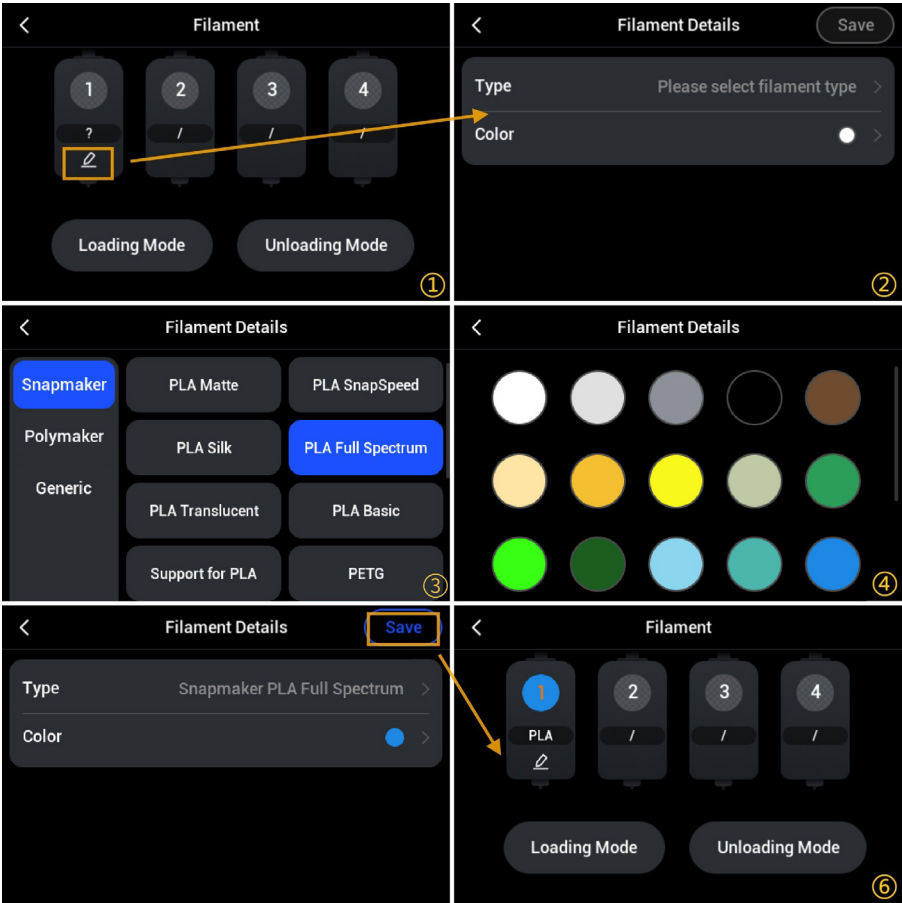

5. On the Filament page, tap **Loading Mode**, select the corresponding filament, tap **Load**.

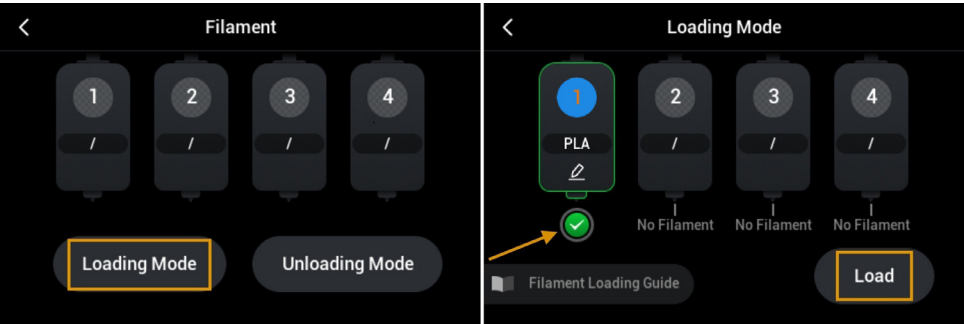

6. The printer will automatically perform the following steps: extract the toolhead, feed filament into the nozzle, heat the nozzle, extrude filament, and cleanse old material from the toolhead. Upon completion, tap **Done** on the screen.

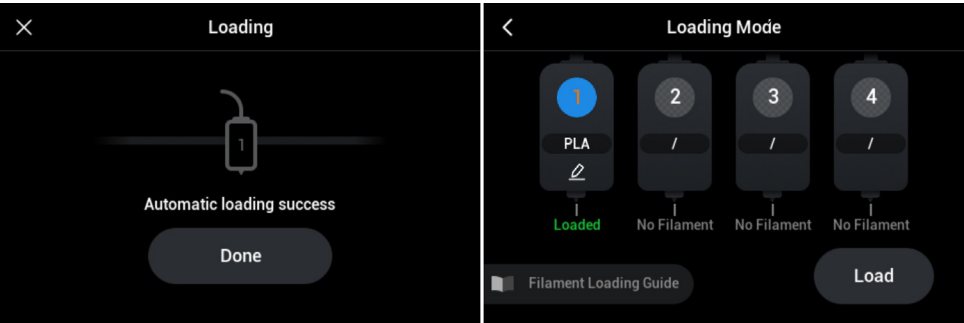



The filament status is now updated to **Loaded**.

Test Printing and Final Printing

1. Test Printing: Before printing a final part, it is recommended to print a small test model (e.g., a 20 mm × 20 mm × 20 mm calibration cube) to verify smooth extrusion, proper formation, and nozzle condition. Proceed with final printing only if no abnormalities are observed.

2. Final Printing: Upload the sliced model file to the 3D printer and start the printing process. Ensure the filament spool is securely positioned to prevent it from falling off the spool holder during printing, which could disrupt the process.

Please Note

1. Full Spectrum is designed to explore richer color variations, not for high-accuracy color reproduction. Color mixing is not precise color matching and cannot reproduce every target color. Final colors vary depending on filament color and transmission distance, model geometry, slicing settings, layer height, toolpaths, and other factors.

2. The software preview is intended only to indicate color trends and help fine-tune settings. The final print may differ from the preview due to filament properties and printing conditions. Before the final print, print a small color swatch with your current settings and fine-tune them based on the result.

3. Color mixing works best on models with sufficient volume or surface area. The effect may be less visible on small models, while fragmented surfaces or dense details may weaken the color-mixing effect. Such models are therefore not recommended.

4. Full Spectrum color mixing delivers better color results on three-dimensional models and is not recommended for flat models.

5. Mixing two to three filaments typically produces cleaner, more controllable colors, while mixing four may result in darker or grayer tones. Choose based on your desired effect, and use four-filament mixing with caution if you wish to avoid darker or grayer colors.

Printing Tips

1. Drying & Storage

- **Pre-Drying:** The filament has low moisture sensitivity and generally does not require drying. However, pre-drying is recommended for optimal print results. The recommended setting is 55°C for 6 hours.

- **Storage:** When not in use, store the filament in a dry place away from direct sunlight to maintain consistent print quality.

2. Printing

- **Update the Software:** Update Snapmaker Orca to V2.3.6 or later and select the built-in "Snapmaker PLA Full Spectrum" profile to use the color-mixing feature and achieve better print results.

- **Refer to the Full Spectrum Guide and Color Reference:** Refer to [Full Spectrum](#) for detailed instructions, or view the [Full Spectrum Color Reference](#) for color examples with corresponding filament combinations and mixing ratios.

- **Use the Recommended Nozzle and Layer Height:** Use hotends of 0.4 mm or smaller with a layer height of 0.1 mm or lower. Larger hotends and higher layer heights may result in visible horizontal stripes.

4 Storage Instructions

The storage environment significantly affects the performance of 3D printing filament. Follow these guidelines to extend the filament's usable life:

1. Storage Environment: PLA softens under prolonged sunlight exposure and is not resistant to water or corrosion. Store PLA filament and printed parts in a dry, cool, well-ventilated area, away from direct sunlight, high temperature, and high humidity (recommended ambient temperature: 5–30°C, humidity $\leq$ 20%). Keep away from open flames, heat sources (e.g., heaters, ovens), and corrosive substances.

2. Unopened Filament: Keep the filament sealed in its original packaging to prevent moisture absorption and contamination. Performance may degrade and printing issues may arise if stored for excessively long periods. Use the filament promptly after purchase.

3. Opened Filament: Reseal any unused filament immediately, placing it in a sealed bag or dedicated storage box. Adding desiccants (e.g., silica gel) is recommended to improve moisture protection. It is advisable to use the opened filament within 3 months to avoid moisture absorption and oxidation. In humid regions, use the filament as soon as possible or ensure it is properly sealed.

4. Spool Care: Avoid dropping, crushing, or bumping the spool to prevent deformation which could cause filament tangling. If tangles occur, do not pull aggressively. Gently untangle the filament before use to prevent breakage.

5 Common Issues and Troubleshooting

Common Issue	Potential Cause	Recommended Solution
No extrusion/filament breakage	1. Filament absorbed moisture/clumped. 2. Nozzle temperature too low, filament not fully melted. 3. Extruder gear pressure insufficient or slipping. 4. Nozzle clogged.	1. Dry the filament. 2. Increase nozzle temperature by 5–10°C. 3. Adjust extruder gear tension; clean debris from the gear. 4. Clear nozzle clogs using appropriate tools.
Bubbles or stringing on surface	1. Filament absorbed moisture. 2. Nozzle temperature too high. 3. Cooling fan off or inadequate airflow. 4. Printing speed too fast.	1. Dry the filament. 2. Decrease nozzle temperature by 5–10°C. 3. Turn on cooling fan and adjust fan speed. 4. Reduce printing speed appropriately.
Edge warping/part detaching from bed	1. Bed temperature too low. 2. Bed surface not clean, poor adhesion. 3. Large temperature fluctuations or drafts in printing environment.	1. Increase bed temperature. 2. Clean bed with ethyl alcohol; apply dedicated bed adhesive if needed. 3. Maintain stable ambient temperature, avoid drafts.
Filament tangle/feeding jam	1. Spool deformed. 2. Spool placed at an incorrect angle. 3. Filament kinked or damaged.	1. Manually adjust the deformed area of the spool to restore its original state. 2. Adjust spool placement angle to ensure smooth feeding. 3. Cut away damaged/kinked sections and reload filament.
Weak layer adhesion/delamination	1. Nozzle temperature too low. 2. Printing speed too high. 3. Cooling fan speed too high.	1. Increase nozzle temperature. 2. Reduce printing speed. 3. Lower cooling fan speed appropriately.

6 Safety Precautions

1. High-Temperature Protection: During printing, the nozzle and molten filament reach extremely high temperatures. Do not touch the nozzle, filament guide tube, or freshly printed hot models to prevent burns. Children should be supervised by an adult at all times.

2. Environmental Safety: Some materials may emit odors, ultrafine particles, or volatile substances when heated. It is recommended to use the device in a well-ventilated area.

3. Equipment Operation: Strictly follow the printer's operating guidelines. Do not disassemble or modify the printer arbitrarily. When installing or changing filament, ensure the printer is powered off or in standby mode to prevent accidental injury.

4. Filament Usage: Do not use damaged, deteriorated, or expired filament, as this may clog the nozzle, damage the printer, and compromise print quality. When cutting filament, use sharp cutters to ensure a clean, even cut.

5. Disposal: Discard used filament and print waste in recyclable or general waste bins according to local regulations. PLA is a biodegradable material and can be composted where facilities exist, helping reduce environmental pollution.

 
7 Additional Notes

1. This document is the user guide for Snapmaker PLA Full Spectrum Filament Bundle. For issues not covered in this guide, contact Snapmaker official customer support for professional technical assistance.

2. Regular printer maintenance (cleaning nozzle, extruder gear, and build plate) together with high-quality filament is recommended to improve printing outcomes and extend the lifespan of both the equipment and the filament.

8 After-sales Service

For questions regarding printing techniques or filament usage, please contact Snapmaker official customer support for one-on-one operational guidance.



MAKE
SOMETHING
WONDERFUL

$$\int_0^{\text{Wonderful}} \text{make}(x)dx = \text{snapmaker}$$

"The world is but a canvas to our imagination."
— Henry David Thoreau