
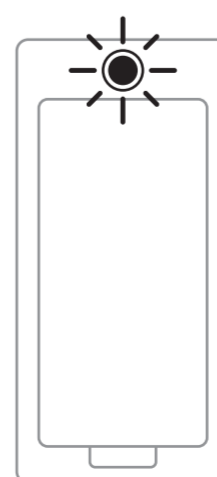
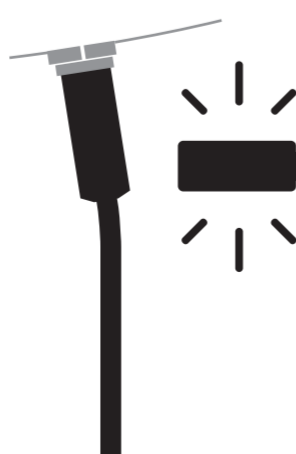
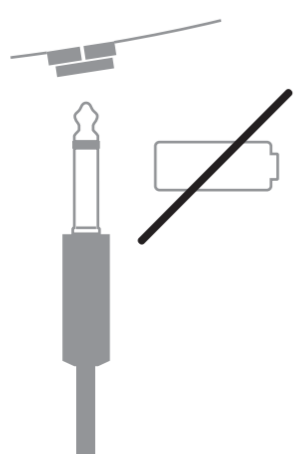
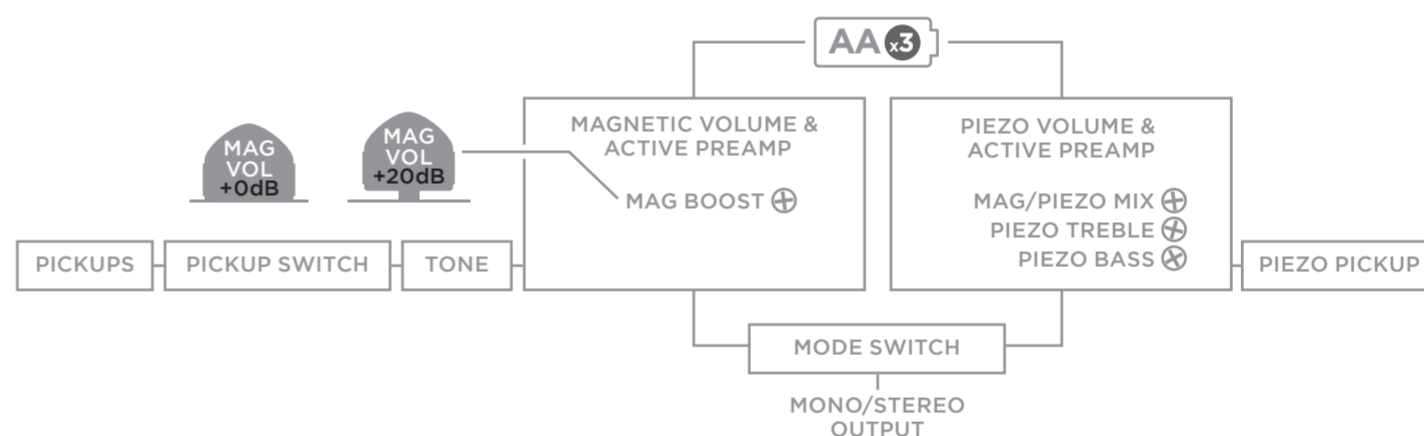
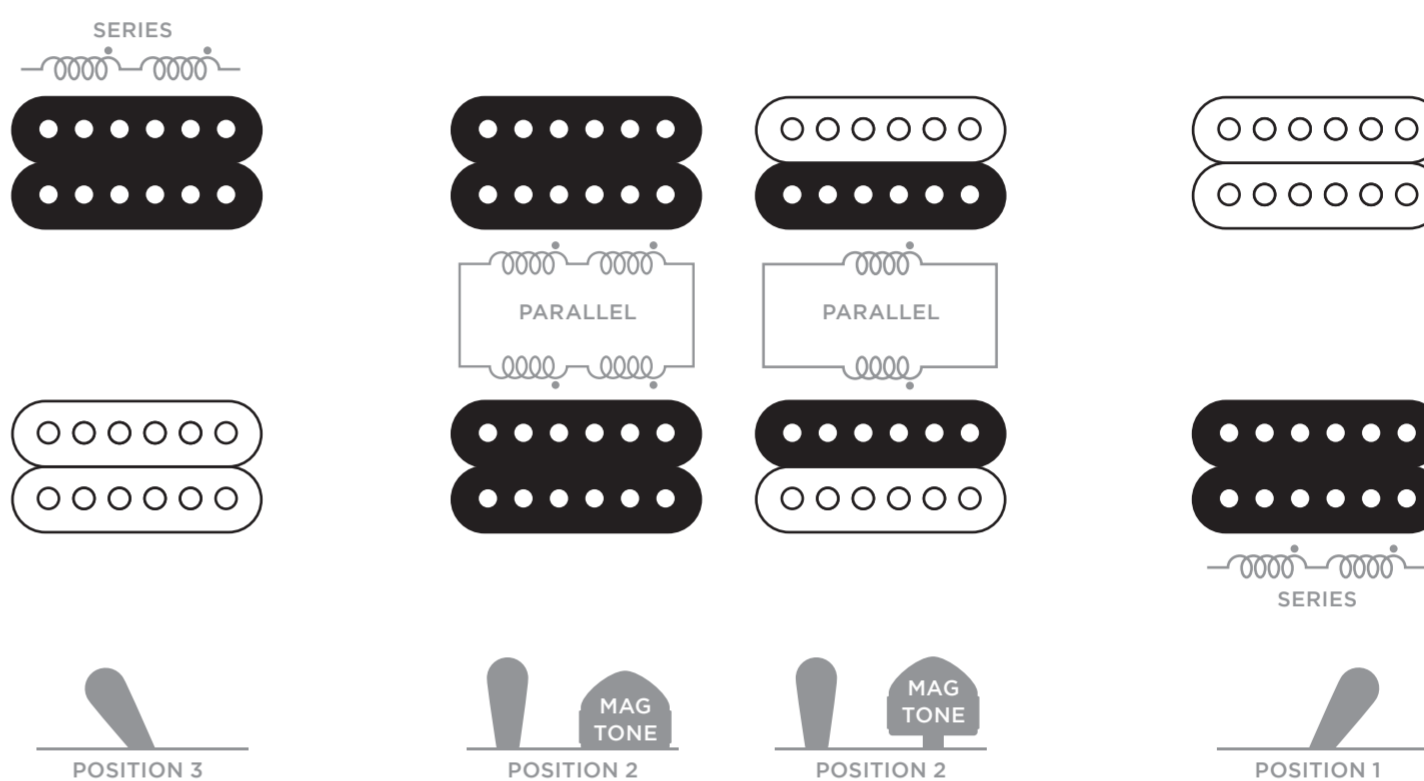
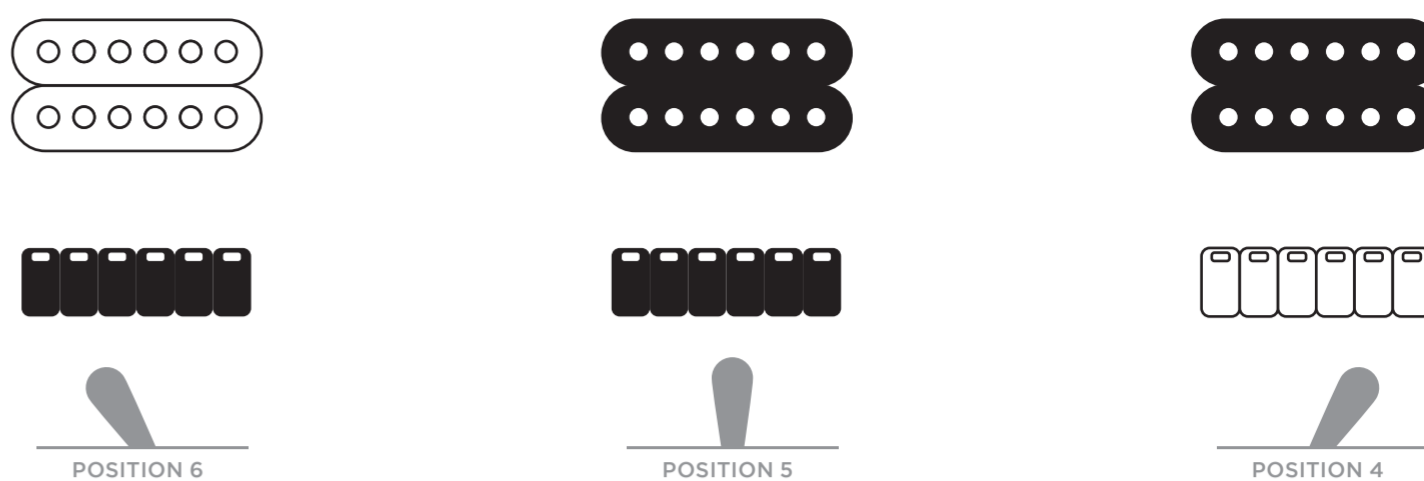


# MAJESTY 6

CONTROL FUNCTION DIAGRAM 06-04-2019

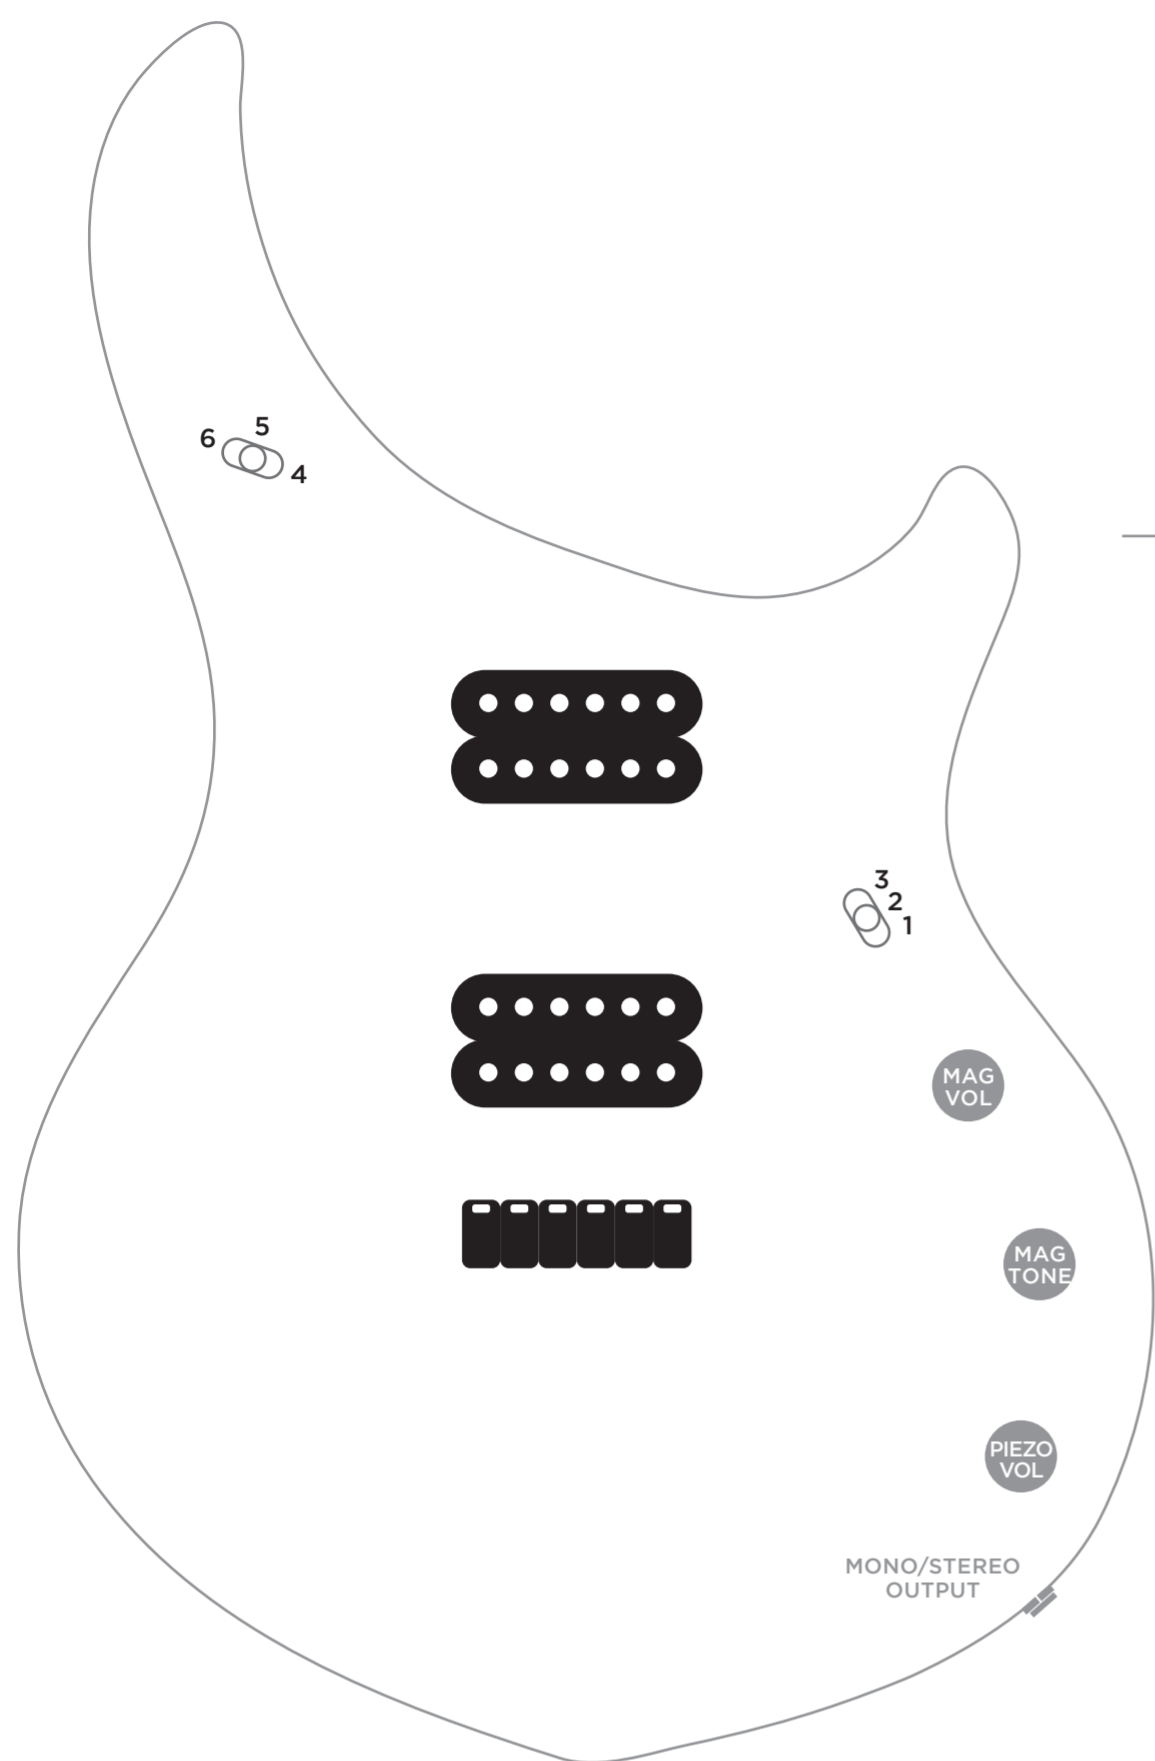

LED FLASHES WHEN BATTERIES NEED REPLACING.

ONCE FLASHING BEGINS, 3-5 HOURS OF OPERATION IS TYPICAL.