

AW111 Wireless Expansion Microphone – 3.5mm TRS to TRRS Adapter Setup Guide

The AW111 Wireless Expansion Microphone is designed for video conferencing devices with a **3.5 mm TRS microphone input** (e.g., AVerMedia PA511D Mingle Bar or PC platforms).

For standard installation, connect the **AW111R Wireless Receiver dongle** to your Mingle Bar (PA511D) — please refer to the product's **Quick Start Guide** for full setup instructions.

For computers or laptops with **only a 3.5 mm TRRS port**, follow the instructions below.


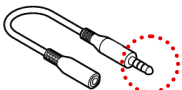

The AW111 wireless microphone system can be used with devices that have a 3.5mm "headphone + microphone" combo jack by using a **3.5mm TRS to TRRS adapter cable**. The TRRS icon shows a headset with microphone:



To connect the AW111 receiver (RX) to devices with a combined headphone/microphone port, you must convert the TRS output to TRRS format with.



Connection Steps

| | | |
|---|---|---|
| 1 |  | Connect the AW111 receiver's TRS output to the TRS side of the adapter. |
| 2 |  | Insert the adapter's TRRS end into your device's (PC or laptop) combo audio jack. |
| 3 |  | Plug the AW111R wireless receiver dongle into your device. It will power on automatically. |

Notes:

- Ensure the adapter is fully inserted into the port for proper audio transmission.
- This adapter is only for audio connection and does not carry power.
- In your device settings, select AW111 as the external microphone input source.
- Other settings, please refer to the Quick Start Guide included with the product.