 



Setting Up Live Streamer CAP 4K for Zoom Rooms

Follow the steps below to set up your Live Streamer CAP 4K (BU113) for the Zoom Rooms.


1. Connect the BU113's USB-C port to your video conferencing computer (i.e. a NUC or mini PC).



 - 2. Once the BU113 is recognized by the system, it is ready to go—no driver is required.
- 3. Connect the BU113's HDMI port to a laptop via an HDMI cable.




4. If you don't have a camera for the meeting room, you can set up BU113 as one in Zoom Rooms. Start Zoom Rooms > go to your Zoom account > ADMIN > Room Management > Zoom Rooms > Rooms > Edit (from the room where the meeting is held).

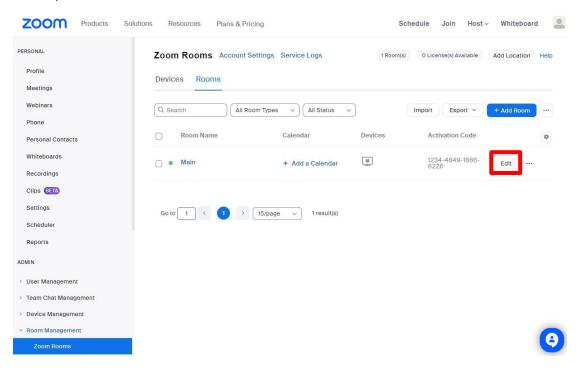



5. Once in Edit, go to Devices > Camera > select Live Streamer CAP 4K > Save.

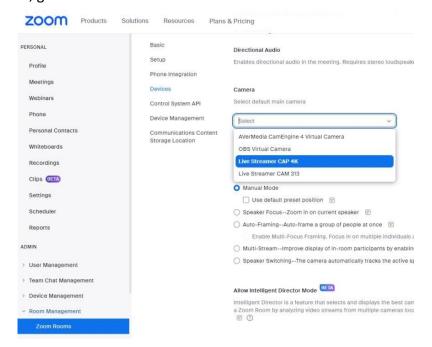

If you already have a dedicated camera, you can use BU113 as another camera for quick content sharing from one laptop to another using the HDMI cable. To do so, open your Zoom Rooms Controller > Share Content > Camera > select Live Streamer CAP 4K. Below is Room Controller app on a smartphone.

