

LA CROSSE[®]
TECHNOLOGY



Wi-Fi COLOR FORECAST STATION

SETUP GUIDE

MODEL NUMBER V11

Table of Contents

BASICS

Initial Setup	03
Station Settings	07
Buttons	08
LCD Display Brightness	09
Auto-Dim Settings	09
Viewing Time/Calendar	10-11

LA CROSSE VIEW

Connecting to the App	04
Connecting Your Station	05
Manually Add Sensor to the App	06

TEMP. AND HUMIDITY

Viewing Your TH Data	12
Viewing TH Records	12
Outdoor Comfort Meter	12
Temp. & Humidity Alerts	13

FORECAST

Viewing Your Forecast Data	14
Seasonal Trees	14
Standalone Forecast Icons	15
Enhanced Forecast Data	15
Daily/Hourly Forecast	16

PRESSURE

Relative Pressure	17
-----------------------------------	-----------

SENSORS

Placement & Mounting	17
Adding Extra Sensors	18
Featured Add-On Sensors	19-20

APPENDIX

Specifications	21
Dimensions	21
Coin Cell Battery	22-23
Recycling & Disposal	25


APPENDIX

Warranty	25
FCC Statement	24
Canada Statement	24


SUPPORT

We're Here to Help	25
Factory Reset	25
Stay in Touch	25
Double Warranty	26

Initial Setup

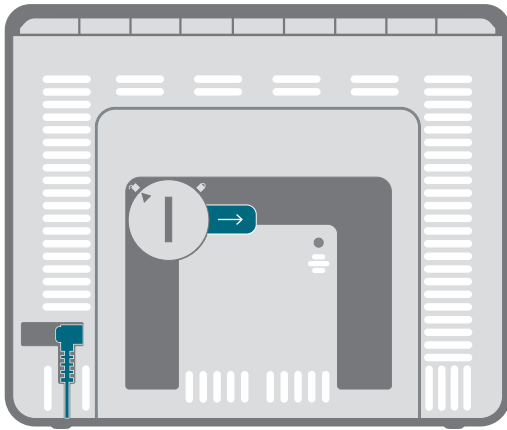

Weather Station (V11)

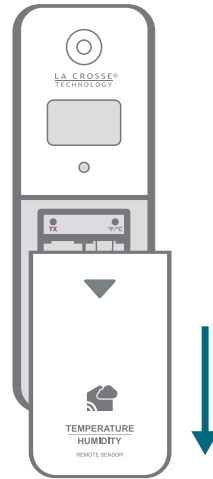

Thermo-Hygro Sensor (LTV-TH5i)

Power Up

Weather Station

Insert the 5V Power Adapter into an outlet, and then plug it into the Power Jack on the back of the station. Next, remove the Insulation Tab from the Station's Battery Compartment.

Thermo-Hygro Sensor

Push and slide the front battery cover down and install 2 fresh "AA" batteries. Then press the small TX button above the batteries to force a transmission and connect the sensor to your station. Once connected, replace the battery cover. The blue LED light will flash when transmitting.

Connecting to the App



Stay connected to your home anytime, anywhere with the La Crosse View app.

Monitor your home environment and set custom alerts to notify you when conditions change.

Connecting is optional and the display will function as a standalone unit without the Wi-Fi connection. However, we recommend connecting during the initial setup, as it will save you time and allows access to some advanced features right away.

Download the La Crosse View App

Visit the App Store or Google Play Store to download the free La Crosse View app onto your mobile device.

Launch the App

Open the La Crosse View app. Follow the on-screen setup instructions to create an account, add new devices, and connect your display to your Wi-Fi network.

Connecting Your Display to the App

Now that you've created your La Crosse View account, it's time to add your system to your account and connect it to your home router using the La Crosse View app.

Note: For the steps listed on the next page, you'll need your Wi-Fi network name (SSID) and password. Make sure your mobile device is connected to the same Wi-Fi network.




Having Trouble Connecting to Wi-Fi?

The app should guide you through the best method for your Wi-Fi network and router. However, if you have trouble connecting, please go to: bit.ly/wifi_questions or scan the QR code. This will explain additional connectivity options, including connecting by WPS or contacting our technical support team for further assistance.

Adding & Connecting Your Station to Wi-Fi

1. The La Crosse View app is required to connect the station to your Wi-Fi network. Download, install, and log into your La Crosse View account first.
2. Follow the initial app instructions or manually add the display into your account.

New User Initial Setup: When first setting up your station, the app will lead you through a series of instructions to help get your station added into your account and connected to your home Wi-Fi network.

Manually Add & Connect Display: After the initial walk-through, stations can be added and connected via the Devices tab in the app's main menu. Simply tap the **Add Device** or **+** button at the bottom of the Devices page in the app.
3. Next, the app will prompt you to use your phone to scan the device ID bar code located on the back of the station. Please note, adding a device to your account and connecting it to Wi-Fi are two different steps. You can complete either step after if you have any trouble.
4. When connected, the station will beep, and time and forecast information should populate on the display. The  indicator will become solid.

Checking Your Station's Wi-Fi Status

Press the **SET** button on the top of the station to view your Wi-Fi Status.



ALL OK CONNECTED: Your station is connected to your Wi-Fi, and its data should be available on the station and in the app.



NO WEATHER SERVICE: Your Internet weather and time services are not connecting. These should resolve on their own, please be patient.



SEE APP TO CONNECT: Check the app for notifications.



LOST WIFI: Check your router and network connections.





Having Trouble Connecting to Wi-Fi?

The app should guide you through the best method for your Wi-Fi network and router. However, if you have trouble connecting, please go to: [bit.ly_v11_wifi](https://bit.ly/v11_wifi) or scan the QR code. This will explain additional connectivity options, including connecting by WPS or contacting our technical support team for further assistance.

Adding Your Sensors to the App

Manually Add Sensors to the App

1. Open your La Crosse View app. On the Main Menu, scroll to **ADD/EDIT** and select **DEVICES**.
2. On the Devices page, select the **ADD DEVICE** or **PLUS (+)** button.
3. Scan the Bar code on your Sensor or type in the Device ID manually.
4. Confirm the sensor image and Device ID and add a Device Name and Location Name. Select **DONE**.

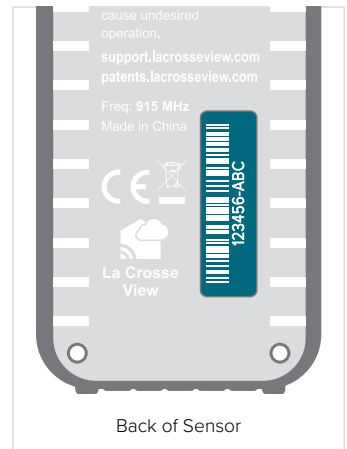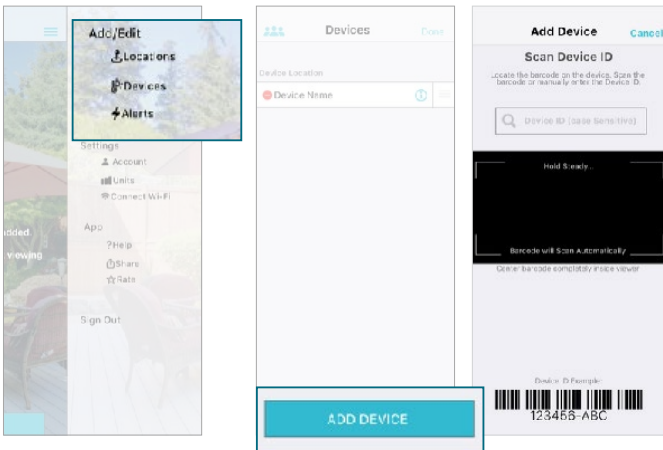

Station Settings

When the station is first powered on, it will begin searching for your sensors, which should connect within 10 minutes.

Navigating the Settings Menu



1. To manually set language, time/date, and other settings, hold the **SET** button to enter the Settings Menu.



2. Use the **+/-** buttons on the top of the station to adjust the values.



3. Press the **SET** button to confirm your selection and move to the next setting.



4. You may exit the Settings Menu at any time by pressing the **LIGHT** button.


Settings Menu Order

- Greeting/HELLO
- Language (English/Spanish/French)
- Beep ON/OFF
- 12/24 Hour Time Format
- Hour | Minute | Year | Month | Date
- Calendar Order Month/Date or Date/Month
- Temperature Units (Fahrenheit/Celsius)
- Pressure Units (InHg/hPa)
- Pressure Number Setting
The default pressure reading is 29.91 InHg (1013 hPa).
The station will acclimate on its own if the pressure number is not set.
- THANK YOU

Important: Settings such as language and units of measure must be set manually within the station's Settings Menu. These are not controlled by the La Crosse View app.

- When a language is selected, the following instructions and weekday will be presented in that language.
- Weekday will set automatically after year, month, and date settings are adjusted.
- When in 24-hour time format, seconds will show in place of AM/PM markings.
- If you're connected to Wi-Fi, the time/date will automatically update from the Internet. See pages 3-4 for more info.

Buttons

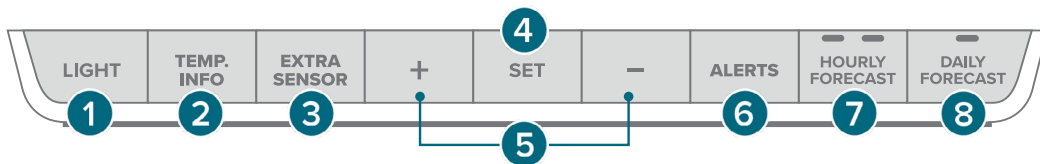

1. LIGHT

Press to adjust backlight. Hold to enter Auto-Dim settings.

4. SET

Press to view Wi-Fi status.
Hold to enter Settings Menu.

6. ALERTS

Hold to enter Alert Settings.
While in Alert Settings, press to move to next Alert.

8. DAILY FORECAST

Press to see Daily Forecast*

2. TEMP. INFO

Press to view Temperature and Humidity History. While viewing, hold **MINUS** button to delete the history reading.

5. PLUS/MINUS (+/-)

Use to adjust values. In Alert Settings, press to turn Alert(s) on/off. Hold both together to search for Wi-Fi signal.

7. HOURLY FORECAST


Press to see Hourly Forecast*

9. WIFI

Press during initial setup for Wi-Fi Connection. Hold to re-enter Configuration Mode & clear previous Wi-Fi settings.

3. EXTRA SENSOR


Press to toggle through extra sensors and pressure. Hold to add sensors. While viewing, hold the **MINUS** button to delete the sensor.

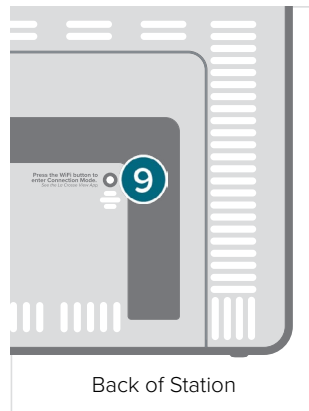

Back of Station

* Your display must be connected to Wi-Fi to receive Hourly/Daily forecast information.

LCD Display Brightness

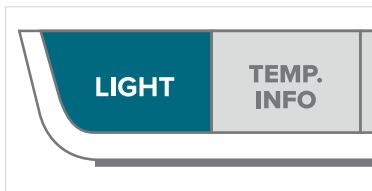

Adjusting the LCD Display Brightness



Press the **LIGHT** button on the top of the station to adjust the backlight intensity. There are 4 brightness levels, plus an off option.


Auto-Dim Settings

Program your display to automatically dim during preselected times.


1. Hold the **LIGHT** button to enter the Auto-Dim Settings Menu.
2. Press the **+/-** buttons to turn the Auto-Dim feature on or off. Press **LIGHT** to confirm.
3. Press the **+/-** buttons to adjust the starting hour. Press **LIGHT** to confirm.
4. Press the **+/-** buttons to adjust the stopping hour. Press **LIGHT** to confirm and exit.

Please Note: Only the hour can be set.

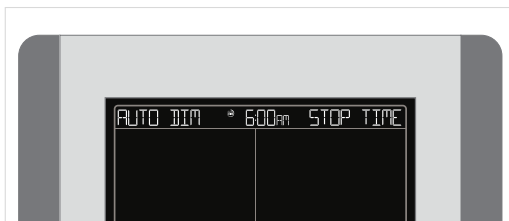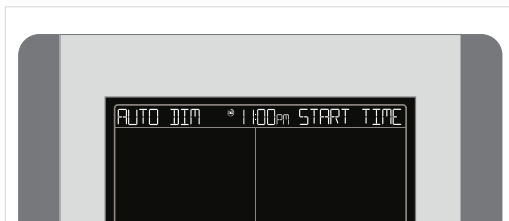

The  icon will appear on the LCD when the Auto-Dim feature is activated.

Viewing Time, Calendar, Temperature, & Humidity

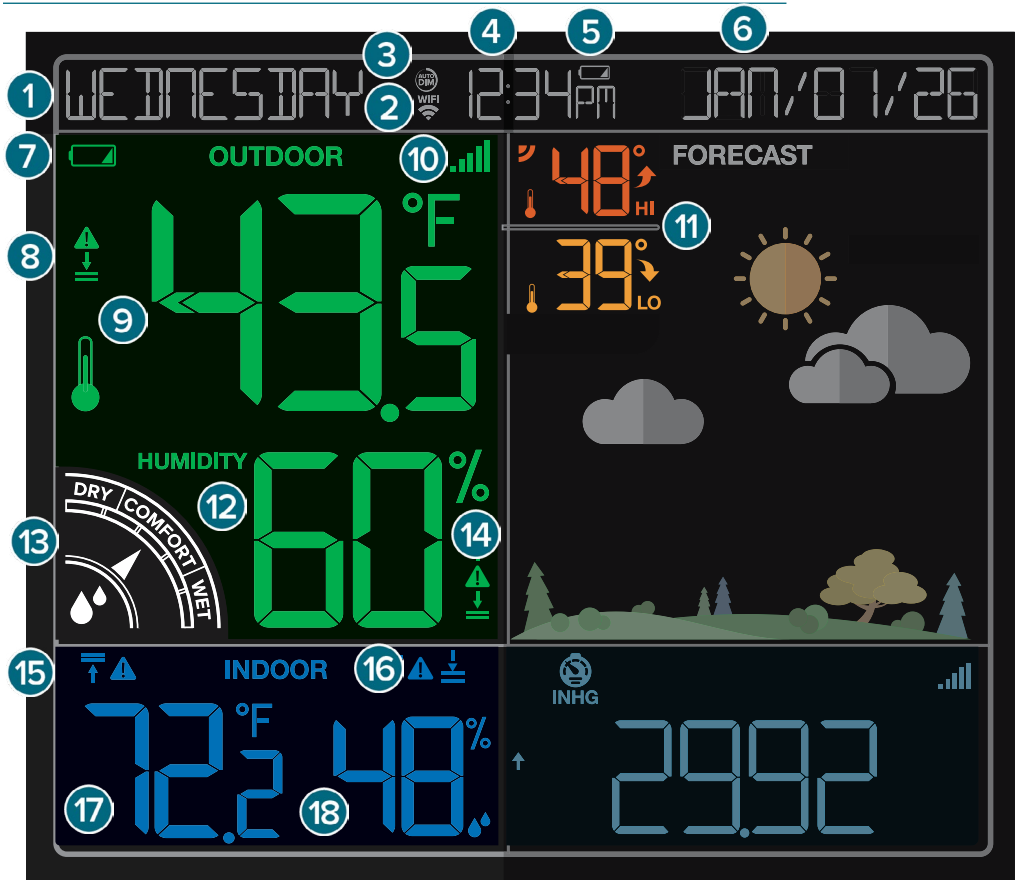

Viewing Time, Calendar, Temperature, & Humidity

TIME & CALENDAR

1. DAY OF THE WEEK

Select from English, Spanish, or French in the Settings Menu

4. 12/24 HOUR TIME

Time will automatically update when connected to Wi-Fi

2. WI-FI ICON: Indicates active Wi-Fi connection*

5. LOW BATTERY ICON FOR STATION

Appears when station battery needs to be replaced

3. AUTO-DIM ICON: Indicates active Auto-Dim setting

6. CALENDAR: Select order (Month/Date or Date/Month) in the Settings Menu

TEMPERATURE & HUMIDITY

7. LOW BATTERY ICON FOR SENSOR

Indicates sensor battery needs to be replaced

8. HIGH/LOW OUTDOOR TEMP. ALERT ICONS:

Appears if high (↑) or low (↓) alert(s) are set and active

9. OUTDOOR TEMPERATURE
Current outdoor temperature (°F/°C)

10. SENSOR RECEPTION INDICATOR

Indicates if the station is receiving data from the sensor

11. DAILY FORECASTED HIGH AND LOW TEMPERATURES
Forecasted high and low temperatures in the next 12 hours*

12. OUTDOOR HUMIDITY
Current outdoor relative humidity (%RH)

13. OUTDOOR COMFORT METER

Represents current outdoor comfort level

14. HIGH/LOW OUTDOOR HUMIDITY ALERT ICONS

Appears if high (↑) or low (↓) alert(s) are set and active

15. HIGH/LOW INDOOR TEMP. ALERT ICONS
Appears if high (↑) or low (↓) alert(s) are set and active


16. HIGH/LOW INDOOR HUMIDITY ALERT ICONS

Appears if high (↑) or low (↓) alert(s) are set and active

17. INDOOR TEMPERATURE
Current indoor temperature (°F/°C)

18. INDOOR HUMIDITY
Current indoor relative humidity (%RH)

Viewing Your Temperature and Humidity Data

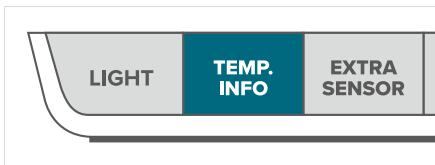

Records Viewing Order

- Outdoor High Temperature
- Outdoor Low Temperature
- Outdoor High Humidity
- Outdoor Low Humidity
- Indoor High Temperature
- Indoor Low Temperature
- Indoor High Humidity
- Indoor Low Humidity
- Heat Index
- Dew Point

Outdoor Comfort Meter

The arrow indicates outdoor comfort level based on current relative humidity.



1%RH to 25%RH



26%RH to 39%RH



40%RH to 75%RH



76%RH to 83%RH



84%RH to 99%RH

Viewing Records

Press the **TEMP. INFO** button to toggle through indoor/outdoor temperature and humidity records with time and date stamps.

Resetting Individual Temperature and Humidity Records





Press the **TEMP. INFO** button to view the individual temperature & humidity values you'd like to reset.



Hold the **MINUS (-)** button until dashes appear. This will reset the value to your current temperature or humidity reading.

Temperature and Humidity Alerts

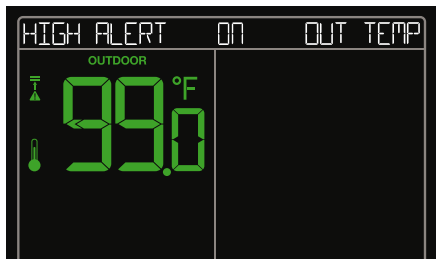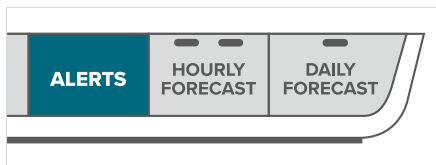

High Temperature Alert Example

Setting Temperature and Humidity Alerts

1. Hold the **ALERTS** button to enter the Alert Settings Menu.
2. Use the **+/-** buttons to activate/deactivate individual alerts or press the **ALERTS** button to skip to the next alert option.
3. Once activated, use the **+/-** buttons to adjust the alert value. Press the **ALERTS** button to confirm and move forward.

Active alerts are indicated by the ▲ and \bar{T}/\bar{H} icons in the respective sections on screen.

Note: The default setting for alerts is OFF.

Alerts Setting Order


Outdoor High Temp. • Outdoor Low Temp. • Outdoor High Humidity • Outdoor Low Humidity
 Indoor High Temp. • Indoor Low Temp. • Indoor High Humidity • Indoor Low Humidity

Alert Sounds

- When an alert value is reached, the respective alert icon will flash, and the station will beep 5 times each minute until the value moves out of the alert range.
- Press any button to stop the alert sound. The alert icon will continue to flash until out of the alert range.

Note: Alerts set on the station are separate from those created within the La Crosse View app.

Viewing Your Forecast Data

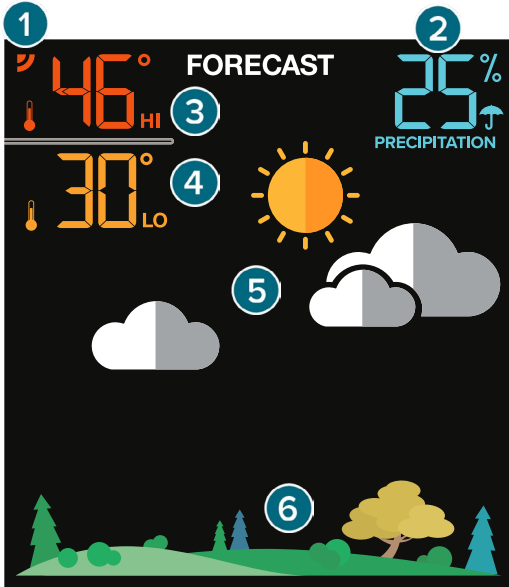

1. INTERNET ICON

Indicates the station is connected and receiving forecasts*

2. CHANCE OF PRECIPITATION

Percent chance of precipitation in the 12 hours*

3. DAILY FORECASTED HIGH TEMPERATURE

Forecasted high temperature in the next 12 hours*

4. DAILY FORECASTED LOW TEMPERATURE

Forecasted low temperature in the next 12 hours*

5. FORECAST ICONS

Predicts weather conditions in the next 12 hours**

6. SEASONAL TREES

Foliage scene changes seasonally

*Your display must be connected to Wi-Fi to receive forecast data.

**When connected, your station will display 6 additional forecast icons.



Spring (March 20th to June 20th)



Summer (June 21st to Sept. 20th)



Fall (Sept. 21st to Dec. 20th)



Winter (Dec. 21st to March 19th)

Seasonal Trees

The foliage scene in the forecast section changes seasonally. The dates are pre-programmed.

Viewing Your Forecast Data



Forecast Icons


When using as a standalone unit, the display uses changes in barometric pressure to predict your weather to come. This is represented by the 6 forecast scenes below. High and low temperatures will come from the Thermo-Hygro Sensor. Watch our Forecast Icon Video for more details: bit.ly/forecast_vid

Please Note: The Forecast Icons may not represent your current weather. They are a future prediction of the weather to come over the next 12 hours.

Enhanced Forecast Data

When connected to Wi-Fi, the display will receive additional weather icons, chance of precipitation values, and future forecast information. Additional forecast scenes include:

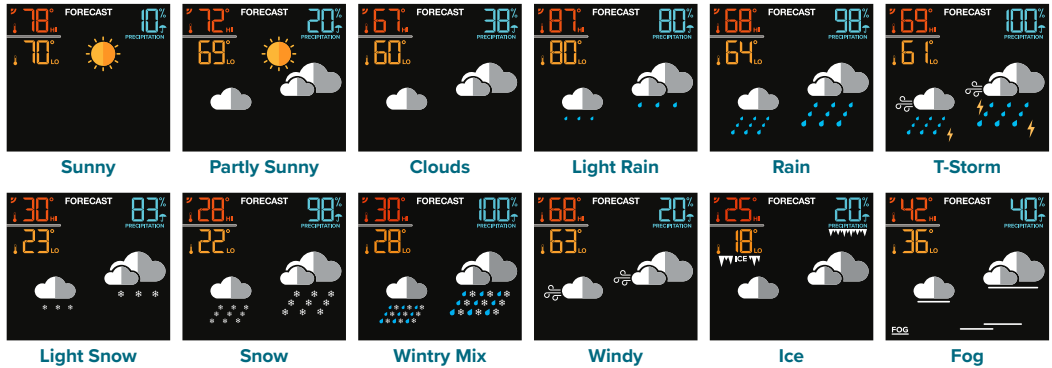
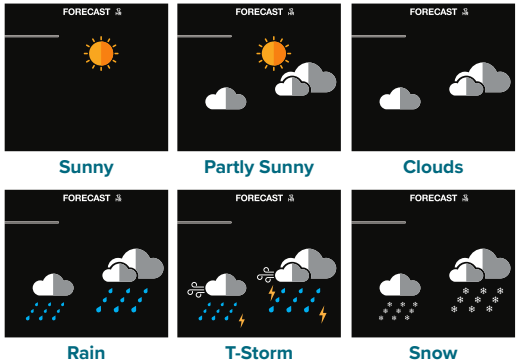


Tip: The  icon will appear in the top left corner of the forecast section when your display is connected and receiving forecasts.

Viewing Your Forecast Data

Daily and Hourly Forecast Buttons

When connected to Wi-Fi, use the **DAILY FORECAST** and **HOURLY FORECAST** buttons on the top of the station to view future forecast information.

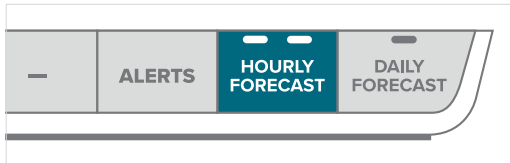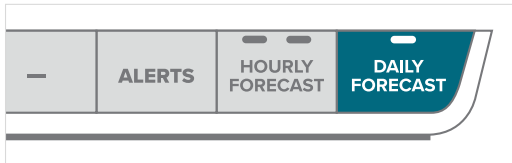

Daily Forecast


- Hold the **DAILY FORECAST** button to scroll through 7 days of future forecasts. When scrolling, press the **DAILY FORECAST** button to stop the scroll and return to main display.
- Press and release the **DAILY FORECAST** button to view each day individually.

Hourly Forecast


- Hold the **HOURLY FORECAST** button to scroll through 12 hours of future forecasts. When scrolling, press the **HOURLY FORECAST** button to stop the scroll and return to main display.
- Press and release the **HOURLY FORECAST** button to view each hour individually.

Day/Night Forecast

When connected to Wi-Fi, the sun icon appears in daylight hours, and the moon icon appears during nighttime hours if the forecast is for sunny or partly sunny.

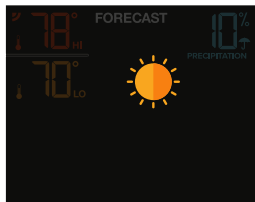

Sun (7:00am to 7:00pm)

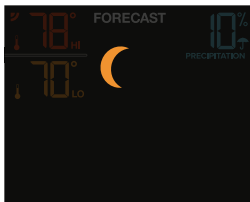


Moon (7:00pm to 7:00am)

- The times the sun and moon icons appear are pre-programmed and cannot be adjusted.
- The station must be connected to Wi-Fi to activate the day/night forecast feature.

PRESSURE

Relative Pressure

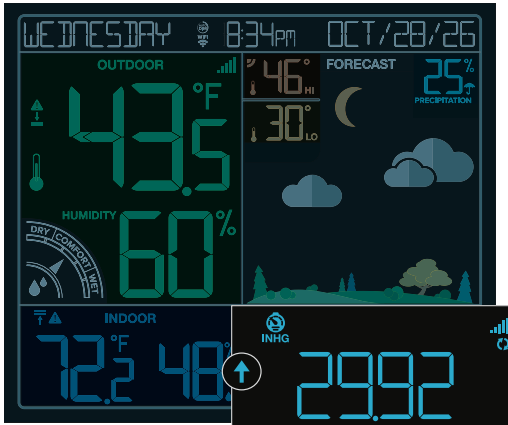

- Your Relative Pressure reading will come from your station's internal barometer.
- Please allow up to 10 days for automatic calibration, or program your local pressure value in the Settings Menu.
- The arrows located to the left of the values represents Pressure Tendency (↑/↓).
- Select your desired unit of measurement (hPa or InHg) in the Settings Menu. You can also set a specific pressure number setting if desired.

Note: The default pressure reading is 1013 hPa (29.91 InHg). The station will acclimate on its own if the pressure number is not set.

SENSORS

Sensor Placement & Mounting




- Insert a mounting screw through the hole at the top to securely mount the sensor. It can also hang from the back using a nail.
- Mount the sensor vertically in a protected well-shaded area. Keeping it out of direct weather elements such as sunlight, rain, snow, etc. will help avoid inaccurate readings.
- The maximum wireless transmission range to the display is up to 400 feet (121.92 m) in open air, not including walls or floors.
- For additional protection against weather elements, a Sensor Weather Shield (bit.ly/weather-shield) is available for purchase.
- For video instructions, visit: bit.ly/th_sensor_mounting



SENSORION SENSOR: This thermo-hygro sensor features a sensorion chip, which provides improved temperature & humidity readings, unrivaled accuracy tolerances, and faster data transfer.

Add-On Sensors

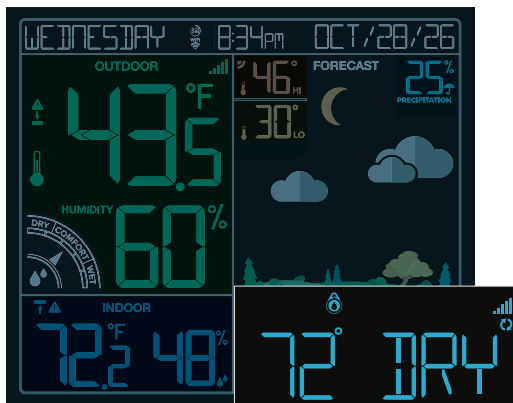

* Water Leak Sensor shown as example, sensor not included

Whether you choose to connect to the La Crosse View app or not, this station can display data for up to 4 extra sensors. This data will appear in the light blue section on the LCD and in your La Crosse View app if connected.

Viewing Add-On Sensor Data



If you have multiple add-on sensors connected, press the **EXTRA SENSOR** button to cycle through the data you'd like displayed on the LCD. The Auto Scroll Icon (🔄) will appear if activated. This setting will also include relative pressure data in the cycle.

Adding Sensors to Your Station



1. Hold the **EXTRA SENSOR** button until the Sensor Reception Indicator  starts to animate.



Inside of Water Leak Sensor*



Top of Water Leak Sensor*

2. Install batteries into your sensor. If the sensor has a **TX** button, press it to force a transmission signal. This button is usually located in or near the sensor's battery compartment. The LED light on the sensor will flash once.



3. Your sensor should connect within the next 3 minutes. The Sensor Reception Indicator will show solid on the screen when a sensor is connected.

Note: **When first powering up, or after a factory reset, extra sensors should automatically connect to your station.**

SENSORS

Featured Add-On Sensors



MULTI-SENSORS

FEATURES MAY INCLUDE:

Wind Speed, Direction, Rainfall,
Temperature, and Humidity



THERMO-HYGRO SENSORS

FEATURES MAY INCLUDE:

Temperature & Humidity
LCD Display



WATER LEAK SENSOR

FEATURES INCLUDE:


Water Detection
Ambient Temperature



Display & App Screenshots
Featured: LTV-WSDTH04 & LTV-WSDRI



Display & App Screenshots
Featured: LTV-TH1 & LTV-TH2I

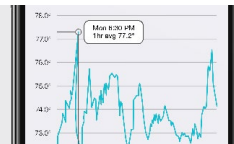

Display & App Screenshots
Featured: LTV-WL1



Expand Your System to Suit Your Needs

Find more add-on sensor options by scanning the QR code or visiting: bit.ly/v11_parts

SENSORS

Featured Add-On Sensors



RAIN SENSOR

FEATURES INCLUDE:

- Current Rainfall
- Rainfall Records

BBQ SENSOR


FEATURES INCLUDE:

- Two Hi-Temperature Probes
- Backlit Display & Storage Case


POOL SENSOR

FEATURES INCLUDE:


- Water Temperature
- Floating Design with LCD Display

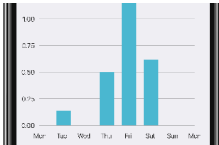

Display & App Screenshots
Featured: LTV-R3

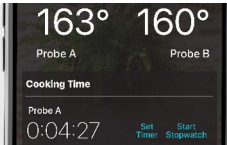

Display & App Screenshots
Featured: LTV-BB01

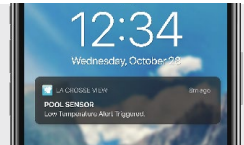

Display & App Screenshots
Featured: LTV-POOLV2

USE CASE: Check rain totals from last night's storm to help make adjustments to your lawn & garden watering schedule.

USE CASE: Set independent timers and alerts to monitor two steaks at the same time.

USE CASE: Place in a pool or hot tub to keep an eye on changes in water temperature.

Note: Feature sets may vary.

Specifications

STATION SPECIFICATIONS (V11)

Indoor Temperature Range: 32°F to 122°F (0°C to 50°C)

Indoor Humidity Range: 10 to 99%RH

Relative Pressure Range: 23.62 to 32.48 InHg
(800 to 1100 hPa)

Power Requirements:

- **Primary Power:** 5.0V Adapter (included)
- **+ Battery Backup:** 1 “CR2032” Coin Cell Battery (included) *Saves time/date when station is unplugged*

The plug on the power adapter is intended to serve as the disconnect device, the socket-outlet shall be installed near the equipment and shall be easily accessible.

LCD Brightness: 4 Intensity Levels + OFF

(Programmable Auto-Dim Backlight Option)

Language Options: English, Spanish, and French

(Translation Available for Menus & Calendar)

Dimensions: 7.80 in L x 1.22 in W x 6.44 in H)

SENSOR SPECIFICATIONS (LTV-TH5i)

Outdoor Temperature Range: -40°F to 140°F
(-40°C to 60°C)

Outdoor Humidity Range: 10 to 99%RH

Transmission Range: 400 feet (121 Meters) open air

Power Requirements: 2 “AA” Batteries (not included)

Dimensions: 1.97 in L X 0.77 in W X 5.71 in H

Wi-Fi NETWORK REQUIREMENTS

Broadcast Frequency: 2.4GHz (802.11 b/g/n)

Network Name/Password: Must Not Exceed 45 Characters

Network Speed: Must Be Greater than 1 Mbps


Note: If you have multiple band router, this device will connect to the **2.4GHz** band when connecting to Wi-Fi.

MOBILE REQUIREMENTS

Apple phones require iOS with cellular or Wi-Fi service.

Android phones require Android OS with cellular or Wi-Fi service.

Dimensions

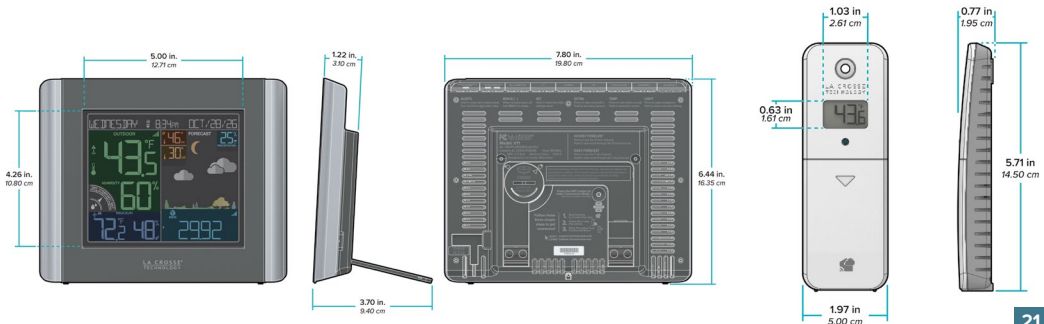

Coin Cell Battery



WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as 2 hours.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN.**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any body part.



WARNING: KEEP OUT OF REACH OF CHILDREN



1. Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the esophagus.
2. If you suspect your child has swallowed or inserted a coin cell battery, immediately seek urgent medical assistance. Call a local poison control center for treatment information.
3. Examine devices and make sure the battery compartment is correctly secured, e.g., that the screw or other mechanical fastener is tightened.
4. Do not use if compartment is not secure.
5. Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
6. Flat batteries can still be dangerous. Even used batteries may cause severe injury or death.
7. Tell others about the risk associated with coin cell batteries and how to keep their children safe.



INGESTION HAZARD:

This product contains a button cell or coin battery.

WARNING:

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Coin cell battery type: CR2032 (3Vdc x 1).
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (140°F (60°C)) or incinerate. Doing so may result in injury due to venting, leakage, or explosion resulting in chemical burns.
- Ensure batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

Battery Replacement Instructions

When batteries of different brand or types are used together, or new and old batteries are used together, some batteries may be over-discharged due to a difference of voltage or capacity. This can result in venting, leakage, and rupture and may cause personal injury.

- Do Not Mix Old and New Batteries.
- Do Not Mix Alkaline, Standard, or Rechargeable Batteries.
- Always purchase the correct size and grade of battery most suitable for the intended use.
- Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from product(s) during periods of non-use. Battery leakage can cause corrosion and damage to this product.
- Remove used batteries promptly.
- For recycling and disposal of batteries, and to protect the environment, please check the internet or your local phone directory for local recycling centers and/or follow local government regulations.

Replace the Coin Cell Battery

1. Use a screwdriver to turn the battery cover to the left to remove it.
2. Pull back the metal pin and gently remove the battery.
3. Insert a fresh CR2032 battery with the + side up and snap it into place.
4. Replace the battery cover and use the screwdriver to turn it to the right to lock.

  **WARNING: CHOKING HAZARD—Small Parts**
Not for children under 3 yrs.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with the instructions provided and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and consider removing the no-collocation statement.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Canada Statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. & other countries. App Store is a service mark of Apple Inc.

Google Play and the Google Play logo are trademarks of Google Inc.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical, or chemical process without the written permission of the publisher. This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.

Having Trouble? We're here to help.

To find answers to FAQs and additional self-help options, scan the QR code or go to: [bit.ly_v11_support](https://bit.ly/v11_support)

If you need additional support, get in touch with our friendly customer support team:

Online: bit.ly/contact_techsupport

Phone Number: **1.844.200.8752**

Representatives are available Monday-Friday, 8:00am to 6:00pm CST



Scan for Additional
Info and Support

Warranty

La Crosse Technology Ltd. provides a 1-year limited-time warranty on this product relating to manufacturing defects in materials & workmanship. Per the Song-Beverly Act, in the state of California, the warranty on this item becomes effective on the date of delivery.

For full warranty details, visit:

www.lacrossetechnology.com/pages/warranty

Patents: www.lacrossetechnology.com/patents

La Crosse Technology, Ltd.

2830 S. 26th Street, La Crosse, Wisconsin 54601

Factory Reset



If you are experiencing issues, press and hold the **LIGHT** and **DAILY FORECAST** buttons down together until the display beeps. You do not need to remove the coin cell battery to restart the station.

⚠ WARNING: This product can expose you to chemicals including acrylonitrile, 1, 3-butadiene, and styrene, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to: www.P65Warnings.ca.gov

Recycling & Disposal

Please consider the environment when deciding to dispose of this product. Although household electronics are generally safe to use on a daily basis, incorrect disposal can cause negative and potentially irreversible impacts on our environment.

Check with local donation centers to see if your product can be donated for future use. If disposal is the only option, federal agencies, local governments, and certified retailers may have electronic recycling programs in place. Programs may vary based on location.

Stay in Touch

Ask questions, watch set up videos, and provide feedback on our social media outlets. Follow La Crosse Technology on YouTube, Facebook, and Instagram.



LA CROSSE[®] TECHNOLOGY

DOUBLE YOUR WARRANTY



[Scan Here](#)

Scan the QR code above or visit bit.ly/v11_register to register your product and double the standard 1-year warranty for free by opting to receive occasional product emails.