

S7L-RL510

12 TON C-HEAD COMPRESSION TOOLS

OPERATOR MANUAL

SERIES 7R
PRO LINE



LINEMAN PROVEN
UTILITY APPROVED

SINCE 1976

WARNING To reduce the risk of injury, user must read and understand manual completely before first using this product and save this manual for future use

Huskie Tools is not affiliated with, authorized, or endorsed by Milwaukee Electric Tool Corporation. Milwaukee listed batteries and chargers are being re-sold by Huskie Tools. Milwaukee® M18™ REDLITHIUM™ are registered trademarks of Milwaukee Electric Tool Corporation. Huskie Tools is not affiliated with, authorized, or endorsed by Makita® Corporation. Makita® listed batteries and chargers are being re-sold by Huskie Tools. Makita® and LXT® are registered trademarks of Makita® Corporation.



**Huskie
TOOLS®**

**BUILT FOR EVERYTHING
THAT'S ON THE LINE.™**

HUSKIETOOLS.COM

PRE-USE CHECKLIST:

- Visually confirm there are no missing or broken components. If found, stop use and have the tool checked by a qualified technician.
- Check and ensure triggers are moving freely with no binding.
- Open and close latched head where applicable to assure proper function.
- Rotate head where applicable to ensure it rotates 270 degrees. If head rotates more than 270 degrees, stop use and have tool checked by a qualified technician.
- Please read the instructions supplied with the battery and charger.



**Thank you for purchasing
a Huskie Tools product.**

Our mission is to supply the finest cable connecting and cutting tools and cable-related products to the transmission and distribution markets. Huskie Tools products will represent state-of-the-art tools and be dependable and safe.

THE POWER TO CHOOSE.

TABLE OF CONTENTS

MODEL: S7L-RL510

Description	4
Safety Symbols	5
Safety Information	6
Operating Instructions	7
Troubleshooting Guide	8
Warranty Information	9

S7L-RL510

The S7L-RL510 battery operated 12-ton compression tool is designed with a jaw opening of 1.65" and will accept mid-span copper and aluminum splices and lugs up to 750 MCM Cu/Al.

WHAT'S INCLUDED

EACH TOOL KIT INCLUDES:

S7L-RL510 TOOL

BATTERY CHARGER

18V-5.0AH LI-ION BATTERY PACK (X2)

TOOL BAG

COMPONENTS

INTEGRATED LED WORK LIGHT

LOW BATTERY INDICATOR

ADVANCE TRIGGER

RELEASE TRIGGER

18V-5.0AH LI-ION BATTERY

SPECIFICATIONS

SPECIFICATIONS	
CRIMP FORCE	12 Ton
WEIGHT (WITH BATTERY)	17.8 lbs (8.07 kg)
DIMENSIONS (H X L X W)	10.5" x 22" x 3.5", 266 x 558 x 88 mm
JAW OPENING	1.65" / 41.9 mm

CONNECTOR RANGE	
LUGS & SPLICES	750 MCM Al/Cu

CRIMPING ESTIMATES (5.0Ah BATTERY)	
500 MCM COPPER 750 ALUMINUM	150 Cycles

Huskie Tools is not affiliated with, authorized, or endorsed by Milwaukee Electric Tool Corporation. Milwaukee listed batteries and chargers are being re-sold by Huskie Tools. Milwaukee® M18™ REDLITHIUM™ are registered trademarks of Milwaukee Electric Tool Corporation. Huskie Tools is not affiliated with, authorized, or endorsed by Makita® Corporation. Makita® listed batteries and chargers are being re-sold by Huskie Tools. Makita® and LXT® are registered trademarks of Makita® Corporation.

SAFETY SYMBOLS

You will see this  symbol throughout this manual. The purpose of this symbol is to call your attention to hazards and/or unsafe practices that have the potential to cause injury or property damage. The severity of each hazard is further explained in detail below. Failure to follow all instructions may result in electric shock, fire and/or serious injury. The term “power tool” in all warnings refers to your battery operated (cordless) power tool.

DANGER

Immediate hazards are present which will result in severe injury or death if not avoided.


CAUTION

Hazards or unsafe practices may result in injury or property damage if not avoided.

WARNING

Hazards are present that could result in severe injury or death if not avoided.

WARNING

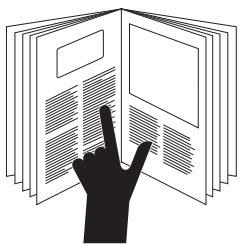

Read all instructions and safety information detailed in this operator manual prior to operating or servicing this tool. Failure to observe this warning could result in severe injury or death.

DANGER



Electric Shock Hazard:
Use appropriate personal protective equipment when using this unit on or near energized electrical lines.

DANGER




Pinch Point Hazard:
Remove battery before servicing.
Keep hands away from crimping head during cycle.

DANGER



Cutting Hazard:
Remove battery before servicing.
Keep hands away from cutting head during cycle.

CAUTION

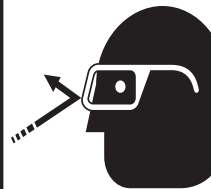

Wear Eye Protection:
Use safety glasses when operating or servicing this tool to prevent eye injury from flying debris.



**DO NOT DISCARD
THIS PRODUCT OR
THROW AWAY!**

FOR RECYCLING INFORMATION,
CONTACT 800-822-8837

SAFETY INFORMATION

DANGER

WORK AREA SAFETY

- Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep bystanders away while operating a power tool. Distractions can cause you to lose control.

CAUTION

PERSONAL SAFETY

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of distraction while operating power tools may result in personal injury.
- Use personal protection equipment. Always wear eye protection. Safety equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.

WARNING

TOOL USE AND CARE

- To prevent leakage, overheating, smoke generation, fire, and rupturing from occurring, follow these instructions when handling our rechargeable power tools (tool main body/battery pack/charger).
- Do not force the tool. Use the correct tool for your application. The correct tool will do the job better and safer at the rate for which it was designed.
- Do not use the tool if the switch does not turn it on and off. Any tool that cannot be controlled with the switch is dangerous and must be repaired.
- Disconnect the battery pack from the tool before making any adjustments, changing accessories, or storing. Such preventive safety measures reduce the risk of starting the tool accidentally.
- Store idle tools out of the reach of children and do not allow persons unfamiliar with the tool or these instructions to operate the tool. These tools can be dangerous in the hands of untrained users.
- Maintain tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the tools operation. If damaged, have the tool repaired before use.
- Use power tools only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- Under abusive conditions, liquid may be ejected from battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

Read the instructions supplied with the battery and charger.

OPERATING INSTRUCTIONS

COMPRESSION

1. Select the appropriate size dies for the connector being used.
2. Insert half of the die into the C-head by sliding it while pulling the release pin. Then insert the other half of the die into the ram while pressing the other die release pin. **(Figure 1 & 2)**
3. Press the trigger to activate the tool and advance the ram so the connector is held between the dies. Once the connector is securely held, place the conductor into the connector.
4. Press and hold the trigger until the compression is completed. **(Figure 3)** The ram will advance and once the cycle is complete, the tool will automatically shut off and retract.
5. If the tool is stopped prior to the auto-retract feature being activated, press the release button to retract the ram. **(Figure 4)** The ram continues to retract while the release button is pressed. The ram stops when it reaches the lower end.
6. If there is no battery power or tool cannot be released with release button, there is a manual release lever located under the tool and accessed by removing rubber plug. **(Figure 5)**
7. Remove the conductor from the tool.



Figure 1



Figure 2



Figure 3



Figure 4

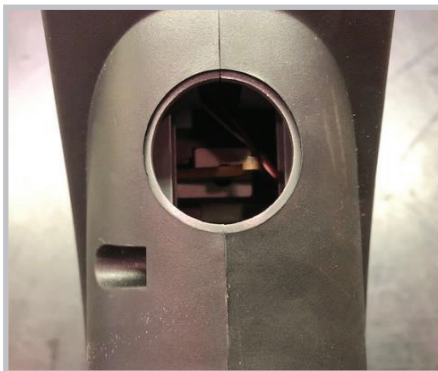


Figure 5

TROUBLESHOOTING GUIDE

BEFORE YOU BEGIN

1. Make sure that the battery is charged. Recheck the battery after several minutes to make sure the battery is holding its charge.
2. Use a nonflammable contact cleaner or pencil eraser to clean the electrical contacts on the battery and tool.
3. Reinstall the battery and check the tool again.

REC-MK754M		
PROBLEM	CAUSE	SOLUTION
Motor runs but the tool jaws will not advance	Insufficient hydraulic oil	Consult factory for repair service
	Air block in hydraulic system	Invert tool to allow air to rise towards the top of the oil bladder
	Defective hydraulic circuit	Consult factory for repair service
Motor runs, tool jaws advance, but will not build pressure	Insufficient hydraulic oil	Consult factory for repair service
	Defective suction valve or bypass cartridge	Consult factory for repair service
Motor will not run at all	Defective battery	Charge or replace battery
	Bad contact or loose battery connections	Check all connections and wires
	Misaligned switch	Check to make sure that switch is properly aligned with trigger
		Consult factory for repair service
Tool jaws will not release	Tool did not complete a full cycle and bypass	Press trigger and allow tool to bypass, then release tool jaws
	Connector is jammed in tool jaws	Press and hold release trigger while prying tool jaws apart
	Release trigger is bent or misaligned	Consult factory for repair service

WARRANTY INFORMATION

SL-SERIES BATTERY OPERATED PRODUCTS	5 YEARS
REC-SERIES BATTERY OPERATED PRODUCTS	5 YEARS
IL-SERIES BATTERY OPERATED PRODUCTS	3 YEARS
ECO-SERIES BATTERY OPERATED PRODUCTS	1 YEAR

BATTERIES

48-11-1820, 48-11-1850	3 YEARS
------------------------	----------------

CHARGERS

48-59-1812, 48-59-1810	3 YEARS
------------------------	----------------

The warranty does not cover any damages incurred from a Huskie tool including damages to property, bodily injuries and lost wages resulting from such injuries. This warranty solely covers the repair or replacement of tools supplied by Huskie. These remedies are exclusive, and the total liability of Huskie Tools, LLC whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the tool. In no event, shall Huskie Tools, LLC be liable for consequential, incidental or special damages.

HUSKIE TOOLS, LLC MAKES NO OTHER WARRANTIES OF ANY KIND, EXPRESSED OR IMPLIED, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED.

Huskie reserves the right to determine all warranty claims. Huskie will not warranty tools containing parts or batteries not originally supplied by Huskie. Failure due to misuse, improper maintenance, misapplication, not following instructions or warnings, abuse or repairs attempted by anyone other than Huskie Tools, LLC, or an authorized service center renders this warranty null and void.

REPAIR AND WARRANTY CLAIMS

All claims must be sent to Huskie for inspection and authorization. A Return Goods Authorization (RGA) is required before shipping tools to Huskie. Secure the authorization by telephoning or writing to Huskie's main office with details of the claim. Non-warranty repairs are handled using the same procedure. Repairs exceeding 50 percent of the cost of a new tool will be advised before repairs are made.

MAINTENANCE NOTES

MAINTENANCE NOTES



**Huskie
TOOLS®**

**2105 W. CORPORATE DR STE B
ADDISON, IL 60101-1470**

**PHONE 800-860-6170
FAX 800-345-3767**

HUSKIETOOLS.COM

Huskie Tools reserves the right to change this information without further notice and holds no liability for printing errors in this content.

Copyright © 2021 Huskie Tools, Inc. All Rights Reserved.