

# SOTTO



## Under Counter Ceramic Basin

**Model: Z5334**

Under Mount Basin

Size: 525x345x185mm

### Specifications & Data

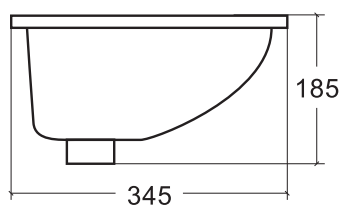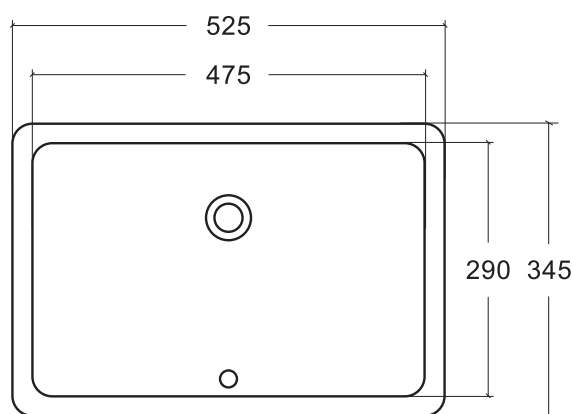

**Tap Hole:** N/A

**Waste Outlet:** 32mm Ceramic Matching Color Pop Up waste with 40mm Adapter

**Bowl Capacity:** 13 L

**Finish Colors:** Gloss White

**Over Flow:** YES

**Fixing:** Ceramic Pop Up Waste


**Dimension:** All dimensions are in millimeters and are subject to normal manufacturing variations.

# INSTALLATION INSTRUCTIONS



*Great Services, Great Design, Great Product*

## Ceramic Undermount Sink

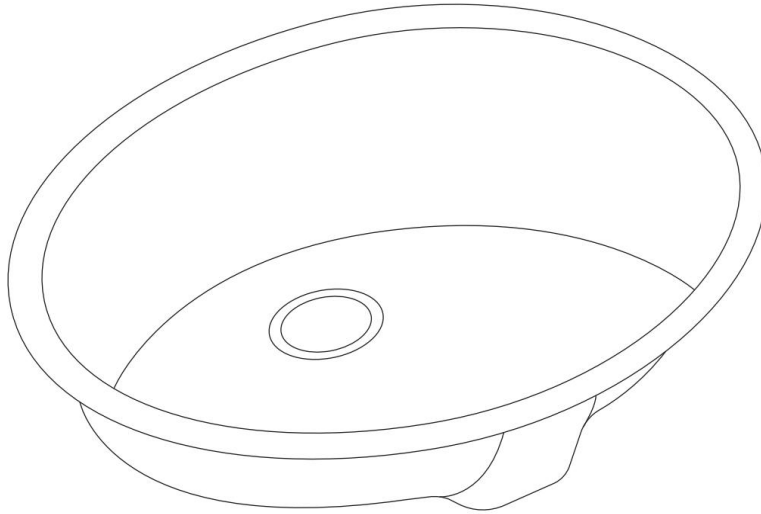

### Prior to Installation:

- Inspect basin to ensure no damages have occurred while in shipping.
- Observe all plumbing and building codes in accordance with your state and local requirements.
- Additional floor and wall preparations may be necessary to avoid damage to the product.
- We recommend professional countertop installers. Customer is responsible for damage to countertop and/or basin during installation.
- All dimensions are nominal! Be sure to measure your sink prior to installation.

**General Recommendations:** Read installation and maintenance instructions thoroughly before installing the basin. Be sure to use proper tools and always wear proper personal safety accessories for your protection.

### SUGGESTED TOOLS AND MATERIALS

- Towel
- Drill
- Adjustable Wrench
- Jig Saw
- Gloves
- Liquid Nail
- Safety Glasses
- Pencil
- Tape Measure




## 1. Clean Countertop

- Make sure to thoroughly clean the underside of the countertop and let it dry completely.

**NOTE:** The underside of counters tend to be rough and unfinished which makes it easy to hold debris. You want to make sure it's clean so nothing interferes with the bond between the adhesive and the countertop.

## 2. Position and Trace Sink

- Flip sink upside down on top of countertop in the desired location you want the basin to be.
- Trace the outline of the basin onto the countertop.

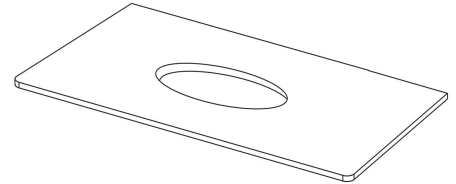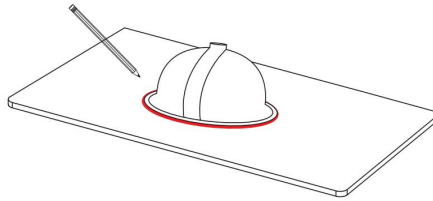
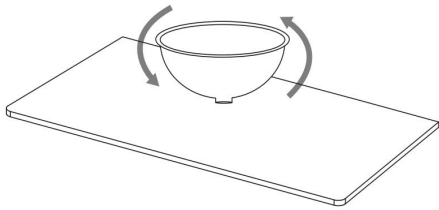


## 3. Cut Countertop

- Cut an opening in the countertop by carefully following the traced line.
- Please use the appropriate saw that best fits your countertop material.
- Professional should be consulted for cutting the countertop.

## 4. Affix Countertop

- Once again clean underside of the countertop and cutout area making sure area is free of defects.
- Apply liquid nail or adhesive of choice to the rim of the sink near the inside edge. Be careful not to miss or skip any area.
- Carefully lift sink squarely under countertop cutout. Press firmly on sink to form seal and seal sink. Immediately wipe excess sealant with a damp cloth. Be careful not to smear or spread sealant onto countertop or sink.

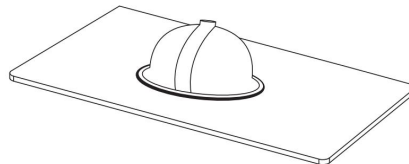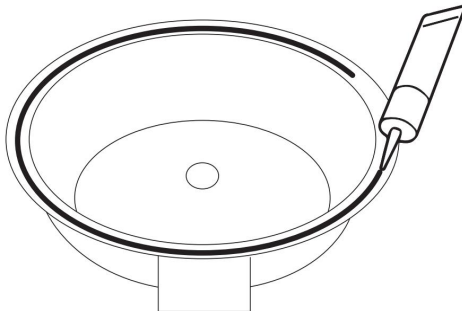

## 5. Installing Plumbing Fixtures

- Turn counter back over.
- Connect drain, trap to drain, and water supply connections to faucet according to manufacturer's instruction.
- Test run water into sink and check for leaks.