




# PROFESSIONAL SERIES DIGGING TOOLS



## TiiGER®

### ASSEMBLY INSTRUCTIONS


**1 Remove the Barrel and Bolt Sets:**  
Unscrew the two barrel and bolt sets near the end of the joint by hand. No tools are required, as they are finger-tight.

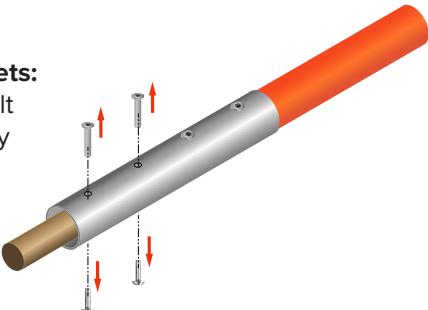

**2 Insert the Extension Pole:** Slide the extension pole into the base pole, ensuring the holes in the pole and steel tube are properly aligned.

**3 Insert Barrel and Bolt:** Push the barrel into one end and the bolt into the opposite end. Start threading the bolt by hand.

**4 Tighten:** Use two Allen keys—one on each side—to securely tighten the bolt and barrel.

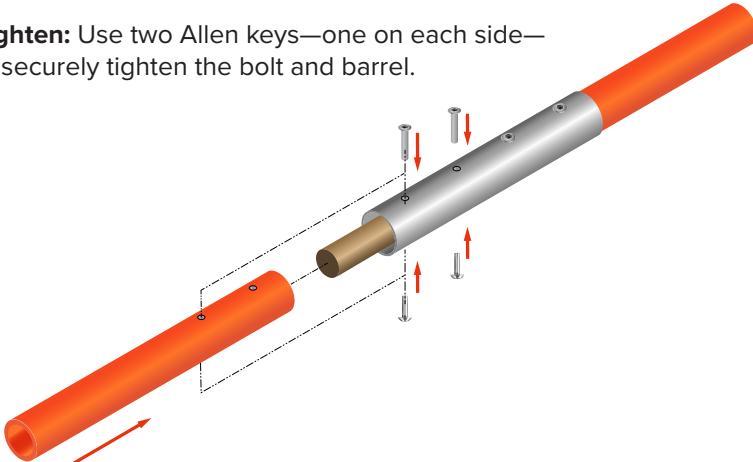

PD-M202601-A  
Rev. 01-26