

Zen SS316L

Single Towel Rail


800mm

Nero



25 YEARS WARRANTY
25
25 YEARS WARRANTY

Versions:202405

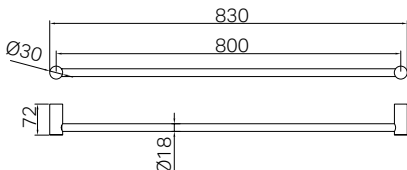
Drawing	Features	Packaging Includes							
	<ul style="list-style-type: none">- 316L grade stainless steel construction for durability- Easy to install	1x Single Towel Rail							
	<h3>Finish & SKU</h3> <table><tr><td></td><td>Brushed Bronze NR1630BZ</td><td></td><td>Graphite NR1630GR</td></tr><tr><td></td><td>Brushed Gold NR1630BG</td><td></td><td>Brushed Nickel NR1630BN</td></tr></table>			Brushed Bronze NR1630BZ		Graphite NR1630GR		Brushed Gold NR1630BG	
	Brushed Bronze NR1630BZ		Graphite NR1630GR						
	Brushed Gold NR1630BG		Brushed Nickel NR1630BN						

*Dimensions are nominal measurements only.


Installation Instruction

GENERAL PRECAUTIONS AND WARNINGS


- Before installation, make sure the wall surface is clean and dry to ensure a secure attachment.
- When tightening screws, do not apply excessive force to prevent damage to the wall or the fixtures.
- Use the correct tools: a drill with a 6mm bit, screwdriver, and level.
- Wear appropriate safety gear, such as gloves and safety glasses, to protect yourself during installation.
- Before drilling, check the wall for any hidden pipes or electrical wires to avoid accidental damage.
- Ensure all measurements are accurate before drilling holes to prevent misalignment of the accessories.

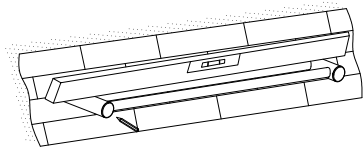


1. Place the towel rail in the desired installation position. Use a level to ensure it is horizontal. Mark the positions directly below the bases with a marking pen.

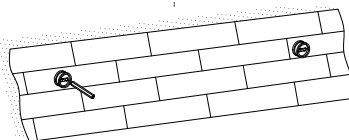


2. Position the fixing blocks at the marked spots. Mark the drilling points through the fixing block holes.

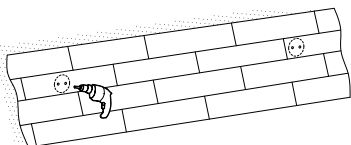


3. Use an electric drill with a 6mm drill bit to drill holes at the marked points.

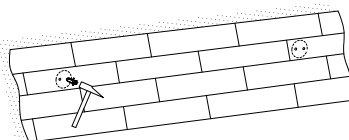

4. Insert the expansion plugs into the drilled holes using a hammer.

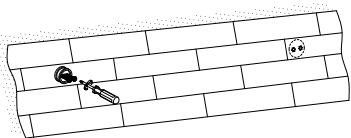

5. Place the fixing block covers over the holes and secure them firmly with expansion screws.

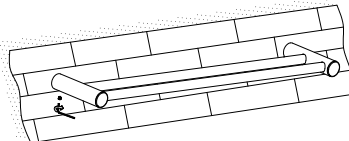

6. Install the towel rail onto the fixing blocks. Tighten the grub screws into the base to secure it tightly and firmly against the fixing blocks.