

CAROMA

INSTALLATION INSTRUCTIONS

Important information

- * This product must be installed by a licensed tradesperson.
- * The floor penetration must be sealed using a method compatible with the waterproofing system and installed in accordance with AS3740 and local plumbing regulations.
- * Waterproofing around the floor penetration must use an AS3740-compliant method suitable for the waterproofing system being used.
- * This is a general guide. The floor waste must be installed in accordance with the waterproofing requirements of AS3740.

STANDARD FLOOR WASTE


SHOWER HARDWARE

Care instructions

- **DO NOT USE** abrasive cleaning pads, cream or citrus-based cleaners
- Damage from improper cleaning & handling is not covered by warranty


Step 1

Waste pipe protrudes through the base floor material.

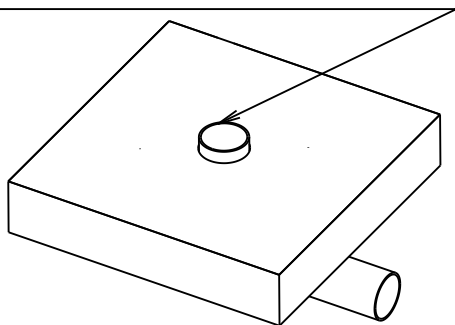


Step 2

Apply the waterproofing membrane in accordance with AS3740, ensuring the pipe penetration is sealed using a method approved by the waterproofing system manufacturer.

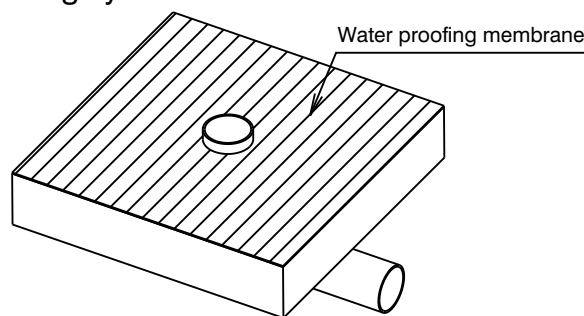


Step 3

Apply a screed layer & form screed falls toward the floor waste.

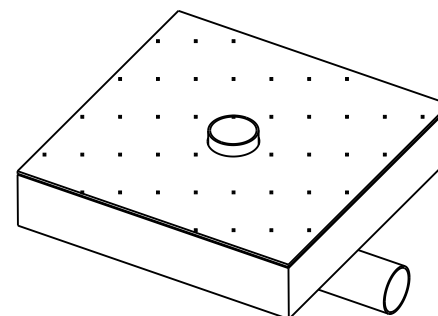

Step 4

Apply a layer of tile adhesive & firmly lay the tiles in position leaving a square around pipe; 60x60mm for DN50, 88x88mm for DN80 & 110X110mm for DN100.

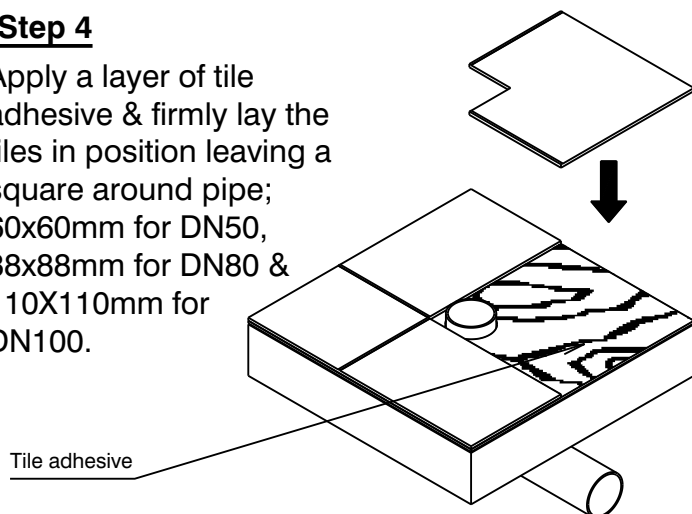


Step 5

Cut PVC pipe 3mm below tile finish face.


Fit the floor waste body to the waste pipe using an approved connection method. Ensure it is aligned level with the tile surface.

Apply grout to tiles.

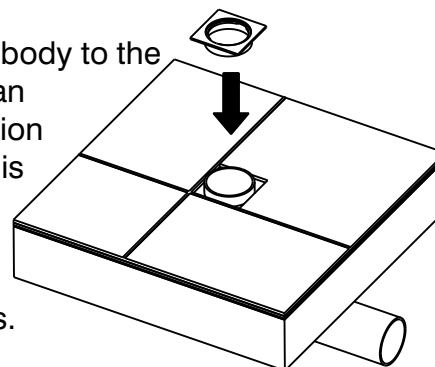

Step 6

Place the grate and turn clockwise until it locks into position*.

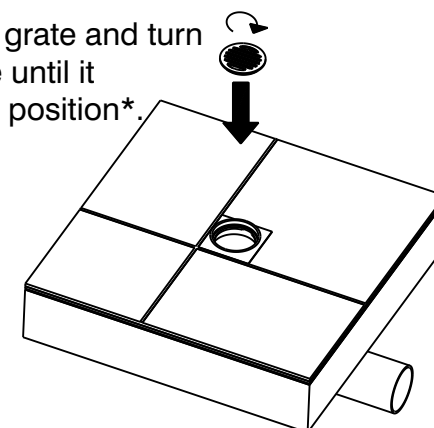

*Applicable only for DN80 & DN100 wastes.