
Concealed Fix Mortice Knob Fitting Instructions

These knobs can be face-fixed with the wood screws provided, or fixed through the door using the connector bolts. The connector bolts provide a stronger fixing method and we recommend their use where the lock or latch fitted (supplied separately) has a bolt-through hole.

The following instructions are provided for use with connector bolts, however can be easily applied to a face-fixing application.

Connector Bolt-Fix

1. Unscrew the inner fitting plates from the base of each door knob.
2. Place spindle through the follower of the previously installed lock or latch and place the inner fitting plates over the spindle ends, marking the fitting plate screw holes with a pencil.
3. Once holes are marked, set the inner fitting plates to the side and drill the fixing holes.
4. Drill all the way through to the other side of the door.
5. Take a connector bolt and place the short screw section through one of the inner fitting plate holes.
6. Screw the female shaft of the connector bolt onto the thread of the short screw so that it is held in place on the inner fitting plate. Repeat steps 4 and 5 for the desired number of connector bolts.
7. Place the inner fitting plate (with connector bolts attached) over the lock or latch and slide bolts through the pre-drilled holes.
8. Take the second inner fitting plate and place over the lock/latch on the other side of the door, lining up the pre-drilled holes.
9. Place the longer connector bolt screw through the holes in the inner fitting plate and thread into the female shaft inside the door.
10. Tighten the connector bolts.
11. Place knobs over either end of the spindle, screw the bases onto the inner fitting plates and test the operation of the knobs.

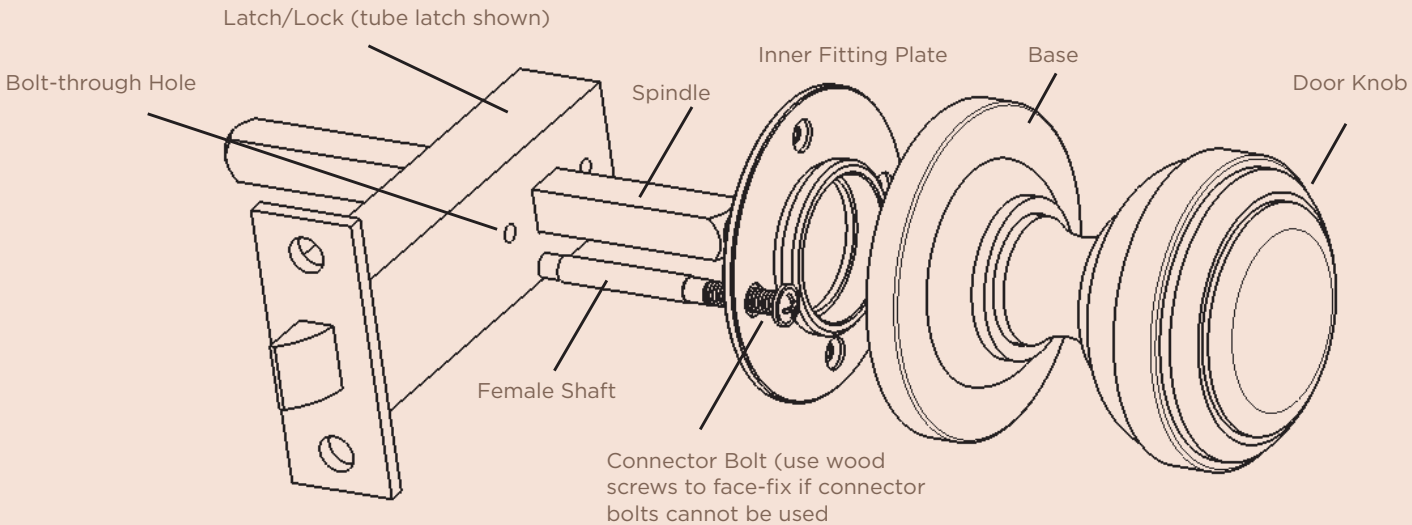

Contents

2 x Door Knobs (one set)
4 x Connector Bolts
2 x Inner Fitting Plates
8 x Wood Screws
2 x Sprung Spindles (two halves)
1 x Regular Spindle

@iver_life
iver-life.com

Certified B Corporation
Learn more at bcorp.com