Install Instructions

Lever on Backplate
Privacy

Southern Design Group
Australia
14 - 16 Stepney Street,
Stepney, South Australia 5069
P: +61 (0)8 8362 1133
info@iver.com.au
iver-life.com/au

New Zealand
P: +64 (0)6 359 0008
info@iver.co.nz
iver-life.com/nz

SDG Trading Pty Ltd
trading as Iver
ACN 008 154 041
ABN 18 008 154 041

iver

Certified B Corporation
Learn more at bcorp.com

IVERO18

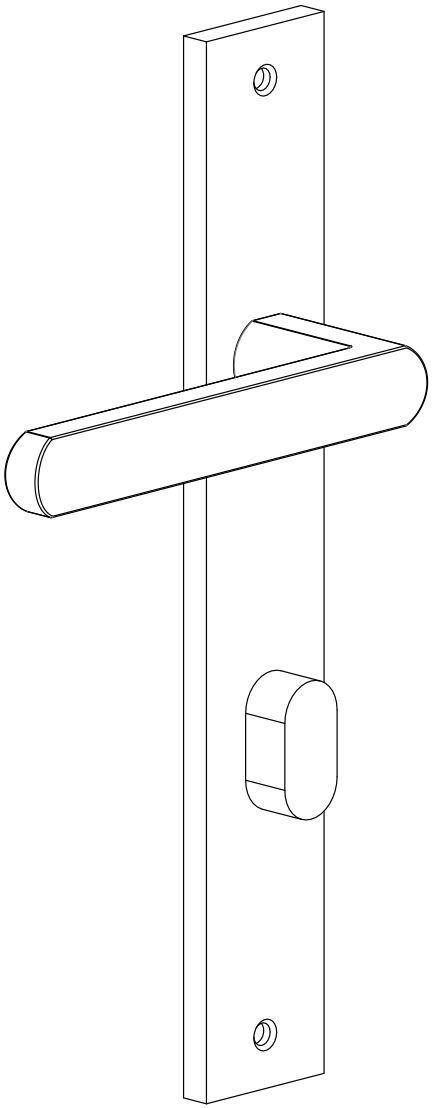


Image for illustration purposes only.

1. Marking the Door

1.1. Mark the edge of your door at the desired height of your lever.

1.2. We recommend around 900mm – 1100mm from floor level, or at the centre of a lock rail on a panel door. (Figure 1)

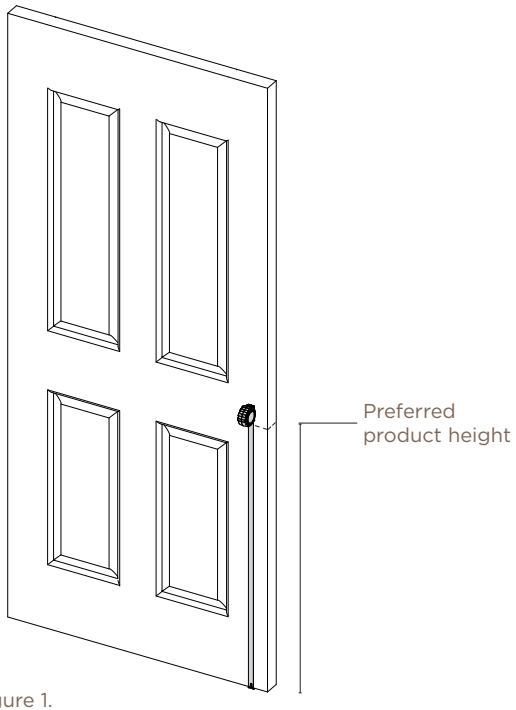


Figure 1.

1.3. Using a spirit level, mark the door at the desired lever height, continuing the line from the front of the door, around the edge and onto the back of the door. (Figure 2)

1.4. We recommend extending the line 100mm onto each face of the door.

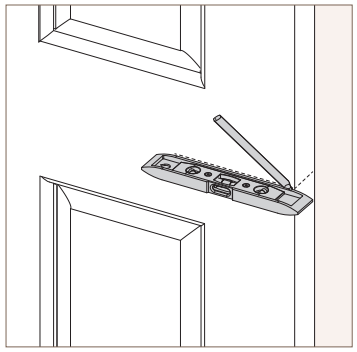


Figure 2.

2. Install Latch, Privacy Bolt & Striker Plates

As per supplier instructions, resources available at iver-life.com/au/resources.

3. Prepare Tie Bolts

— if using face fix timber screws, proceed to step 4

3.1. If required, shorten tie bolts to suit door thickness. (Figure 3)




Figure 3.

3.2. Ensure to cut so that the screw does not protrude from the opposite plate once installed. (Figure 4)

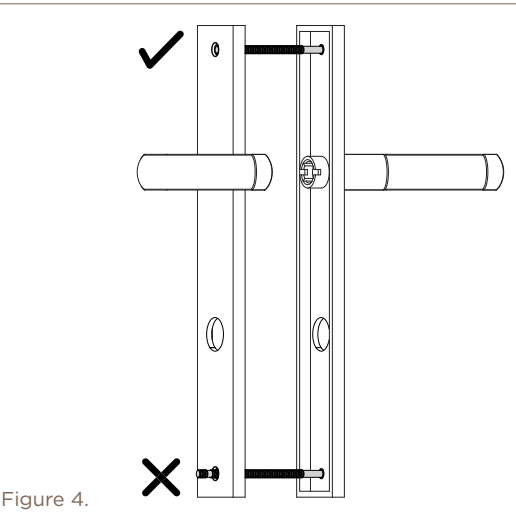


Figure 4.

4. Install Privacy Adaptor Snib Release

4.1. Slide spring over snib neck and place neck through hole in internal backplate. (Figure 5)

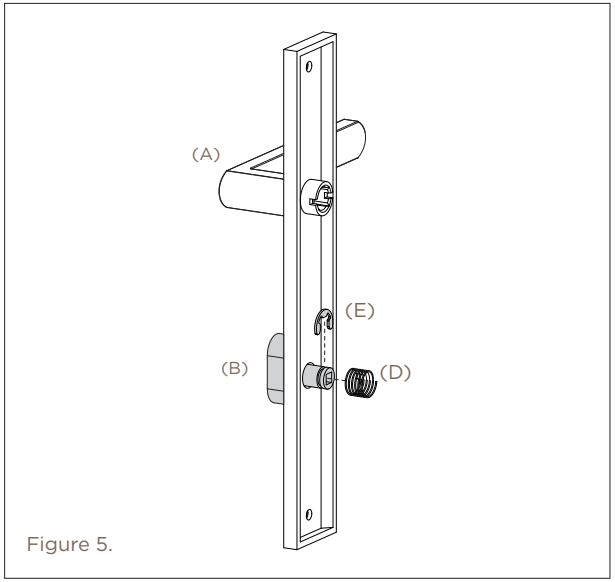


Figure 5.

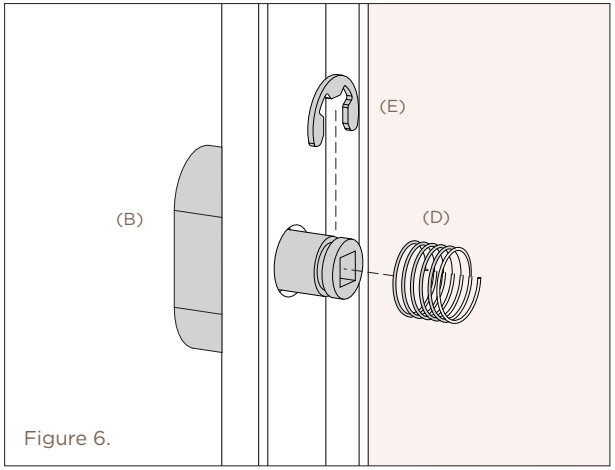


Figure 6.

4.2. Affix circlip to groove in snib neck on inside of backplate. (Figure 6)

4.3. Repeat for emergency release on external-facing backplate.

5. Install Levers

5.1. Place the split spindles into the lock body from either side of the door*.

5.2. Place privacy spindle through privacy bolt follower.

5.3. Align the halves with the lever and privacy spindles on either side of the door. Push until flush with the door, ensuring the levers function in the correct direction.

5.4. Insert male tie bolts through top and bottom of backplate, OR

5.5. Affix wood screws at all fixing points.

5.6. Place the female sections in the opposite holes, lining them up with the male thread. (Figure 7)

5.7. Secure loosely by hand, then use a screwdriver to hold the female section while tightening the male section with a second screwdriver.

—

* Regular spindle also provided


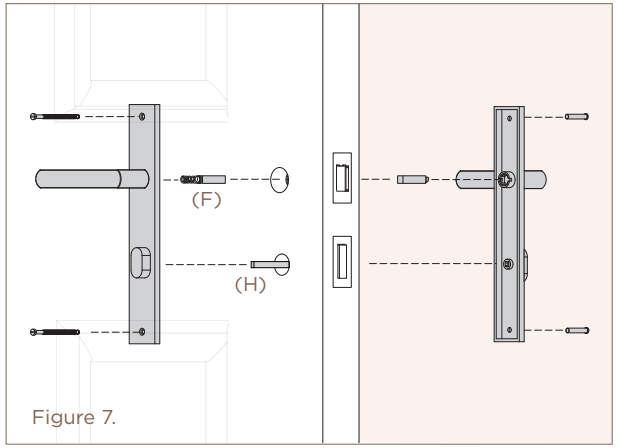



Figure 7.

Wood Screws

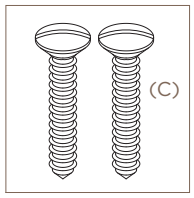


Included

(A) Backplate Privacy Lever Set x 1
(B) Privacy Snib x 1
(C) Emergency Release x 1
(D) Springs x 2
(E) Circlip x 2
(F) Split Spindle x 2
(G) Wood Screws x 2
(H) Privacy Spindle x 1
(I) Tie Bolts x 2
(J) Standard Spindle x 1

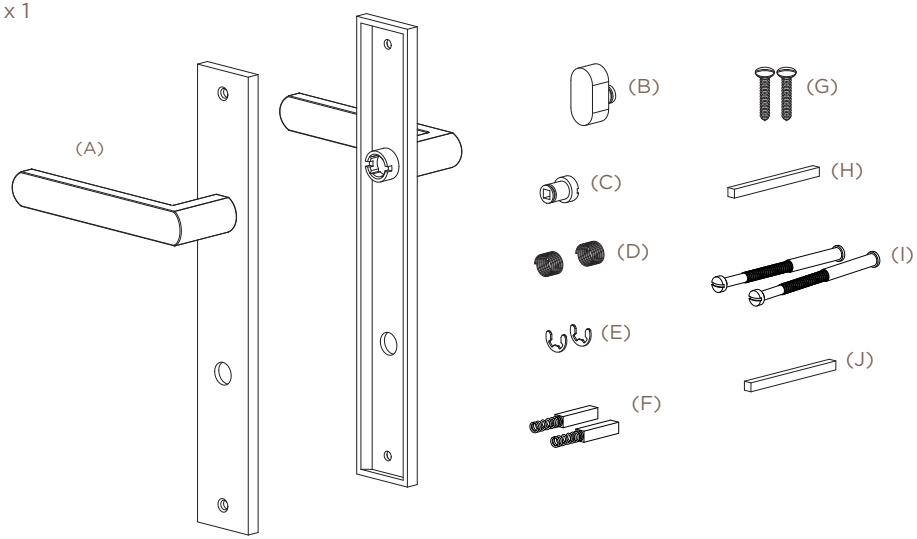

Backplate Privacy Set

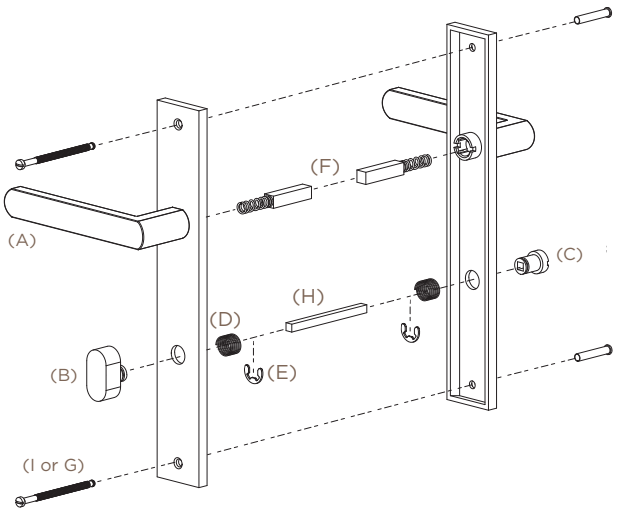

Important

The screws provided with Iver products are made from solid brass. This allows finishes to be matched as closely as possible and prevents the possibility of screws rusting in coastal areas. Please note that screws require **pre-drilling**. Please take extra care when fitting.

Please install this door hardware in the following order to ensure its warranty is not voided.

1. Install the door hardware on raw / unfinished door using the instructions provided.
2. Remove door hardware and store safely. Do not place painters tape or masking tape over the product. The tape will damage the finish.
3. Paint / finish door.
4. Reinstall hardware.

Warranty

Product & Finish Care Information

Drill Template

Please recycle me after use