

Dolce Bathroom Accessories

Versions:202506

Finish



Chrome




Matte Black




Brushed Nickel

Dolce Bathroom Accessories


ROBE HOOK
NR3682CH/NR3682MB/NR3682BN

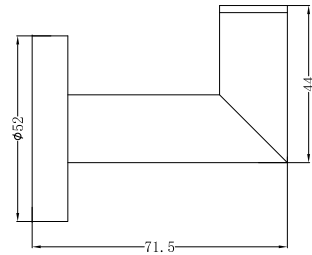


DOLCE HAND TOWEL RAIL
NR3680CH/NR3680MB/NR3680BN

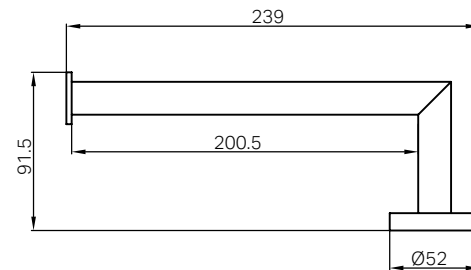


DOLCE SINGLE TOWEL RAIL 900MM
NR3630ICH

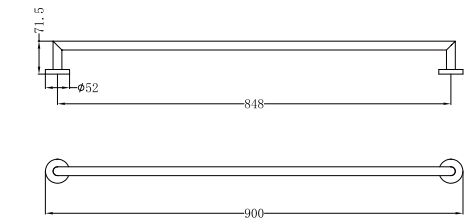


DOLCE DOUBLE TOWEL RAIL 900MM
NR3630dICH

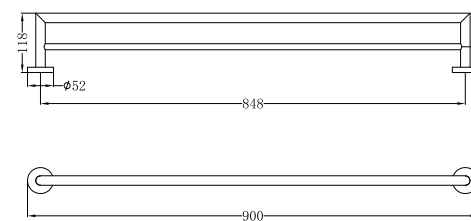


DOLCE TOILET BRUSH HOLDER
NR3688CH

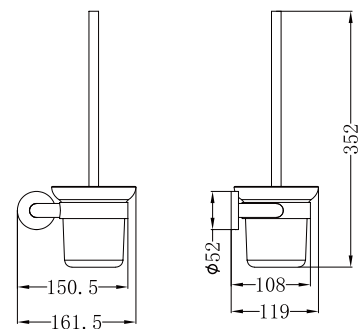


DOLCE SINGLE TOWEL RAIL 700MM
NR3630CH/NR3630MB/NR3630BN

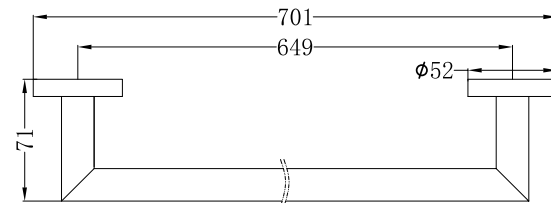


DOLCE TOILET ROLL HOLDER
NR3686wCH/NR3686wMB/NR3686wBN

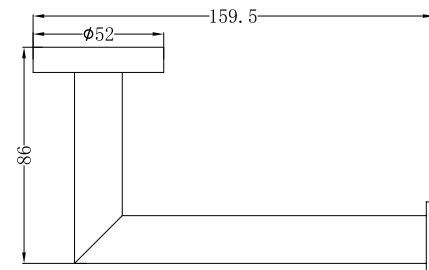


DOLCE DOUBLE TOWEL RAIL 700MM
NR3630dCH/NR3630dMB/NR3630dBN

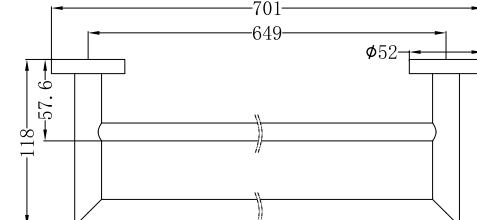


DOLCE METAL SHOWER SHELF
NR3687aCH/NR3687aMB/NR3687aBN

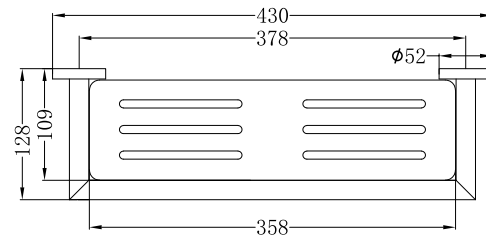


Installation Instruction

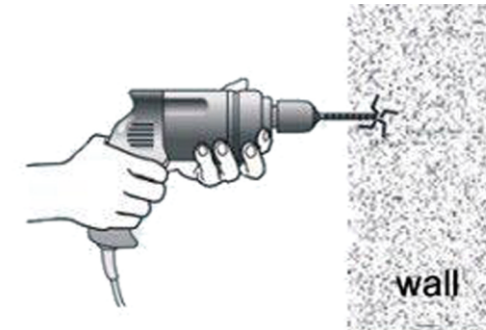


1. Put the fixing blocks (piece) over on the right place on the wall , and stay level, use marking pen through the holes of fixing block to mark out fixing spots on the wall. Then drill holes by electric hand drill with 6mm drilling bit on the spots.

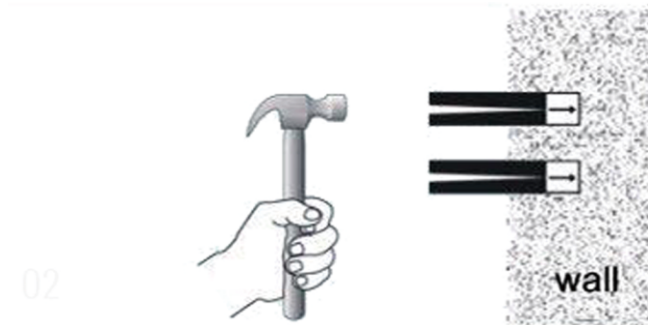


2. Put the expansion plugs into the wall by hammer.

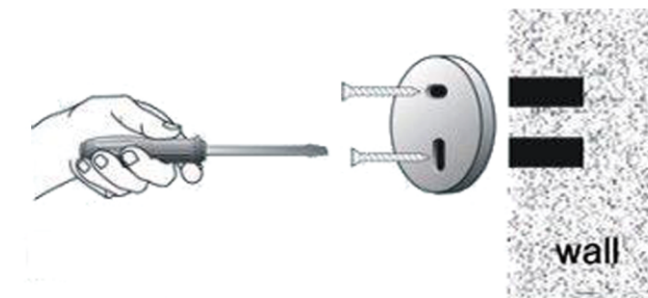

3.Put fixing block cover on the holes and fix firmly by expansion screws.

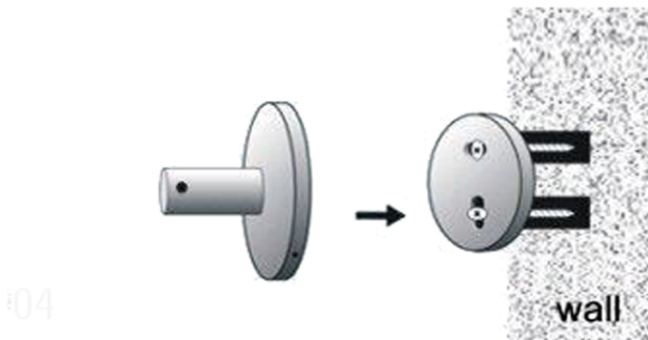

4. Put the base of bathroom accessory cover on the fixing blocks.

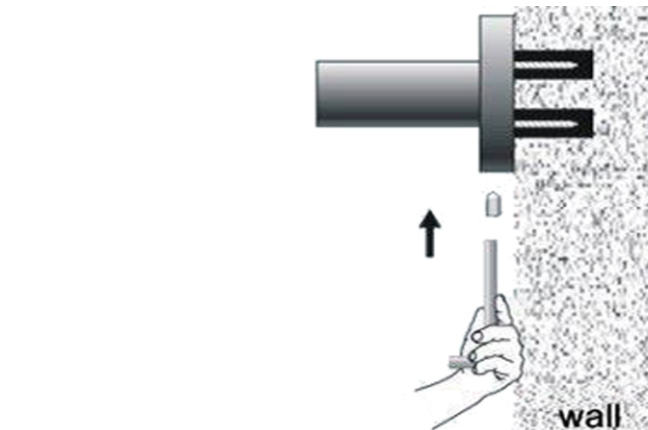

5. Screw grub screws into the base, make it against to the fixing block tight and firm.

Nero

