


Dolce Shower Rail With Slim Hand Shower


Nero

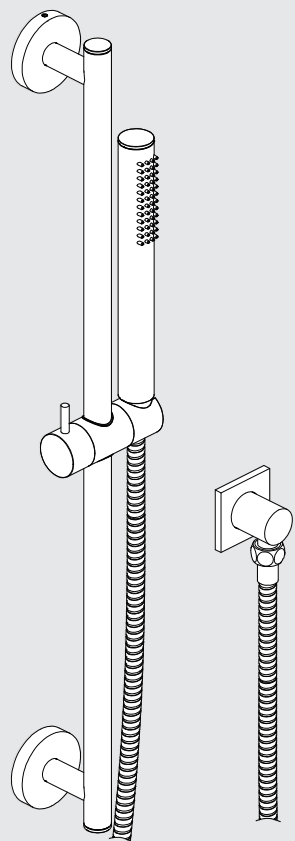

Versions:202506



Drawing

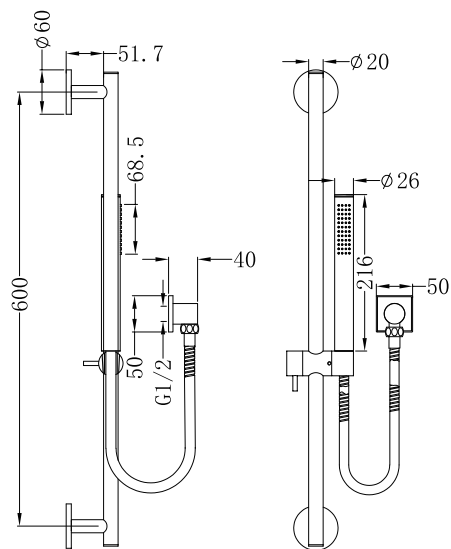

Specifications

Watermark License
WM-060093
Temperature Rating
Min 1°C-Max 75°C
Pressure Rating
Min 150kpa - Max 500kpa

Packaging Includes

- 1x Handle Shower (Built- In Check Valve)
- 1x Shower Hose
- 1x Elbow
- 1x Shower Rail

Finish & SKU


Chrome
NR311CH

*Dimensions are nominal measurements only.





use Teflon tape


1.Put Teflon tape on outlet thread.

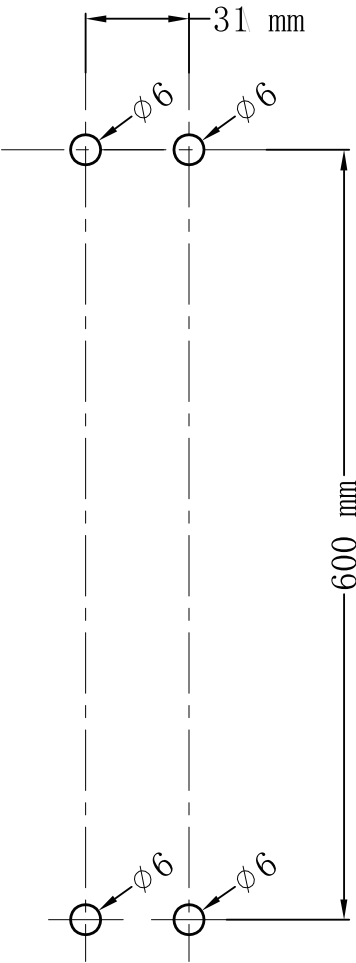


3.Drill fours holes according to above picture.

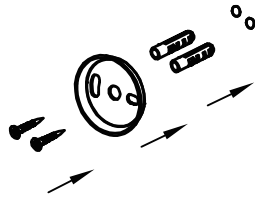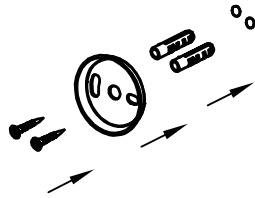


4.Make expansion plug into four holes and make bracket into holes by tapping screw.

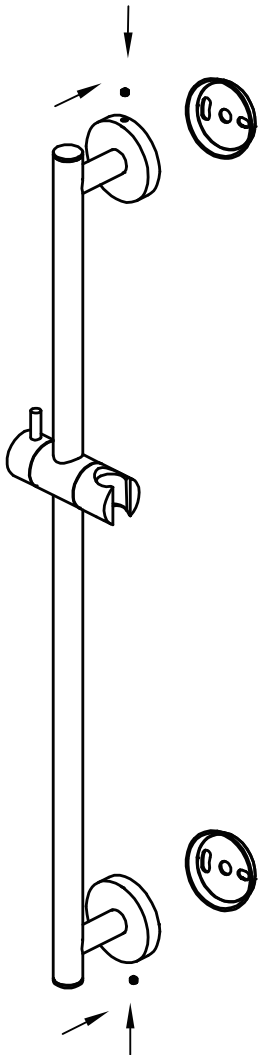

5.Install shower rail onto brackets, tighten two grub screws by hex wrench.

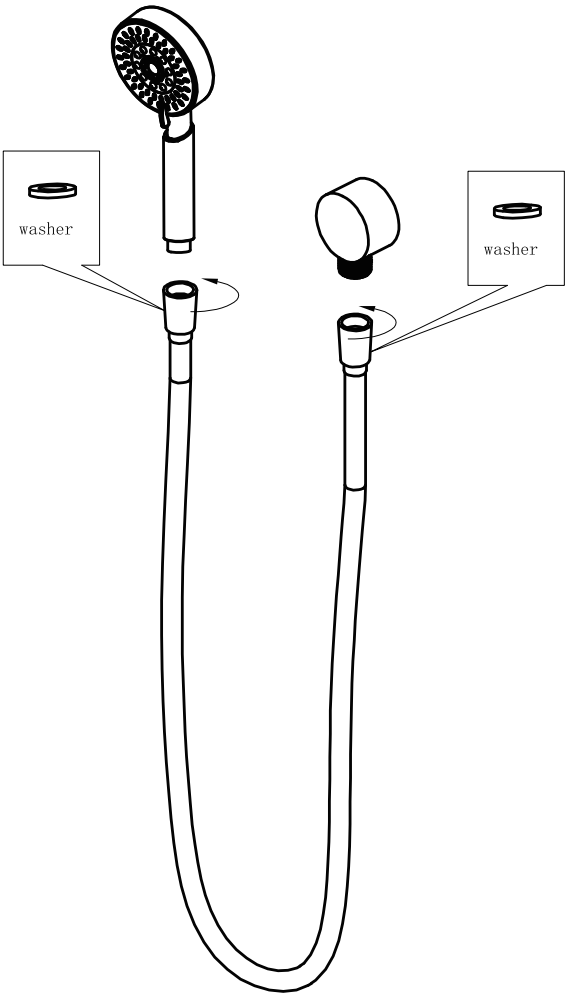

6.Connect hand shower and elbow by shower hose.
(Notes: there are two washers in shower hose.)

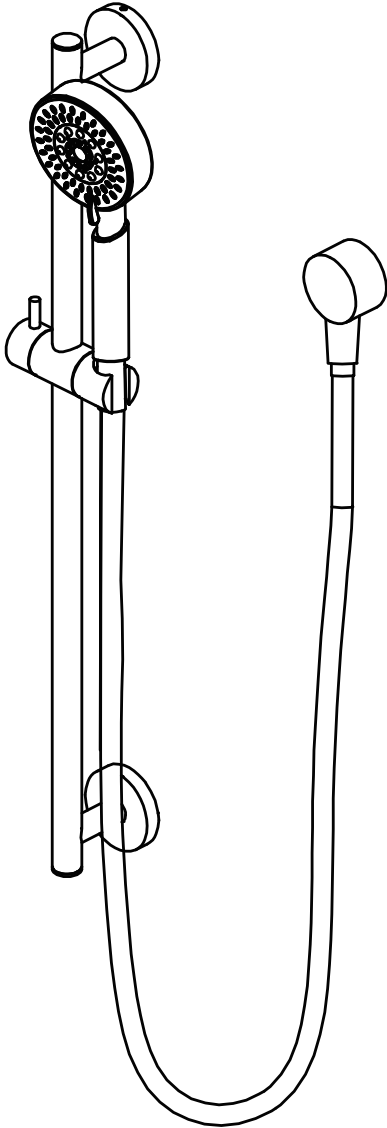

8.Test and check for leaks.

Nero

