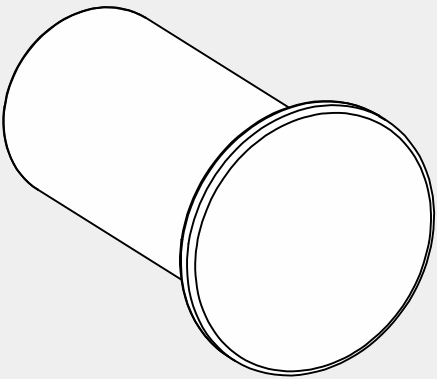


# Mecca

## Robe Hook Slim

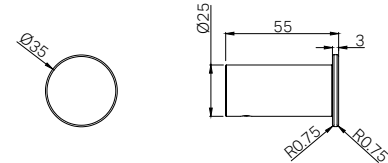
Nero



Version:202605



### Drawing



### Features

- **Durable Stainless Steel** – Rust-resistant and long-lasting.
- **Double Screw Mounting Bracket** – Secure and stable installation.
- **Minimalist Design** – Sleek and modern for any space.

### Packaging Includes

1x Robe Hook  
1x Fixing Kit

### Finish & SKU

|                                                                                                                       |                                                                                                                               |                                                                                                                        |
|-----------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|
|  <b>Chrome</b><br>NR1982bCH        |  <b>Gun Metal</b><br>NR1982bGM             |  <b>Brushed Bronze</b><br>NR1982bBZ |
|  <b>Matte Black</b><br>NR1982bMB   |  <b>Brushed Gold</b><br>NR1982bBG          |  <b>Matte White</b><br>NR1982bMW    |
|  <b>Antique Brass</b><br>NR1982bAN |  <b>Tumbled Antique Brass</b><br>NR1982bTA |  <b>Brushed Nickel</b><br>NR1982bBN |
|  <b>Rome Bronze</b><br>NR1982bRB   |                                                                                                                               |                                                                                                                        |

\*Dimensions are nominal measurements only.

# Installation Instruction

## GENERAL INSTRUCTIONS AND WARNINGS

- Before installation, make sure the wall surface is clean and dry to ensure a secure attachment.
- When tightening screws, do not apply excessive force to prevent damage to the wall or the fixtures.
- Use the correct tools: a drill with a 6mm bit, screwdriver, and level.
- Wear appropriate safety gear, such as gloves and safety glasses, to protect yourself during installation.
- Before drilling, check the wall for any hidden pipes or electrical wires to avoid accidental damage.
- Ensure all measurements are accurate before drilling holes to prevent misalignment of the accessories.

## MAINTENANCE AND CARE

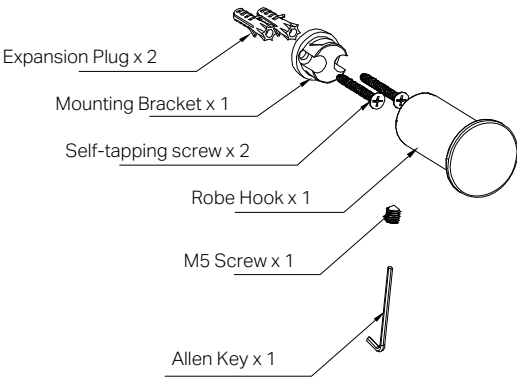
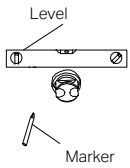
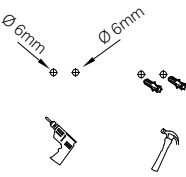
- Clean the accessories with a soft, damp cloth. Avoid using abrasive cleaners, which can damage the finish.

## INSTALLATION INSTRUCTIONS

Note: Before installation, make sure to prepare all the tools you will need.  
A level, a drill bit, a hammer, a Phillips screwdriver, a marker

### Installation Guide

### Parts Names

|                                                                                                                                                                                                                                                                                                |                                                                                                                                                                                                                                        |  |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
|  <p><b>Step 01</b><br/>Unscrew the grub screw from the robe hook with an allen key.</p>                                                                                                                       |  <p>Expansion Plug x 2</p> <p>Mounting Bracket x 1</p> <p>Self-tapping screw x 2</p> <p>Robe Hook x 1</p> <p>M5 Screw x 1</p> <p>Allen Key x 1</p>   |  |
|  <p><b>Step 02</b><br/>Place the mounting bracket horizontally at the required position using a level. Mark the positions of mounting holes.<br/>Note: the two holes should be horizontal, not vertical.</p> |  <p><b>Step 04</b><br/>Secure the mounting bracket with self-tapping screws using a Phillips screwdriver.</p>                                       |  |
|  <p><b>Step 03</b><br/>Use a power drill with a <math>\phi 6\text{mm}</math> drill bit to drill mounting holes at the marked position, and tap the expansion plugs into the holes using a hammer.</p>       |  <p><b>Step 05</b><br/>Push the robe hook onto the mounting bracket and fix it with M5 screw using allen key.<br/>The installation is complete.</p> |  |