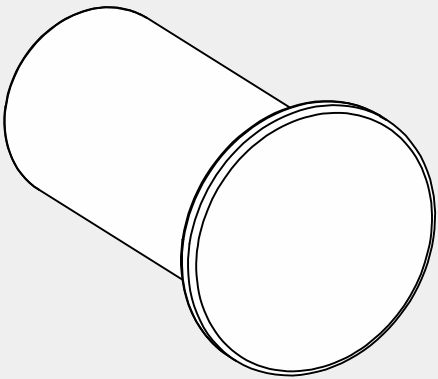


Mecca

Robe Hook Slim

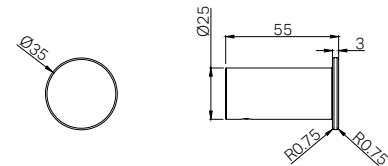
Nero



Version:202605



Drawing



Features

- **Durable Stainless Steel** – Rust-resistant and long-lasting.
- **Double Screw Mounting Bracket** – Secure and stable installation.
- **Minimalist Design** – Sleek and modern for any space.

Packaging Includes

1x Robe Hook
1x Fixing Kit

Finish & SKU

• **Chrome**
NR1982bCH

• **Matte Black**
NR1982bMB

• **Antique Brass**
NR1982bAN

• **Rome Bronze**
NR1982bRB

• **Gun Metal**
NR1982bGM

• **Brushed Gold**
NR1982bBG

• **Tumbled Antique Brass**
NR1982bTA

• **Brushed Bronze**
NR1982bBZ

• **Matte White**
NR1982bMW

• **Brushed Nickel**
NR1982bBN

*Dimensions are nominal measurements only.

Installation Instruction

GENERAL INSTRUCTIONS AND WARNINGS

- Before installation, make sure the wall surface is clean and dry to ensure a secure attachment.
- When tightening screws, do not apply excessive force to prevent damage to the wall or the fixtures.
- Use the correct tools: a drill with a 6mm bit, screwdriver, and level.
- Wear appropriate safety gear, such as gloves and safety glasses, to protect yourself during installation.
- Before drilling, check the wall for any hidden pipes or electrical wires to avoid accidental damage.
- Ensure all measurements are accurate before drilling holes to prevent misalignment of the accessories.

MAINTENANCE AND CARE

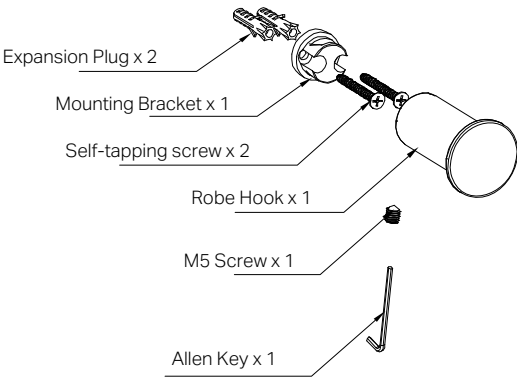
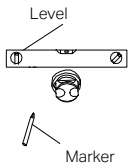
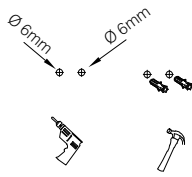
- Clean the accessories with a soft, damp cloth. Avoid using abrasive cleaners, which can damage the finish.

INSTALLATION INSTRUCTIONS

Note: Before installation, make sure to prepare all the tools you will need.
A level, a drill bit, a hammer, a Phillips screwdriver, a marker

Installation Guide

Parts Names

 Step 01 Unscrew the grub screw from the robe hook with an allen key.	 Expansion Plug x 2 Mounting Bracket x 1 Self-tapping screw x 2 Robe Hook x 1 M5 Screw x 1 Allen Key x 1	
 Step 02 Place the mounting bracket horizontally at the required position using a level. Mark the positions of mounting holes. Note: the two holes should be horizontal, not vertical.	 Step 03 Use a power drill with a $\phi 6\text{mm}$ drill bit to drill mounting holes at the marked position, and tap the expansion plugs into the holes using a hammer.	
 Step 04 Secure the mounting bracket with self-tapping screws using a Phillips screwdriver.	 Step 05 Push the robe hook onto the mounting bracket and fix it with M5 screw using allen key. The installation is complete.	