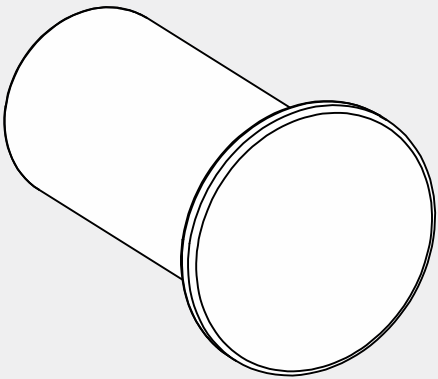


Mecca

Robe Hook Slim

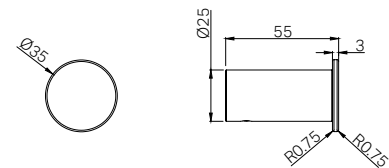
Nero



Version:202605



Drawing



Features

- **Durable Stainless Steel** – Rust-resistant and long-lasting.
- **Double Screw Mounting Bracket** – Secure and stable installation.
- **Minimalist Design** – Sleek and modern for any space.

Packaging Includes

1x Robe Hook
1x Fixing Kit

Finish & SKU

 Chrome NR1982bCH	 Gun Metal NR1982bGM	 Brushed Bronze NR1982bBZ
 Matte Black NR1982bMB	 Brushed Gold NR1982bBG	 Matte White NR1982bMW
 Antique Brass NR1982bAN	 Tumbled Antique Brass NR1982bTA	 Brushed Nickel NR1982bBN
 Rome Bronze NR1982bRB		

*Dimensions are nominal measurements only.

Installation Instruction

GENERAL INSTRUCTIONS AND WARNINGS

- Before installation, make sure the wall surface is clean and dry to ensure a secure attachment.
- When tightening screws, do not apply excessive force to prevent damage to the wall or the fixtures.
- Use the correct tools: a drill with a 6mm bit, screwdriver, and level.
- Wear appropriate safety gear, such as gloves and safety glasses, to protect yourself during installation.
- Before drilling, check the wall for any hidden pipes or electrical wires to avoid accidental damage.
- Ensure all measurements are accurate before drilling holes to prevent misalignment of the accessories.

MAINTENANCE AND CARE

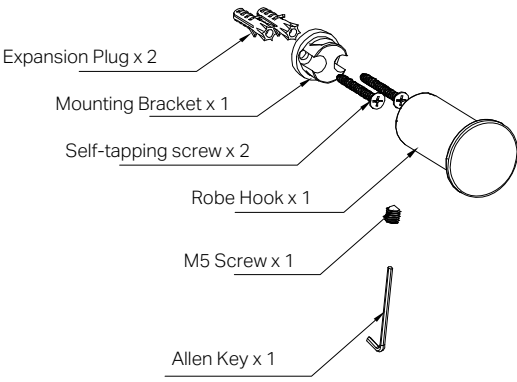
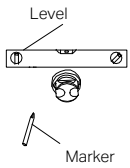
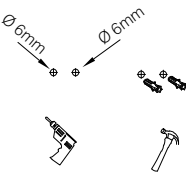
- Clean the accessories with a soft, damp cloth. Avoid using abrasive cleaners, which can damage the finish.

INSTALLATION INSTRUCTIONS

Note: Before installation, make sure to prepare all the tools you will need.
A level, a drill bit, a hammer, a Phillips screwdriver, a marker

Installation Guide

Parts Names

 <p>Step 01 Unscrew the grub screw from the robe hook with an allen key.</p>	 <p>Expansion Plug x 2</p> <p>Mounting Bracket x 1</p> <p>Self-tapping screw x 2</p> <p>Robe Hook x 1</p> <p>M5 Screw x 1</p> <p>Allen Key x 1</p>	
 <p>Step 02 Place the mounting bracket horizontally at the required position using a level. Mark the positions of mounting holes. Note: the two holes should be horizontal, not vertical.</p>	 <p>Step 04 Secure the mounting bracket with self-tapping screws using a Phillips screwdriver.</p>	
 <p>Step 03 Use a power drill with a $\phi 6\text{mm}$ drill bit to drill mounting holes at the marked position, and tap the expansion plugs into the holes using a hammer.</p>	 <p>Step 05 Push the robe hook onto the mounting bracket and fix it with M5 screw using allen key. The installation is complete.</p>	