


UNDERCOUNTER BASIN INSTALLATION GUIDE

1. Measure internal basin dimensions and cut to allow a 5mm overhang

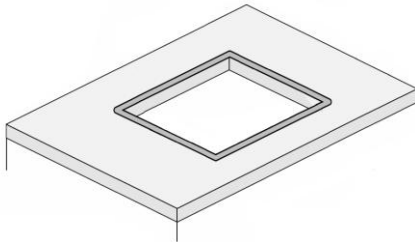

2. Use an approved flexible water tight adhesive to adhere the basin to the bench top. DO NOT USE EPOXY OR ANY OTHER SOLID ADHESIVE AS THIS MAY CRACK THE BASIN OVERTIME AND WILL VOID THE WARRANTY.

