

DO-IT-YOURSELF (DIY) INSTRUCTIONS
FOR INSTALLATION OF FUTURA
DEADBOLT OR THE REPLACEMENT
OF EXISTING LOCKS

TOOLS REQUIRED FOR REMODELING OR NEW CONSTRUCTION:

- 1 phillips head screwdriver
- 1 2" hole saw
- 1 1" drill
- 1 chisel

TOOLS REQUIRED FOR REPLACEMENT:


- 1 phillips head screwdriver

FOLLOW STEPS 6.7.8.9.10 FOR DO-IT-YOURSELF REPLACEMENT,
FOLLOWING REMOVAL OF EXISTING LOCK.

REPLACING EXISTING DEADLOCKS:

Before beginning, measure from center of lock to door edge in order to check length of backset on existing lock to that of new lock. The backset length is stated clearly on front of package. If backset size is the same, continue; otherwise, you'll have to replace lock with proper size lock and backset.


INSTRUCTION FOR ADJUSTABLE DEADBOLT

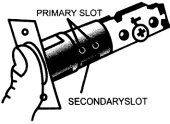


TO CHANGE 2-3/8" TO 2-3/4"
Thumb press the end of the latch, with the Adjustable Slot facing toward yourself, turn the body of the latch clockwise and make sure that **THE PIN DROP INTO THE SECONDARY SLOT, THEN PULL TO THE SIDE**. Twist the body of the latch counterclockwise **TILL THE PIN DROP INTO THE UPPER PRIMARY SLOT**.

60mm(2-3/8")
70mm(2-3/4")

1. MARK DOOR

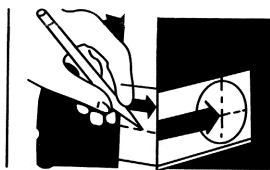


A. Fold and apply template to high edge of door bevel and mark center of door edge as indicated on template at the desired height from the floor.

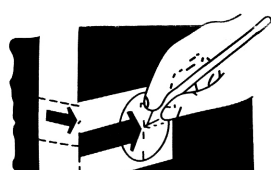


B. Mark center hole on door face through guide on template. For either 2 3/8", 2 3/4" backset.

2. DRILL HOLES



A. Drill thru door face as marked for lockset: It is recommended that holes be drilled from both sides to prevent splitting. Hole size is 2" for standard installations.



B. Drill 1" hole in center of door edge thru to 2" hole for latch.


3. INSTALL LATCH



A. Insert latch in hole, keeping it parallel to face of door. Mark outline and remove latch.




B. Chisel 1/8" deep or until latch face is flush with door edge.

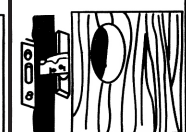

C. Install deadbolt latch in "up" position into hole as shown on latch. Insert and tighten screws.

4. INSTALL STRIKE

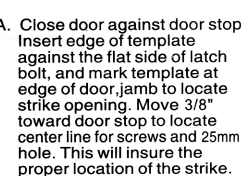


A. Close door against door stop. Insert edge of template against the flat side of latch bolt, and mark template at edge of door jamb to locate strike opening. Move 3/8" toward door stop to locate center line for screws and 25mm hole. This will insure the proper location of the strike.



B. Chisel 1/8" deep for strike matching 1" hole in door jamb. Insert and tighten screws.


Name of lock component

5.

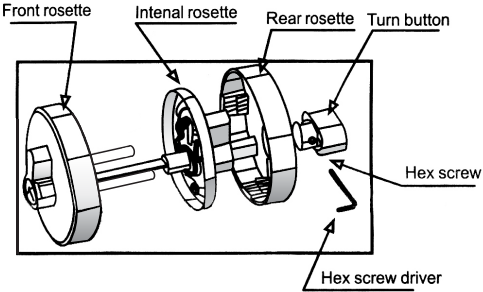


Front rosette
Internal rosette
Rear rosette
Turn button
Hex screw
Hex screw driver

6.

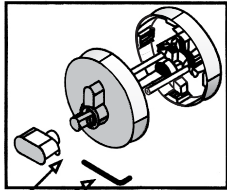

First step: take off the hex screw by hex screw driver, and take away the turn button


7.

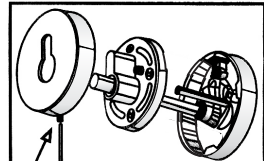

Second step: Take off the hex screw where is located bottom of rear rosette by hex screw driver, after that take away rear rosette.


8.

A.

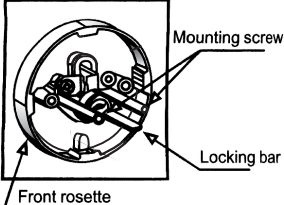


Mounting screw
Locking bar
Front rosette

B.

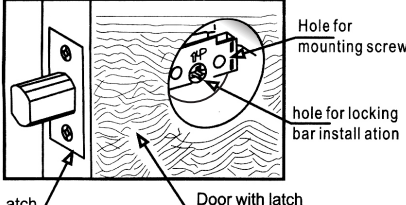


Hole for mounting screw
hole for locking bar install ation
Latch
Door with latch

C.

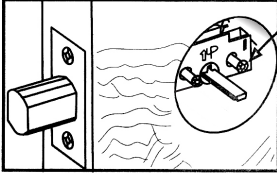

Third step: put front rosette and latch together through the hole for mounting screw


9.

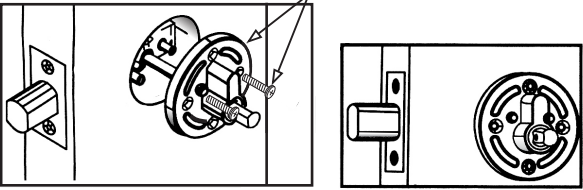

Fourth step: According correct direction to install the internal rosette and make it stable by machine screw


10.

A.

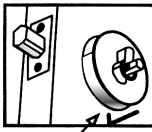


Fifth step: According correct direction to intall rear rosette and make it stable by hex screw.

B.

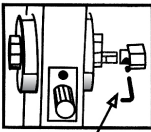

Sixth step: install the turn button and make it stable by hex screw.

C.

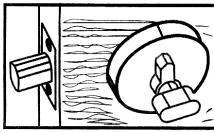


Installation completed

FUTURA SLIMLINE
DEADBOLT CUTOUT
TEMPLATE

To suit product Code: 9060/9061



44mm hole size is recommended.
Hole must not be wider than 44mm

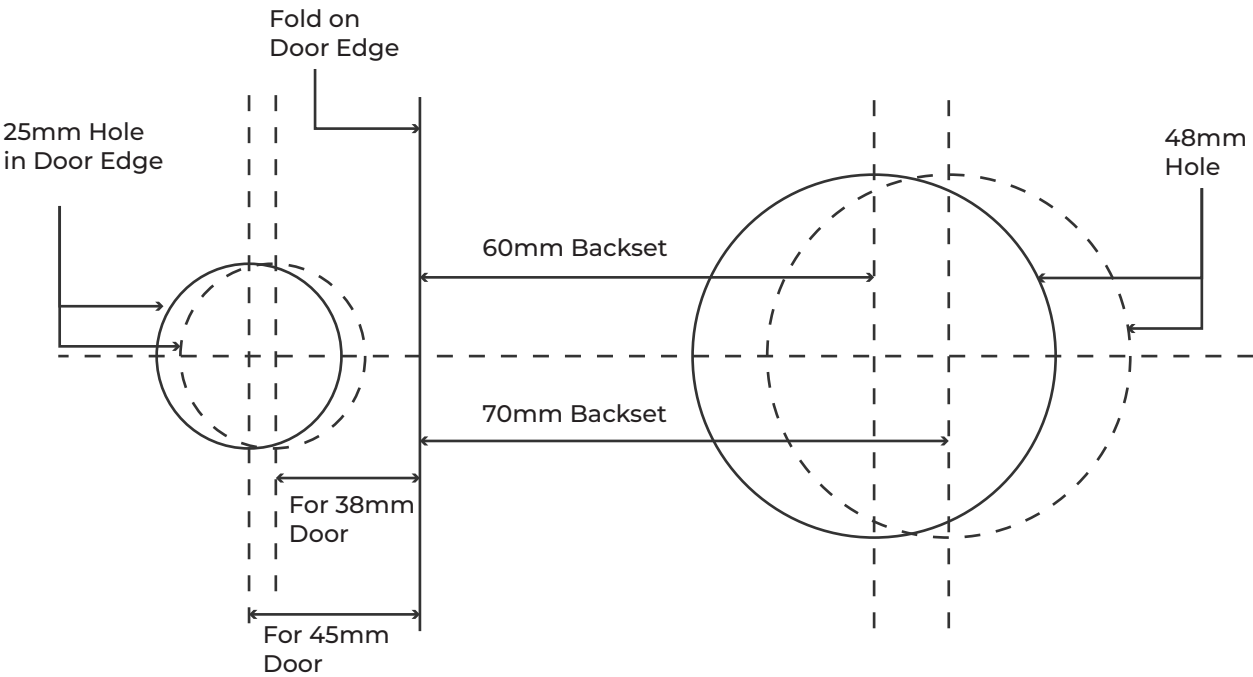

Print at 100% scale

WARNING: ENSURE TEMPLATE IS PRINTED TO SCALE