

MORE THAT JUST QUALITY — AN EXPERIENCE™



ASTRON
OXFORD
DUMMY SET
(NON-HANDED)

Component: 1x Lever (Single) & 1x 8mm Spindle



Description:


- 15-Year Warranty: Futura Door Furniture is covered for 15 years internally and 10 years externally. If defective, Zanda will replace it for free.
- Ergonomic design for user comfort
- Modern European design
- Ideal for elderly
- Backsets are 60mm. Specify if otherwise.
- Suit domestic and light commercial application
- Suits 25mm hole size

Available Set:

- Lever Set
- Passage Set
- Separate Privacy Set
- Integrated Privacy Set
- Dummy Set
- Entrance Set

Available Finish:

- Brushed Nickel / Chrome Plate
- Graphite Nickel
- Matt Black
- Satin Brass

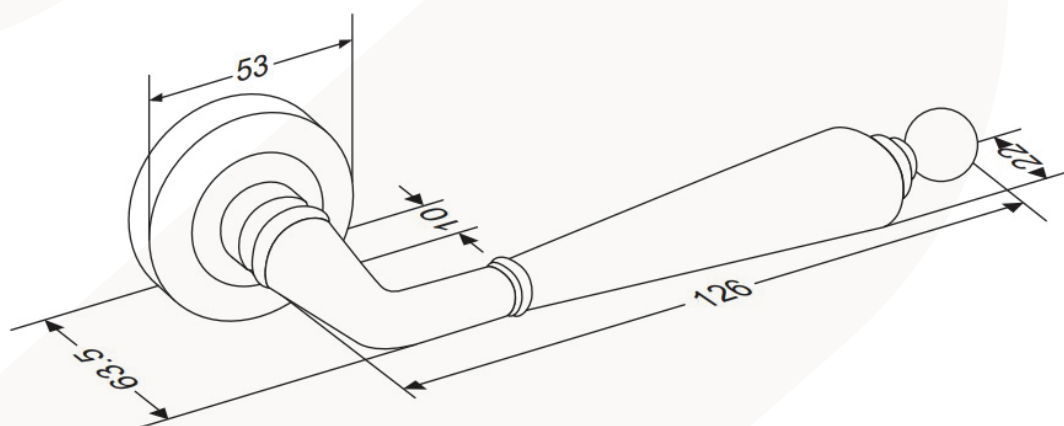

Note: Measurements are in mm

1 300 926 321

sales@zanda.com.au

www.zanda.com.au


MORE THAT JUST QUALITY — AN EXPERIENCE™

ASTRON
OXFORD
DUMMY SET
(NON-HANDED)

Component: 1x Lever (Single) & 1x 8mm Spindle


The 8mm dummy fix mounts are designed to be recessed and screwed onto the door face, with the handle slipping over the top. The handle base plate is then screwed to, or bolted through the door

Note: It is important to ensure solid fixing is available for handle and dummy mount screws (especially for hollow core doors).

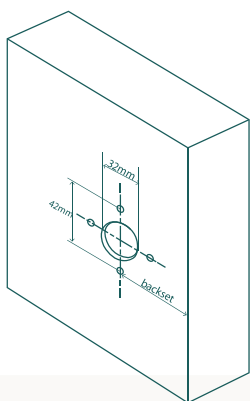


1. Establish the height and position for the handle on the door.

2. Drill a 32mm diameter recess on the face of the door to a depth of 4mm. Match the backset measurement of the passage doors throughout your home. Mark and drill four pilot holes vertically and horizontally, at 21mm from the centre of the recess.

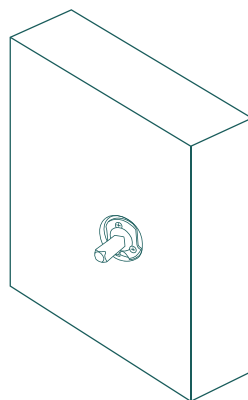


3. Fit the dummy spindle by drilling and fitting the three wood screws provided. Ensure the grooved side of the spindle is aligned with the grub-screw on the handle.

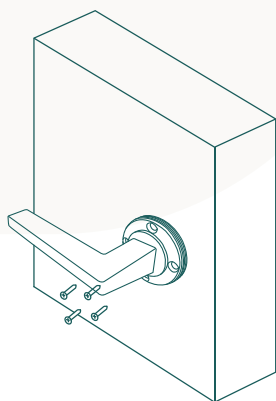

4. Slide the handle onto the spindle ensuring that it sits straight on the door face.

5. Install the handle by screwing the base plate to the door with the wood screws provided.

Note: In some cases where through door bolts are provided, the door can be drilled both sides to accept the through screws.

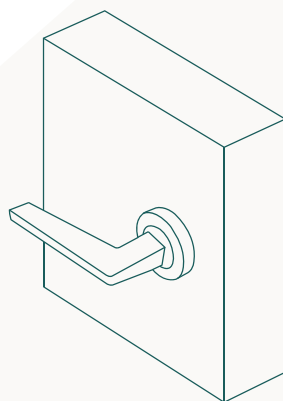

6. Screw the rose cover onto the handle and tighten the grub-screw on the side of the lever onto the spindle.

Note: The grub-screws may need a re-tighten after a bedding-in period.

We recommend medium strength thread-lock to be used, Windsor Code: 1276