
ZANDA
COMMERCIAL HARDWARE

# Data Sheet

**Product Code: 9346**

"MORE THAN JUST QUALITY — **AN EXPERIENCE**"

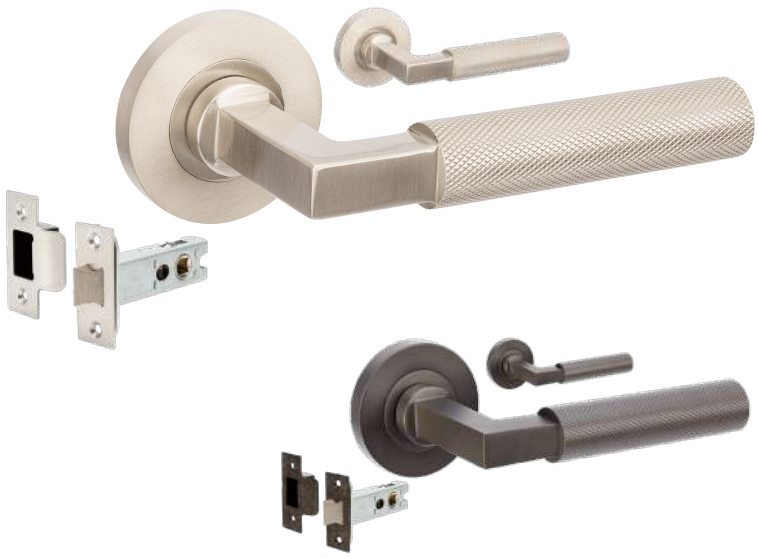

VISCA

# ZURICH KNURLED

## PASSAGE SET

Component: 1 Pair Lever & 1x 1172 Latch





## Description:


- Designed by esteemed European creators
- Crafted in Italy with expert precision
- Made from solid brass or stainless steel
- Available in a variety of premium finishes
- Lifetime warranty for long-term assurance
- Corrosion-resistant sacribond & micronized finishes
- Heavy-duty construction for durability
- Engineered for smooth and reliable performance
- Blends craftsmanship with cutting-edge innovation
- Knurled design for bold grip and style.

## Available Set:

- Lever Set
- Passage Set
- Privacy Set
- Dummy Set
- Entrance Set

## Available Finish:

- Brushed Nickel
- Graphite Nickel
- Satin Brass

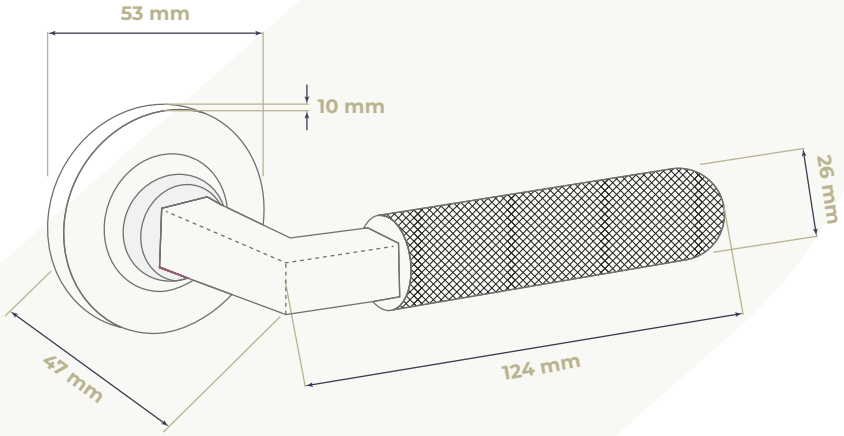


*Note: Measurements are in mm*

1 300 926 321
sales@zanda.com.au
www.zanda.com.au

ZANDA
COMMERCIAL HARDWARE

# Data Sheet

**Product Code: 9346**

"MORE THAN JUST QUALITY — **AN EXPERIENCE**"

VISCA

# ZURICH KNURLED


PASSAGE SET

Component: 1 Pair Lever & 1x 1172 Latch

*Print: Actual size on A4 paper*


## Step 1. Door Preparation

- Fold the supplied template and position template on door edge.
- Mark centre of 50mm hole on both sides of door.
- Mark horizontal centre-line of 25mm hole using template, then mark centre of door thickness.
- Drill 50mm (or 54mm) hole through door face. Drill hole from both sides to avoid splintering.
- Drill 25mm hole into the edge of the door, central to the door thickness. Ensure the hole is drilled squarely.

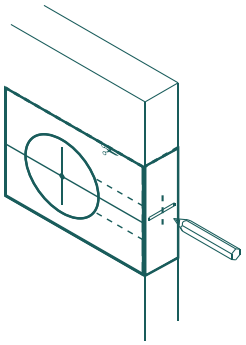


## Step 2. Latch Installation

- Place faceplate on latch and insert into hole, then mark around the faceplate.
- Chisel marked rectangular section until latch with faceplate is flush with door edge.
- Insert latch into hole, ensuring the curve on the latchbolt is positioned towards the direction of door closure.
- Position faceplate over bolt.
- Pre-drill and fasten latch and faceplate to door with wood screws provided (#6 x19mm).

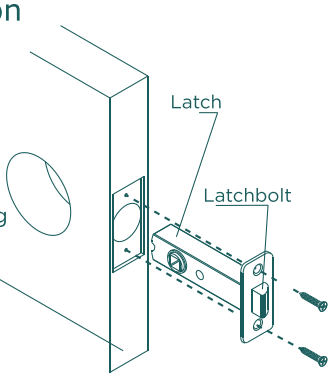


## Step 3. Spindle Installation

- Slide spindle into square opening in latch.

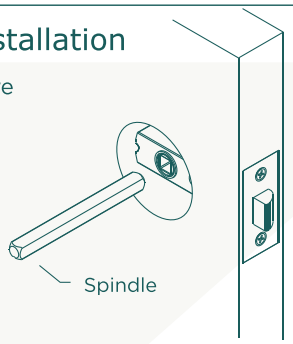


## Step 4. Screw Selection

- Measure door thickness and select correct mounting screws as per table below:


| DOOR THICKNESS | MOUNTING SCREW |
|---|---|
| 32 - 38mm | M4 x 50mm LONG |
| 38 - 45mm | M4 x 58mm LONG |

## Step 5. Lever Installation

- Remove both Rosette-Caps.
- Place one lever assembly onto the spindle.
- Place the other lever assembly onto the other end of the spindle.
- Fasten both lever assemblies onto door with mounting screws selected in STEP 4.
- Ensure levers sit horizontally on the door before tightening both screws.

MOUNTING SCREWS CAN BE INSTALLED AS
VERTICAL FIX OR HORIZONTAL FIX

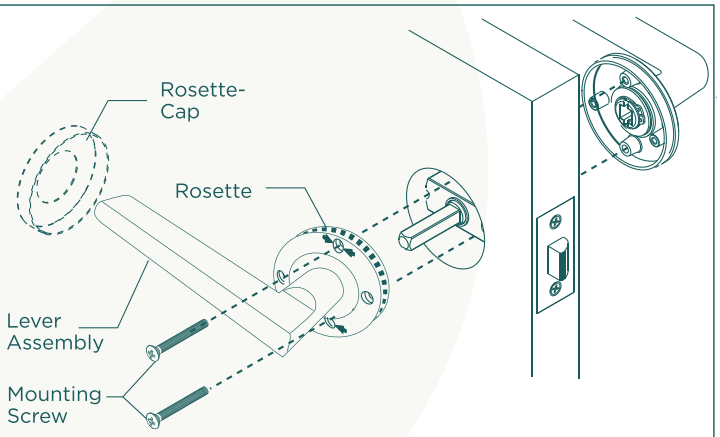


*Note: Measurements are in mm*

1 300 926 321
sales@zanda.com.au
www.zanda.com.au

ZANDA
COMMERCIAL HARDWARE

# Data Sheet

**Product Code: 9346**

"MORE THAN JUST QUALITY — **AN EXPERIENCE**"

VISCA


# ZURICH KNURLED

PASSAGE SET


Component: 1 Pair Lever & 1x 1172 Latch

## Step 6. Rosette-Cap Installation

- Orientate Notch on Rosette-Cap so that it faces the bottom of the door.
- Push Rosette-Cap onto the rosette until the cap is flush with the door face.
- Repeat for opposite side of the door.

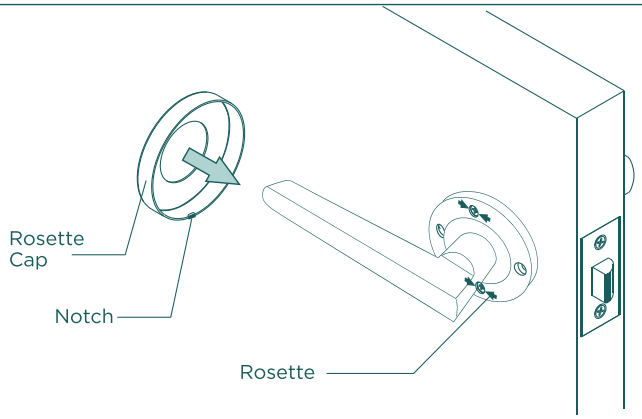



## Step 7. Strike Plate Installation

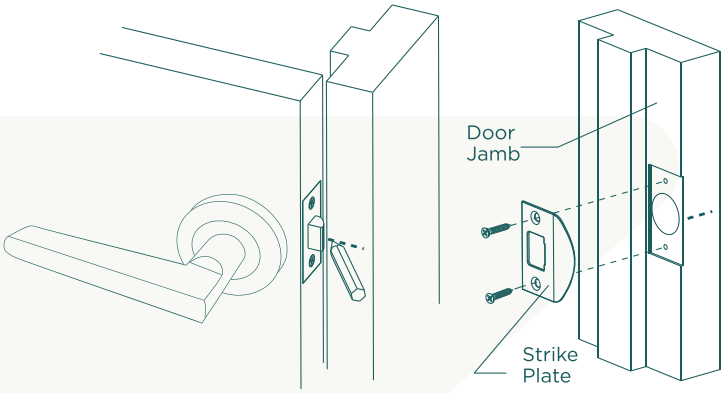


- Gently close the door until latchbolt rests on door jamb. Mark centre of latchbolt on door jamb, this mark can be used to position strike plate.
- Mark and drill 25mm hole inside the jamb to a depth of 12mm .
- Position the strike plate and mark around. Chisel recess until strike plate sits flush with jamb face.
- Fasten to door with 2 wood screw (#6x19mm) supplied.

NOTE : Carefully follow the installation instructions. Do not over-tighten screws.
Use of power drill for installing screws is not recommended.
Remove lock completely from door before painting the door.

## DOOR TEMPLATE

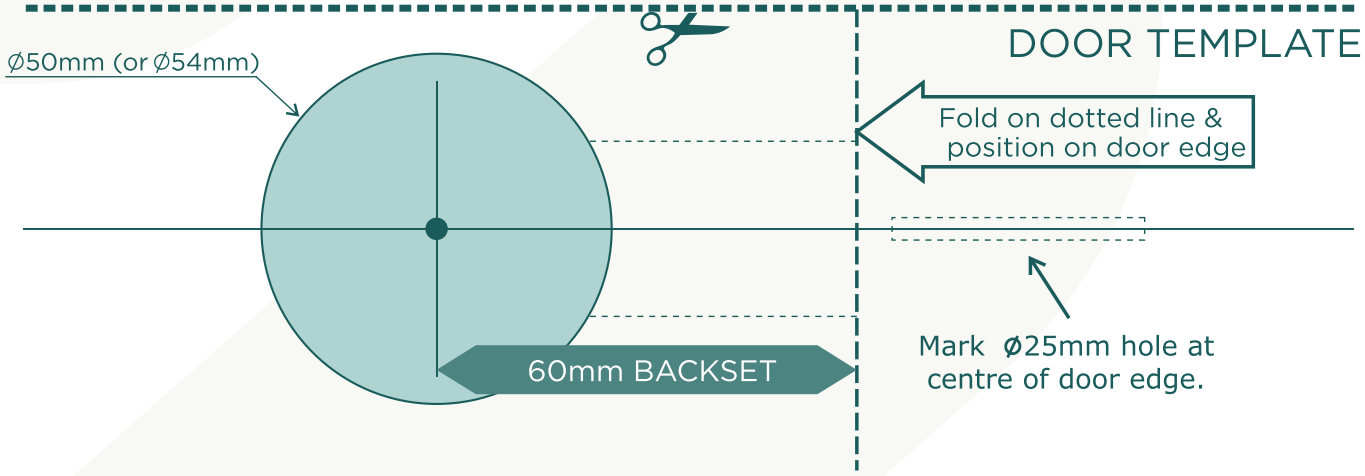


*Note: Measurements are in mm*

1 300 926 321
sales@zanda.com.au
www.zanda.com.au