




ALLEGRI.

BY KALCO LIGHTING™

Assembly & Installation Instructions for:

026220 6-Light wall Sconce



Customer Service :(702)361-4345,(800)525-2655,customer.service@kalco.com

WARNING - TO REDUCE THE RISK OF FIRE OR INJURY:

- 1.If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit .More than one person may be necessary to install fixture ,make sure you have enough qualified help.
- 2.Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.
- 3.DO NOT install bulb which exceeds the maximum wattage specified on the socket label.

Fixture Assembly



Step 1. Install cross bar as shown with outlet box original screws. Make sure cross bar studs points away from wall.

Step 2. Get fixture frame few inches close to wall and make wire connections as follows: Refer to wiring diagram. Splice the ribbed side of fixture cord to the white supply wire from outlet box with wire connector. Splice the smooth side of the fixture cord to black supply wire from outlet box with wire connector

Step 3. Carefully tuck in all wires Attach the back plate with the mounting screw on the crossbar. Secure fixture with decorative Nuts

Step 4. Install light bulbs and test wire connections.

Proceed to install crystal strands as shown in page 2.

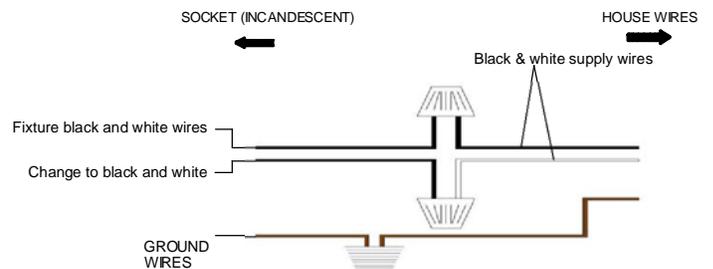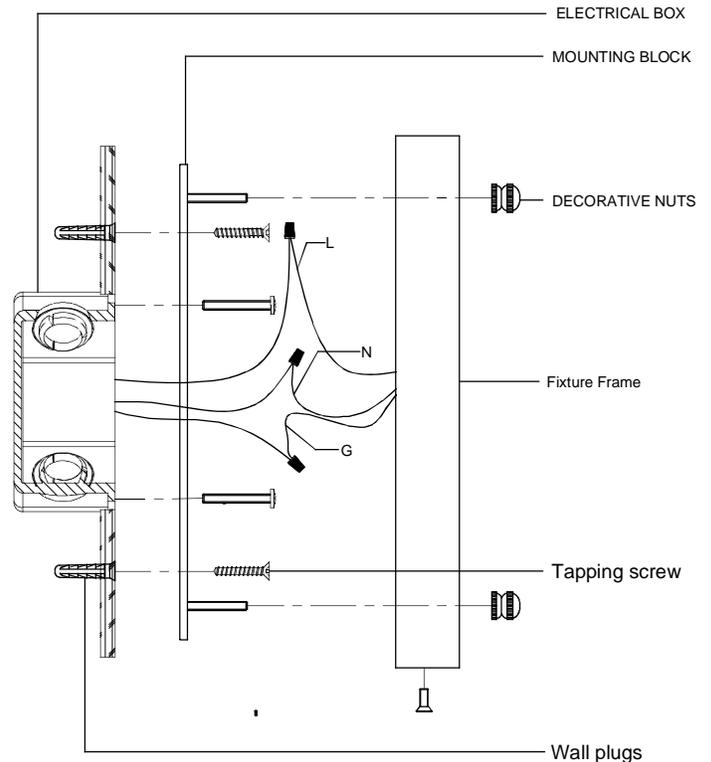



ALLEGRI.

BY KALCO LIGHTING™

Assembly & Installation Instructions for:

026220 6-Light wall Sconce


Customer Service :(702)361-4345,(800)525-2655,customer.service@kalco.com

Fixture crystal Assembly

1. Please Note the 26 (B) crystals comes factory assembled on frame.


2. Install 32 (A) crystals to the side slots of frame. as shown in fig.1

1. Install 32 (A) crystals to the side slots of frame. as shown in fig.1

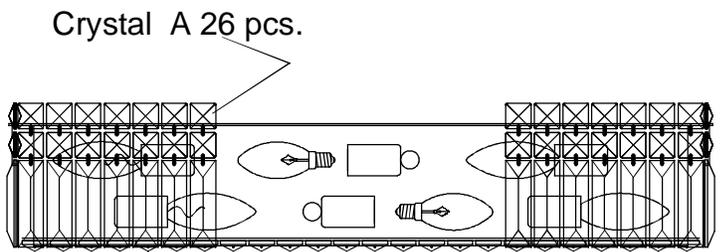

Crystal B 32 pcs.

fig1

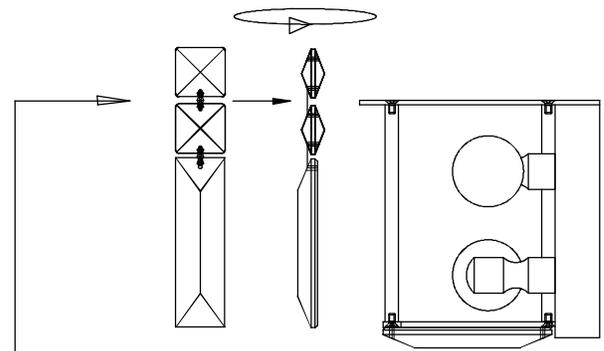

1. Instert crystal to frame slot sideways at this height.

2. Once inside of slot twist and release.