




ALLEGRI.

BY KALCO LIGHTING™

Customer Service : (702)361-4345, (800)525-2655, customer.service@kalco.com

Assembly & Installation Instructions for:
031322 2-Light Wall Sconce

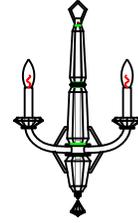

WARNING - TO REDUCE THE RISK OF FIRE OR INJURY:

- 1.If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit. More than one person may be necessary to install fixture, so make sure you have enough qualified help.
- 2.Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.
- 3.DO NOT install bulb which exceeds the maximum wattage specified on the socket label.


Fixture Assembly

Step 1. Complete the mounting and wiring steps before the crystal installation step

Step 2. Assemble crystal bobèche and attach to the lamp body as shown.

Step 3. Install candelabra, do not use bulbs that exceeds 40W

Step 4. Screw part center pipe to part main fixture.
 Connect part washer, slat, crystal column by using loop.
 Connect part washer, cone column, crystal column by using cone nut.
 Connect part candle piper, crystal dish by using main body.
 Screw bulb into lampholder.
 Check the installation.

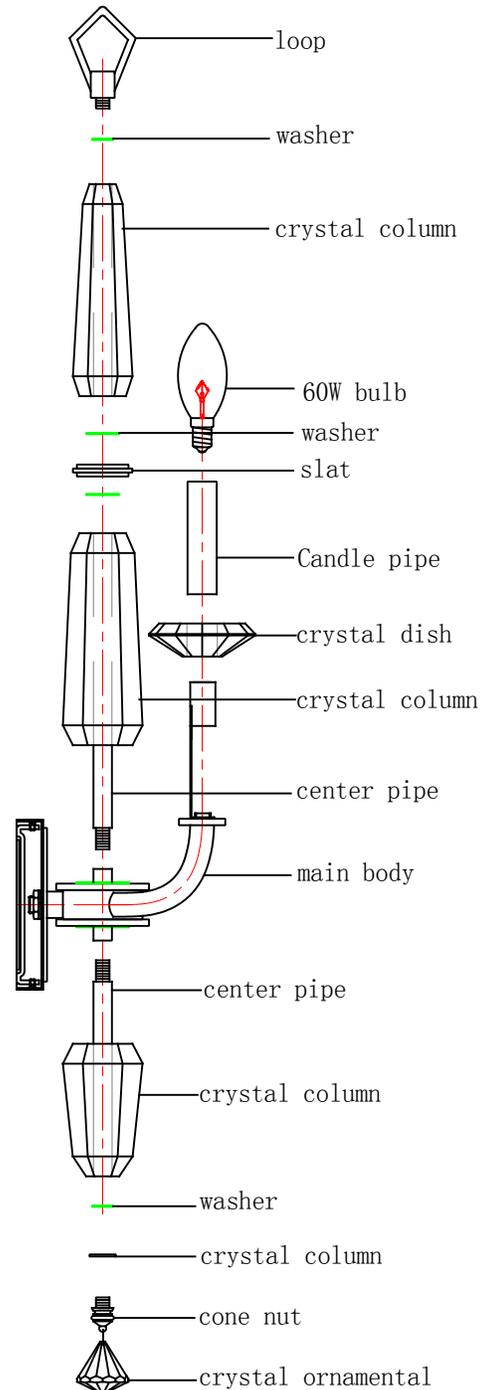



ALLEGRI.

BY KALCO LIGHTING™

Customer Service :(702)361-4345,(800)525-2655,customer.service@kalco.com

Fixture Assembly

Step 5. Fasten 2 screws into mounting plate so that they extend away from wall when mounting plate is installed

Step 6. Attach the mounting plate to the outlet box with screws

Step 7. Refer to wiring diagram. Splice the ribbed side of fixture cord to the white supply wire from outlet box with wire connector. Splice the smooth side of the fixture cord to black supply wire from outlet box with wire connector

Step 8. Carefully tuck in all wires. Attach the back plate with the mounting screw on the crossbar. Secure the fixture with shell knobs.

