




ALLEGRI.

BY KALCO LIGHTING™

Assembly & Installation Instructions for:
031723 6 Light Bath

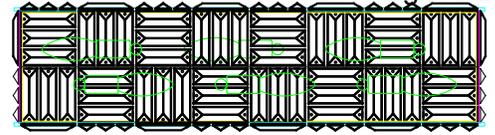

Customer Service : (702)361-4345, (800)525-2655, customer.service@kalco.com

WARNING - TO REDUCE THE RISK OF FIRE OR INJURY:

- 1.If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit. More than one person may be necessary to install fixture, so make sure you have enough qualified help.
- 2.Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.
- 3.DO NOT install bulb which exceeds the maximum wattage specified on the socket label.


Fixture Assembly

Step 1. Complete mounting and wiring steps before crystal installation step

Step 2. Assemble Crystal Tray to the Lamp Body as shown. Align holes in Crystal Tray with holes in fixture and secure Crystal Tray to fixture using headless screw.


Step 3. Fix part Crystal Tray to part Lamp Body by using Flat screw.

Step 4. Install candelabra bulbs. Do not use bulbs that exceeds 60W.

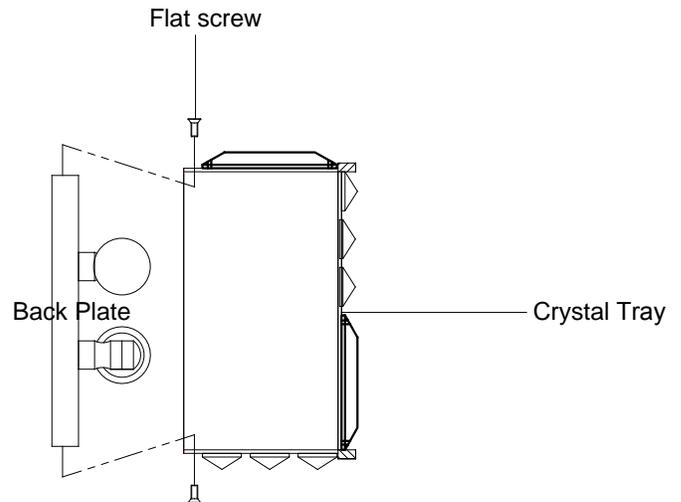

Change Bulbs:

- 1-Remove top and bottom screws while holding the crystal shade
- 2-Release crystal shade from back plate
- 3-Change bulbs and place crystal shade back in place.

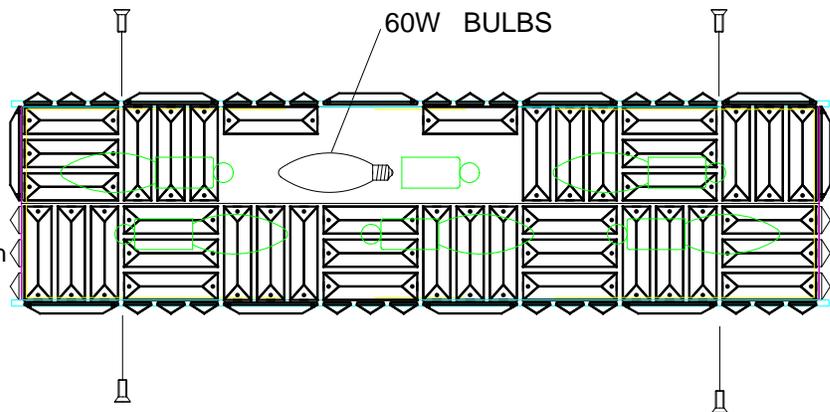



ALLEGRI.

BY KALCO LIGHTING™

Customer Service :(702)361-4345,(800)525-2655,customer.service@kalco.com

Fixture Assembly

Step 5. Fasten 2 screws into mounting plate so that they extend away from wall when mounting plate is installed

Step 6. Attach the mounting plate to the outlet box with screws

Step 7. Refer to wiring diagram. Splice the ribbed side of fixture cord to the white supply wire from outlet box with wire connector. Splice the smooth side of the fixture cord to black supply wire from outlet box with wire connector

Step 8. Carefully tuck in all wires Attach the backplate with the mounting screw on the crossbar. Secure fixture with the provided Flat Screws.

